



USER MANUAL

ZX400/ZX400i



Version : Rev.e
Issue Date : 2020.02.24
P/N : 920-016411-00

CONTENTS

1. Barcode Printer	1
1-1 Box Content	1
1-2 Getting To Know Your Printer	2
2. Printer Setup	5
2-1 Loading the label roll	5
2-2 Loading & Removing the Ribbon	9
2-3 Connecting The Printer To The Host Computer	11
2-4 Wizard CD Standard Installation	12
2-5 Wizard CD Other Choice Installation	15
3. Operation Panel	17
3-1 LED Operation Panel	17
3-2 LCD Interface Introduction	19
3-3 LAN Setting	24
3-4 LCD Password	26
3-5 LCD Interface Function	28
3-6 Label size calibration and Self Test Page	32
3-7 Error Alerts	34
3-8 USB Host	38
4 NetSetting for Ethernet	40
4-1 Installing the NetSetting software	40
4-2 The Interface of NetSetting	42
5 Accessories	49
5-1 Preparation Steps	49
5-2 Installing the Cutter	50
5-2-1 Installing the Guillotine Cutter	50
5-2-2 Installing the Rotary Cutter	53
5-3 Installing The Label Dispenser	56
6 Maintenance and Adjustment	63
6-1 Installing / removing the print head module	63
6-2 Adjusting the print line	64
6-3 Adjusting ribbon tension	65
6-4 Cleaning the thermal print head	66
6-5 Adjusting the balance and print head tension	67
6-6 Ribbon shield settings	68
6-7 Cutter settings	69
6-8 Troubleshooting	70

APPENDIX

ZX400/ZX400i

FCC COMPLIANCE STATEMENT FOR AMERICAN USERS

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 **Subpart B** of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 **Subpart B** of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

TO WHICH THIS DECLARATION RELATES IS IN CONFORMITY WITH THE FOLLOWING STANDARDS

FCC CFR Title 47 Part 15 Subpart B:2015 Class B, CISPR 22:2008 ANSI C63.4: 2014 ICES-003 Issue 6:2016, Class B

IEC 60950-1:2005(Second Edition)+Am1:2009+Am2:2013

UL 60950-1 & CAN/CSA C22.2 No. 60950-1-07, (Information Technology Equipment - Safety - Part 1: General Requirements

EN60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

EN55022:2010+AC:2011 Class B

EN55024:2010+A1:2015

EN55032:2012+AC:2013

IEC61000-4-2 Ed. 2.0:2008

EN61000-3-2:2014

IEC61000-4-3 Ed. 3.2:2010

EN61000-3-3:2013

IEC61000-4-4 Ed. 3.0:2012

AS/NZS CISPR 22:2009+A1:2010

IEC61000-4-5 Ed. 3.0:2014

IEC61000-4-6 Ed. 4.0:2013

IEC61000-4-8 Ed. 2.0:2009

IEC61000-4-11 Ed. 2.0:2004

SAFETY INSTRUCTIONS

Please read the following instructions carefully.

- Keep the equipment away from humidity.
- Before you connect the equipment to the power outlet, please check the voltage of the power source.
- Make sure the printer is off before plugging the power connector into the power jack.
- It is recommended that you connect the printer to a surge protector to prevent possible transient overvoltage damage.
- Be careful not to get liquid on the equipment to avoid electrical shock.
- For safety and warranty reasons, **ONLY** qualified service personnel should open the equipment.
- Do not repair or adjust energized equipment under any circumstances.

CAUTION

- Danger of explosion if battery is incorrectly replaced. Replace only with the equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.
- Only use with designated power supply adapter model.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Specifications are subject to change without notice


1. Barcode Printer

1-1 Box Content


Please check that all of the following items are included with your printer.

(Package content and Logo style may vary per region °)


- Barcode Printer

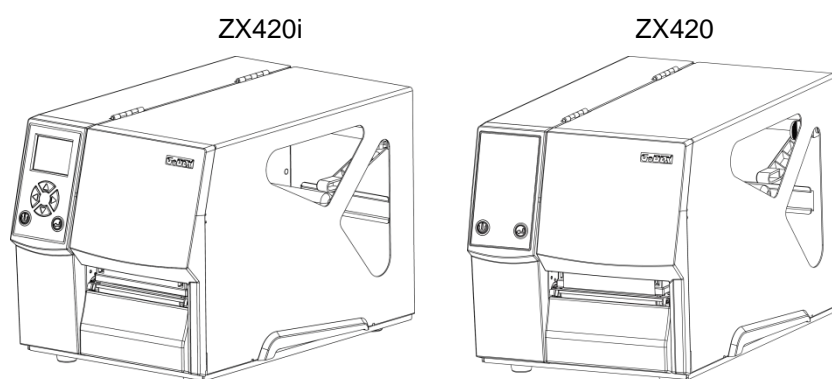


- Label Stock

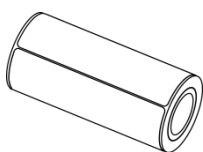


- USB Cable




- Quick Guide

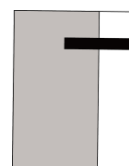


- Ribbon

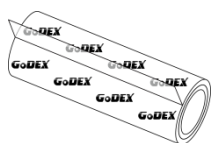


- Power Adapter
Power Cord



- CD
(Including GoLabel software
and user's manual.)

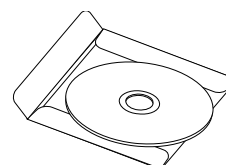


- Empty Ribbon Core

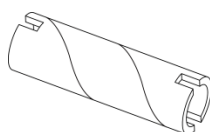


1-2 Getting To Know Your Printer

(ZX420i)

● Front View

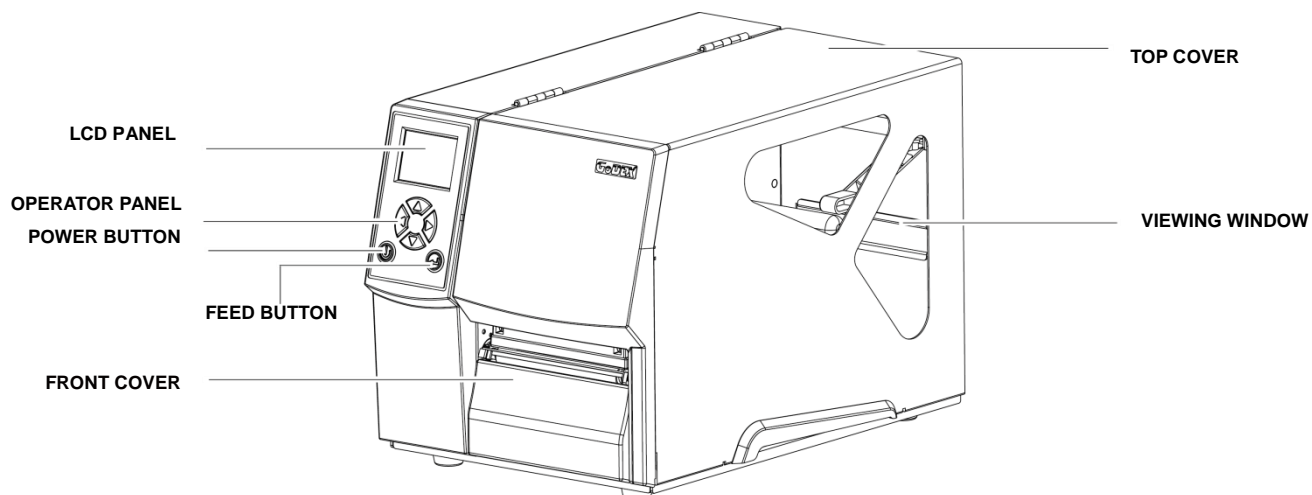


● Rear View

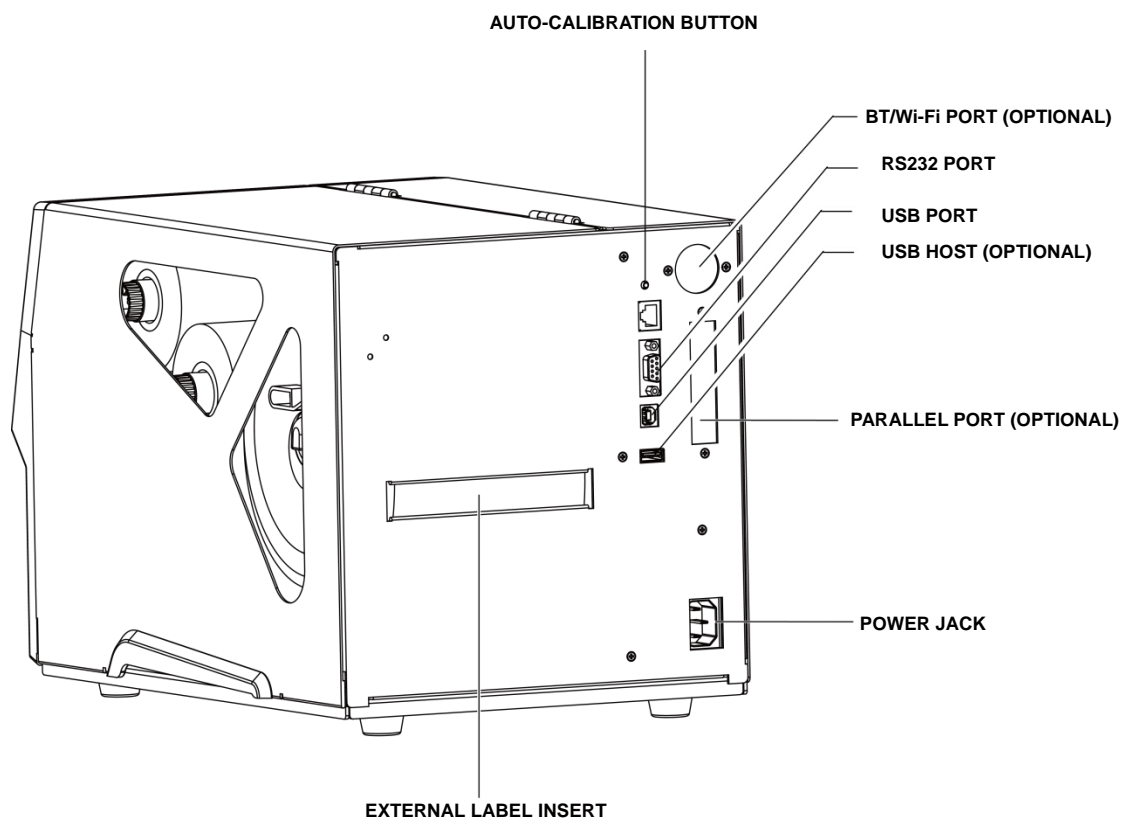


(ZX420)



● Front View

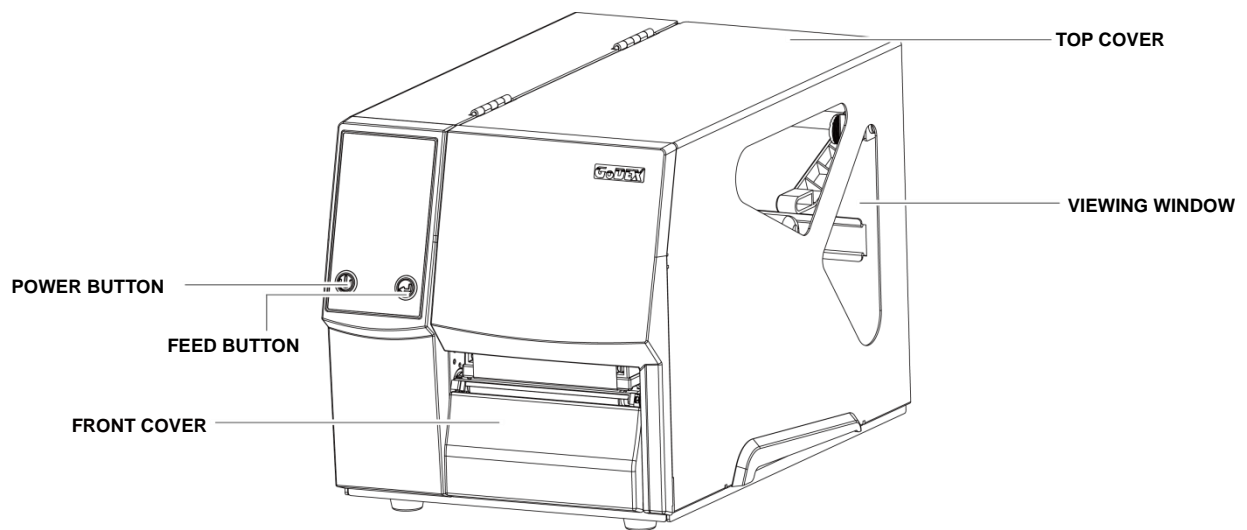

● Rear View

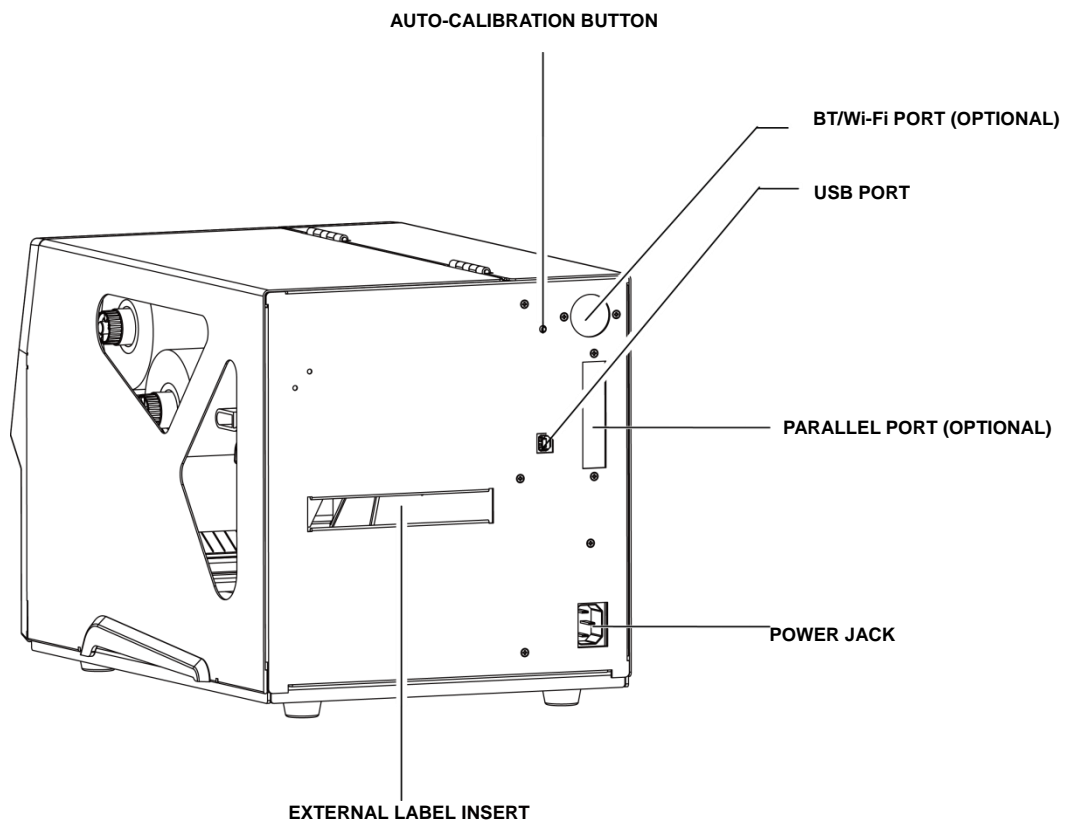

● Open The Printer Cover

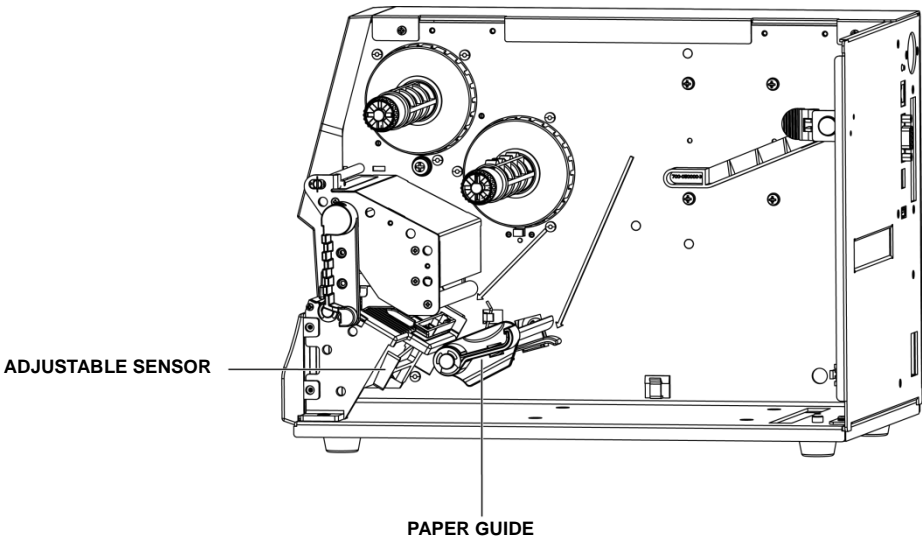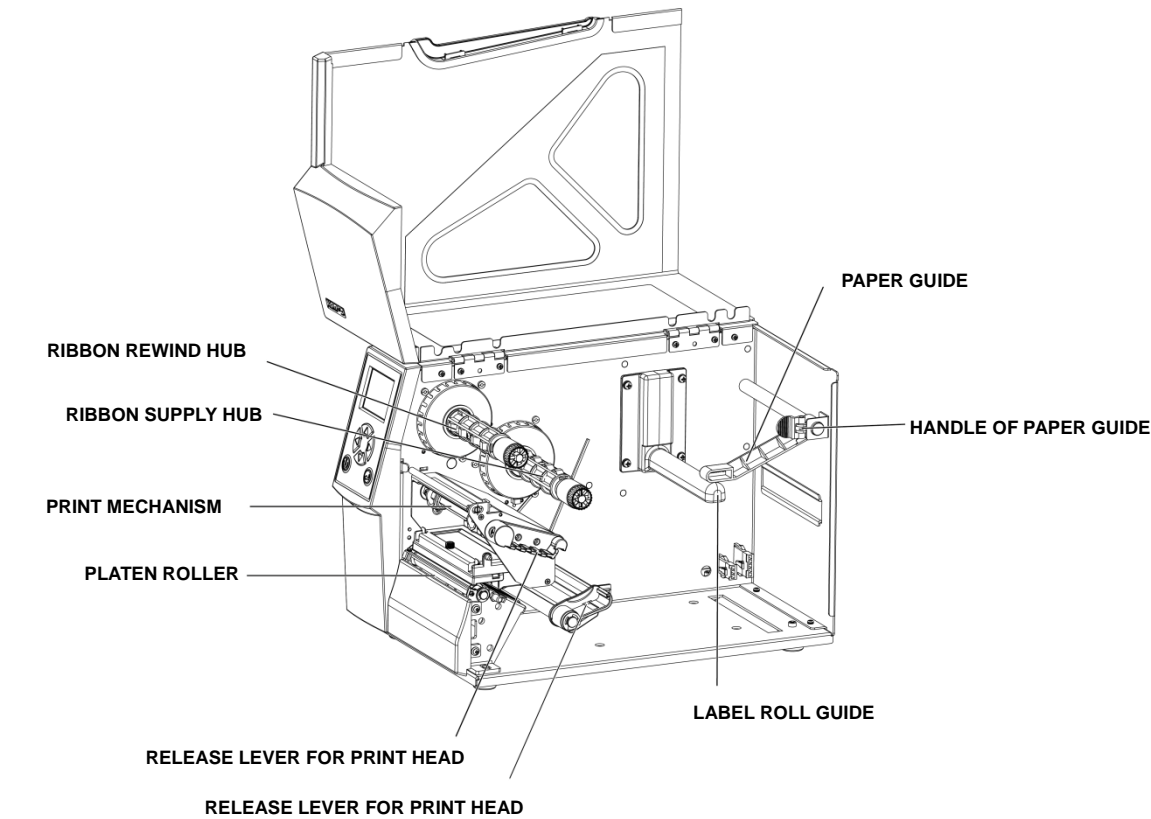

2. Printer Setup


2-1 Loading the label roll


This printer supports the following printing methods:

Thermal transfer printing (TTP) : Requires a ribbon for transferring a printed image to a medium.


Direct thermal printing (DTP) : Does not require a ribbon, only thermal paper.

Please check which printing method you are using and alter the settings accordingly in the printer driver, printer menu, and/or software.

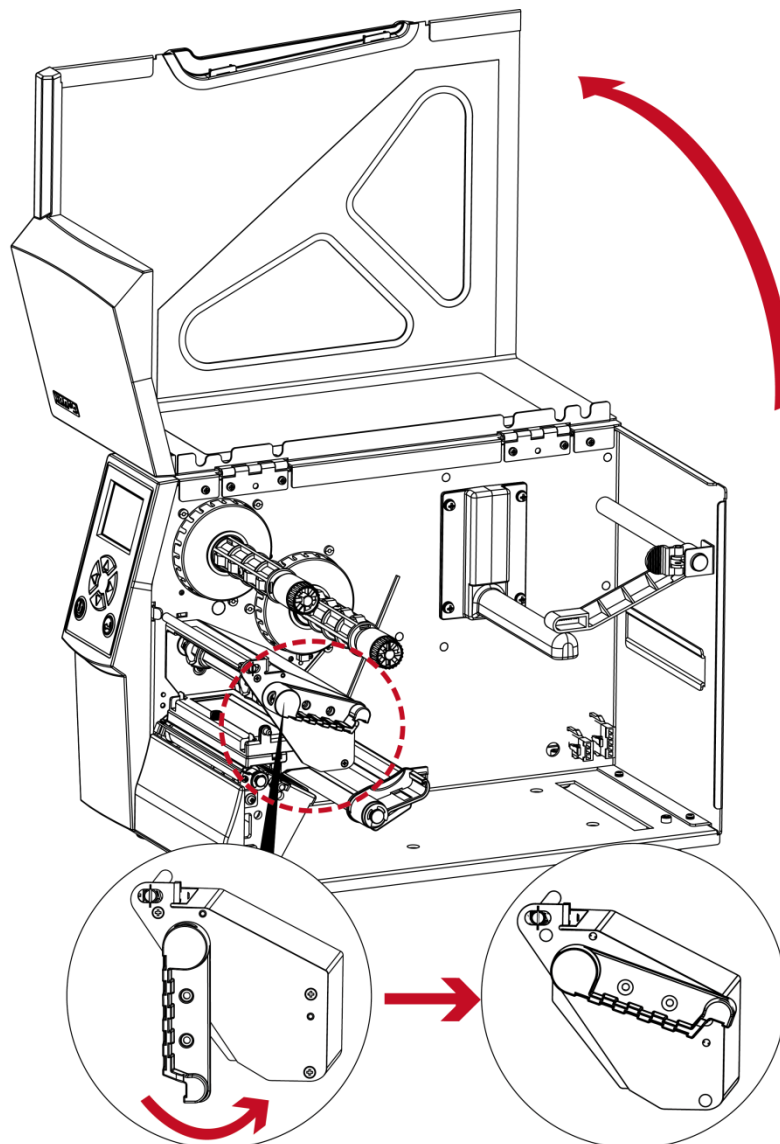


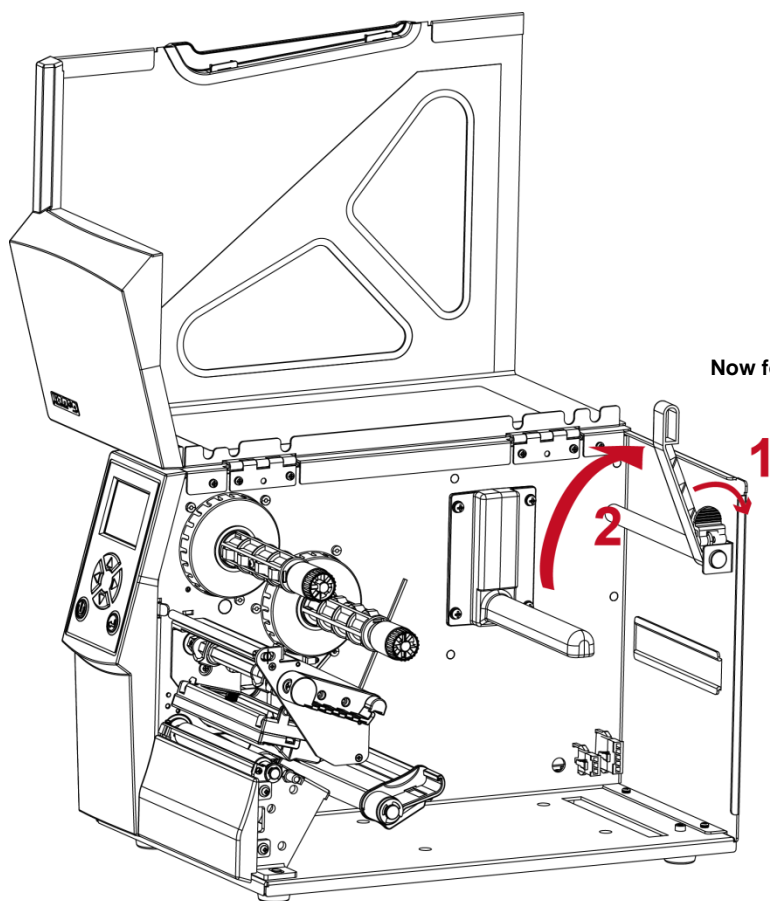

Now fold the label roll guide up

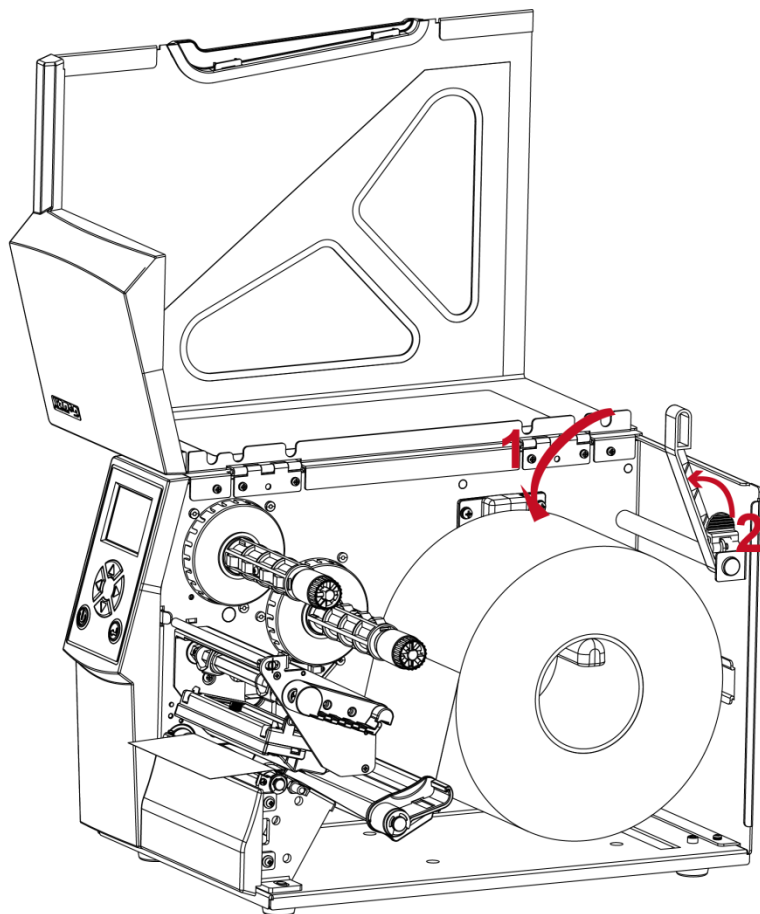


**Place the label roll on the label supply hub,
pushing it right up to the printer housing.
(Do not apply too much pressure to avoid
damaging the label stock.)**

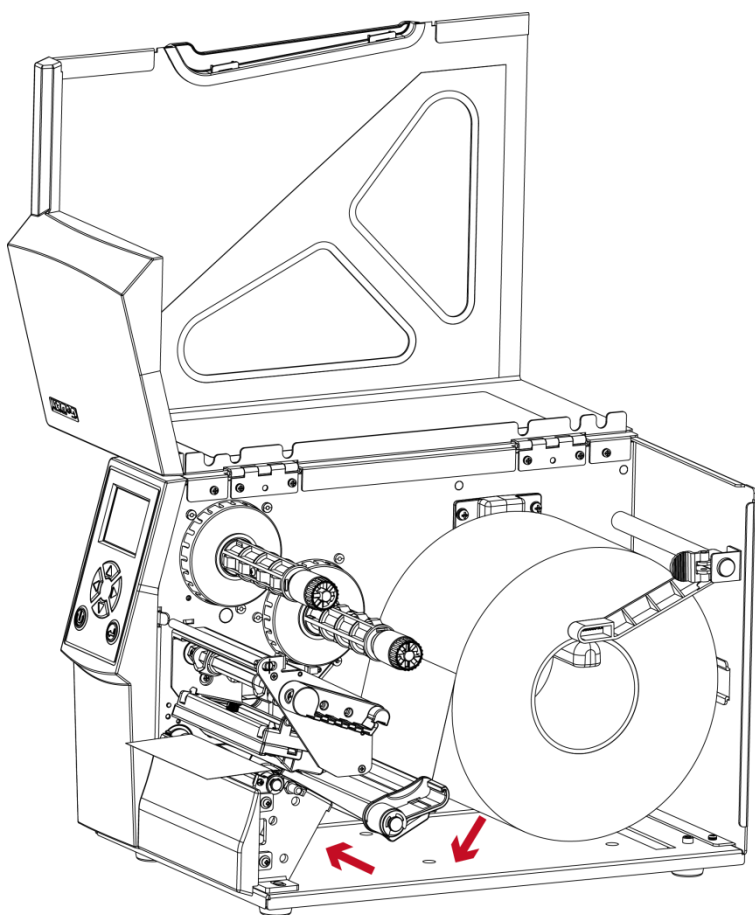


Load the label roll into the printer as shown in the illustration.
Pass it through the printer as indicated by the red arrows.


**Pass the label stock through the
 adjustable Sensor and up to the tear-off plate.**

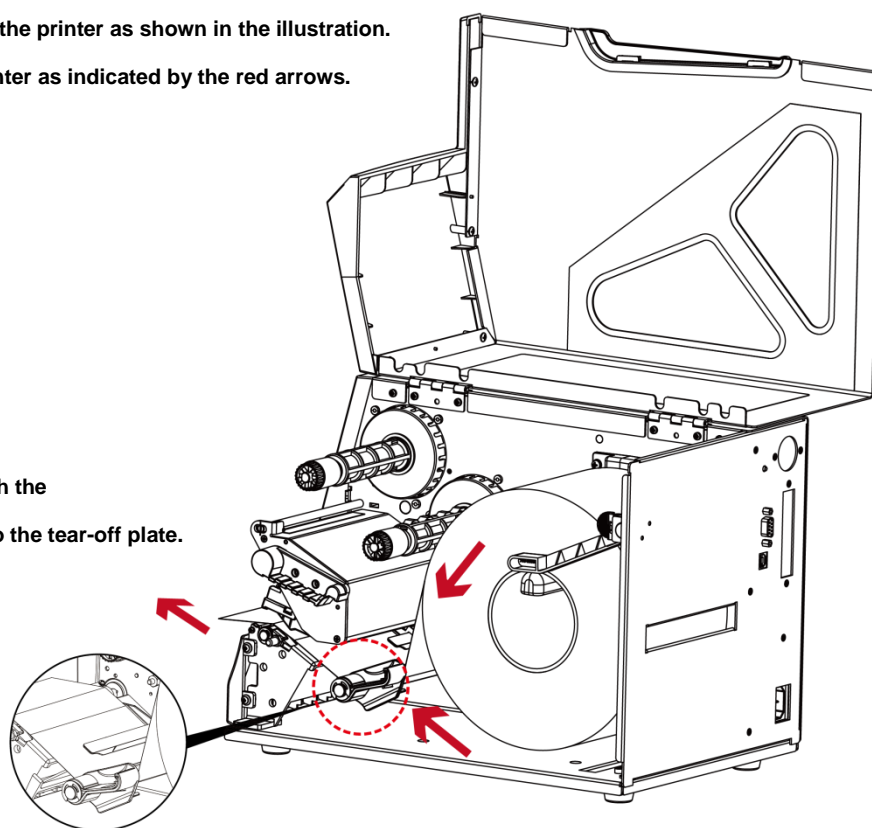

2. Return the print head release lever to its original position.

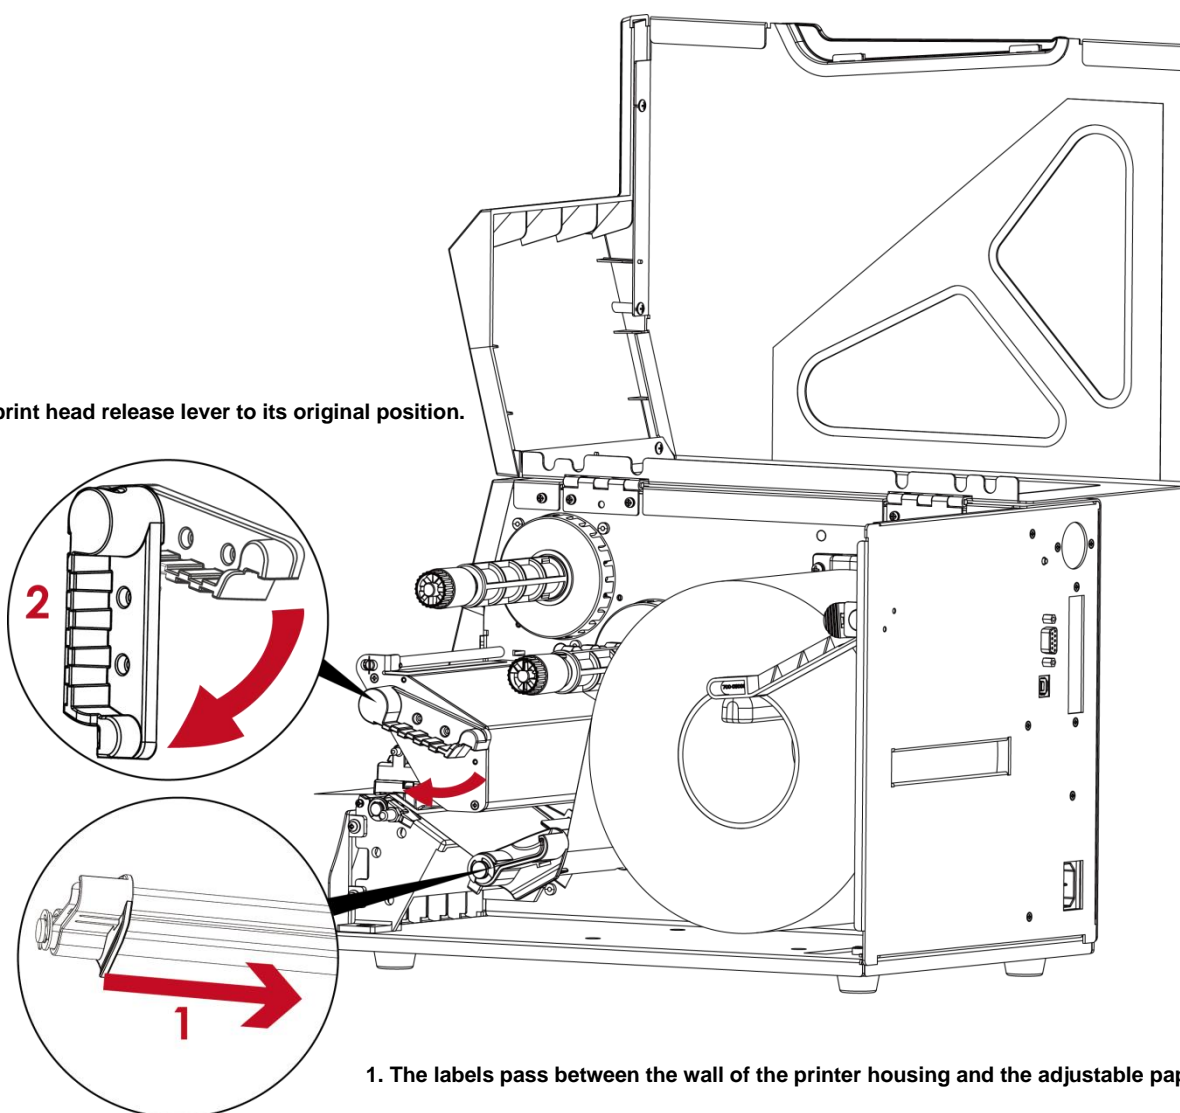


1. The labels pass between the wall of the printer housing and the adjustable paper guide.

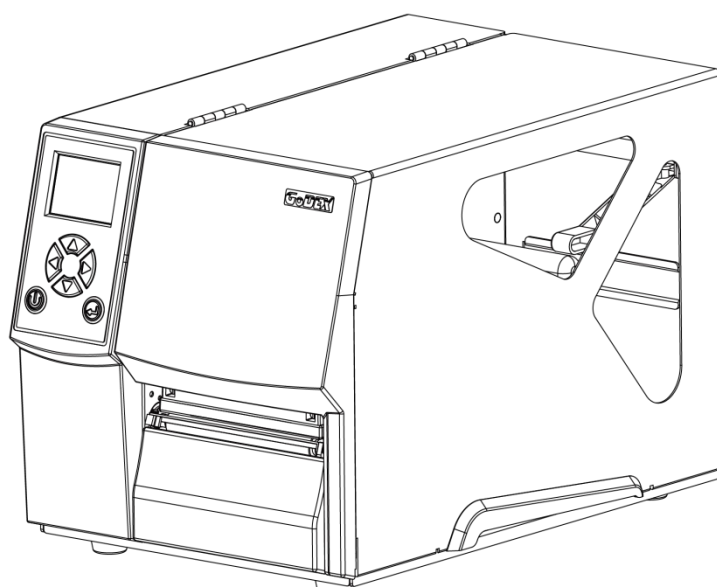

Then close the printer cover.

2-2 Loading & Removing the Ribbon


➤ Loading Ribbon

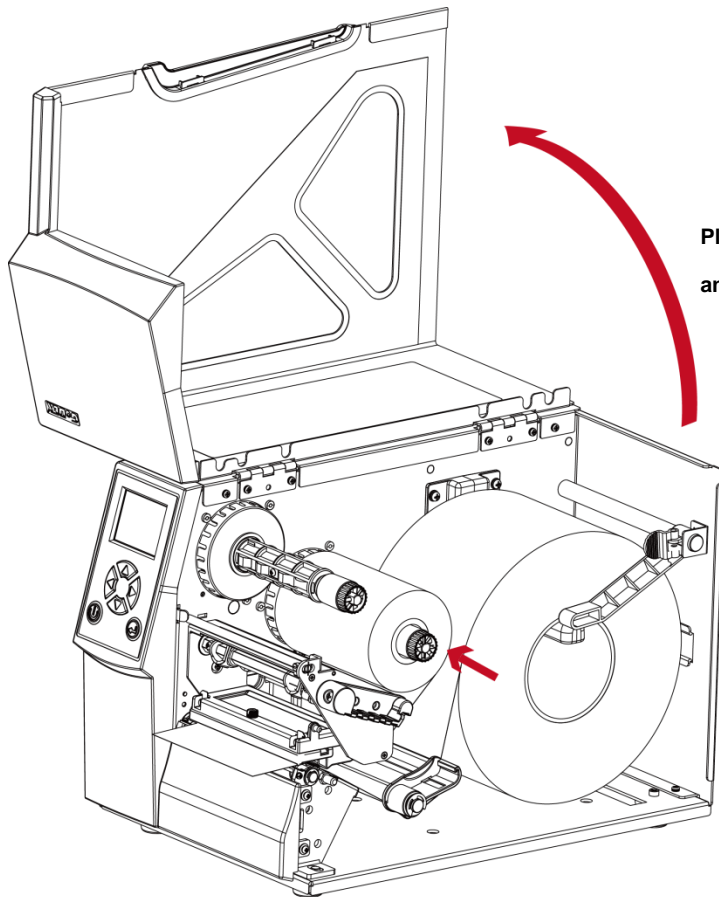

Place the printer on a flat surface
and open the printer cover

Place a new ribbon on the ribbon supply hub.


The illustration as below shows you how to install the ribbon.

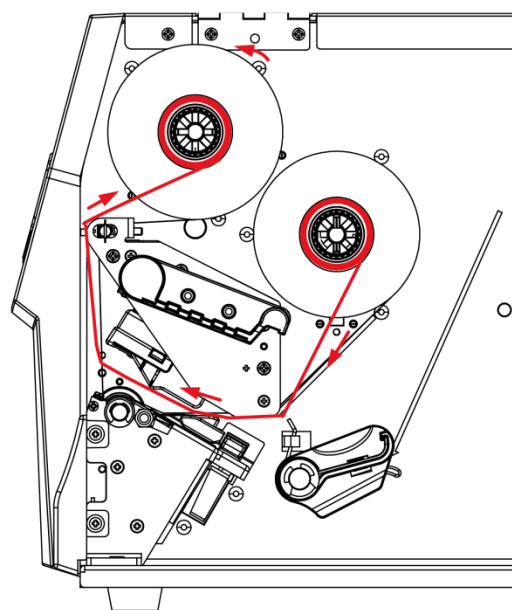

Ink side out

Pass the ribbon under the print head and back up on the other side.

Attach it to the empty ribbon core.

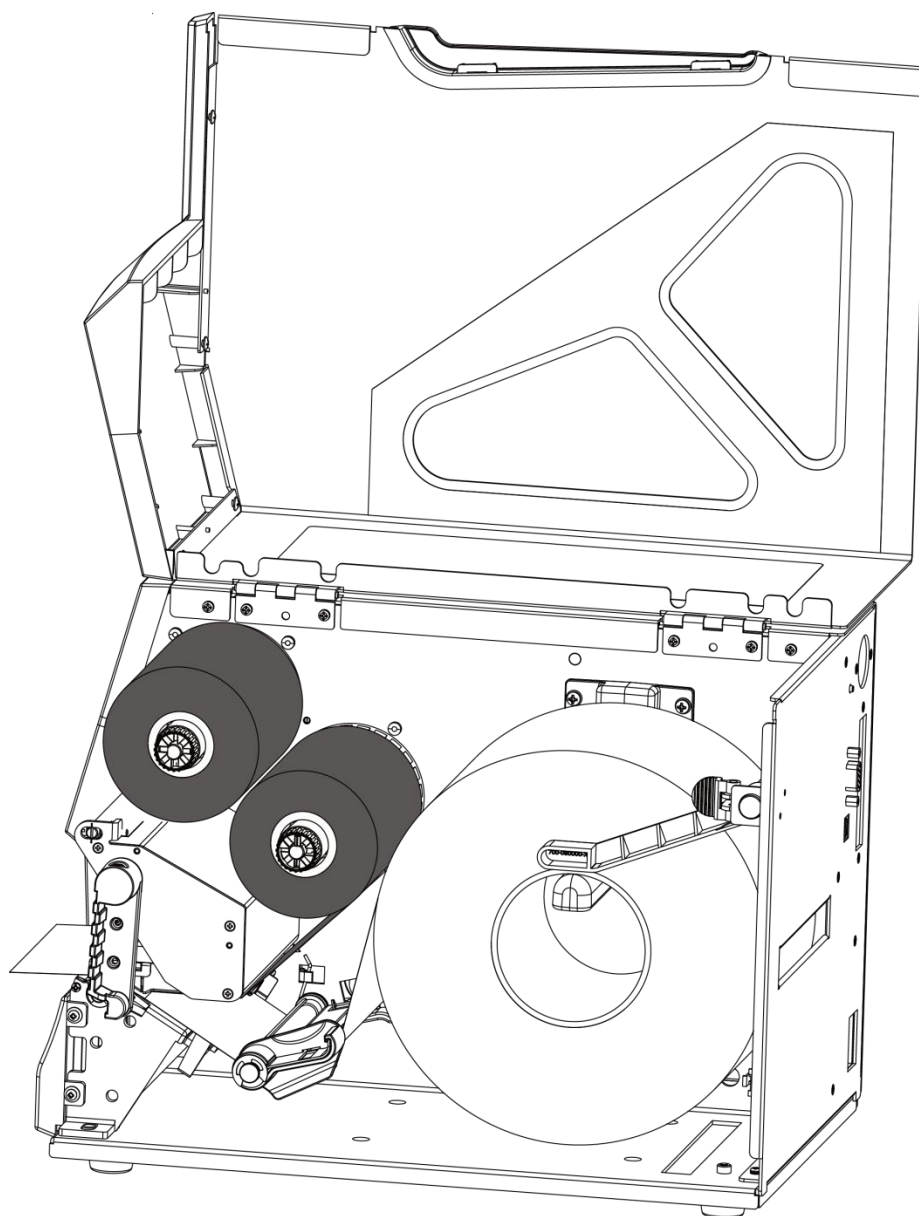


2-3 Connecting The Printer To The Host Computer

- Please make sure that the printer is switched off.
- Connect the power cord to the AC adapter and connect the adapter to the printer.
- Connect the USB / parallel cable to the printer and host computer.
(The type of cable may vary according to the products which you purchase.)
- Switch on the printer. The LED indicator should now lights up.

BARCODE PRINTER

(Ports may vary per model °)

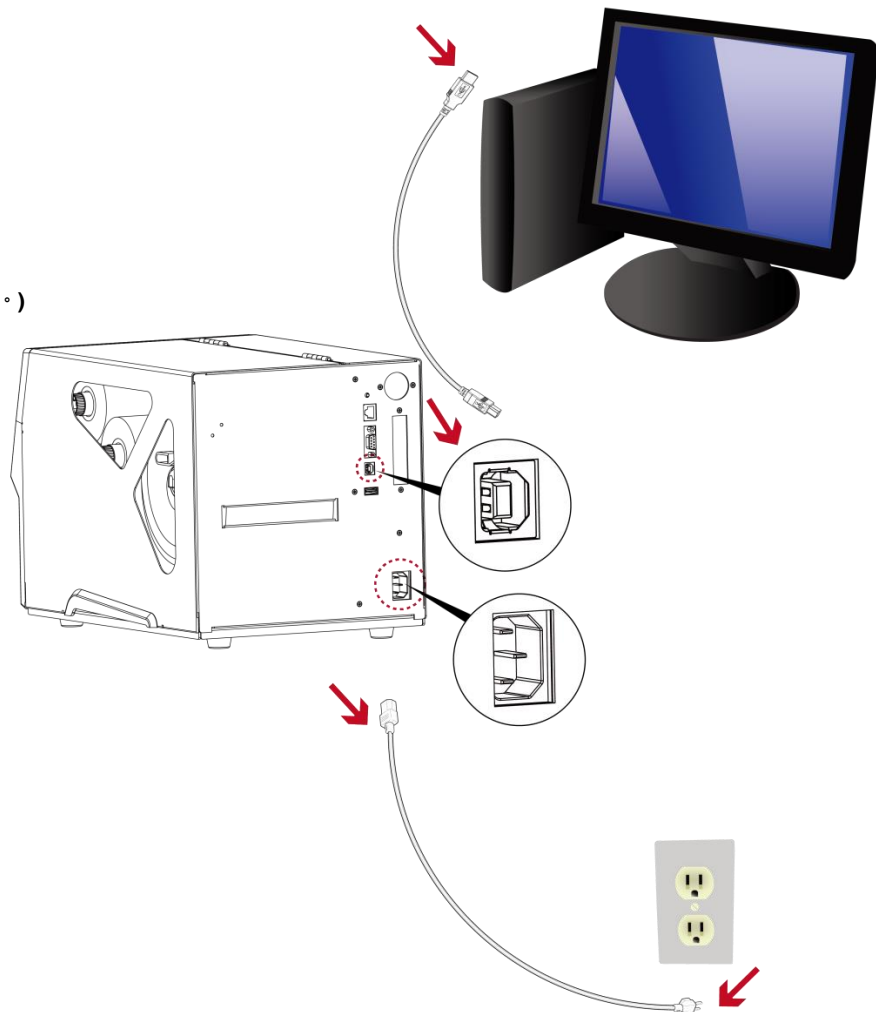

2-4 Wizard CD Standard Installation

Step.01 ➡ Insert the Super Wizard CD in the CD/DVD drive of the host computer and the installation program should pop up automatically.

You will see the Welcome screen first. On the Welcome screen, choose “STANDARD INSTALLATION”.



Step.02 ➡ The wizard will then ask you to make sure your USB and power cables are connected and that the power is turned on. Then click “NEXT”.



Step.03 ➡ The next screen you will see is, “Install the GoLabel Software and Windows driver”. Click “NEXT” to continue.




NOTE

- * If the Super Wizard program did not run automatically, you can either turn on the “Auto-run” setting for your CD/DVD driver or double-click the icon of CD/DVD driver to run the program manually.

Step.04 ➡ As the printer driver and GoLabel are installing, a screen will display a progress bar. While downloading completed you will see Installation completed. Click “NEXT” to continue.




Step.05 ➡ You can also print a test label. If don't print a test label, the screen display as step 6.

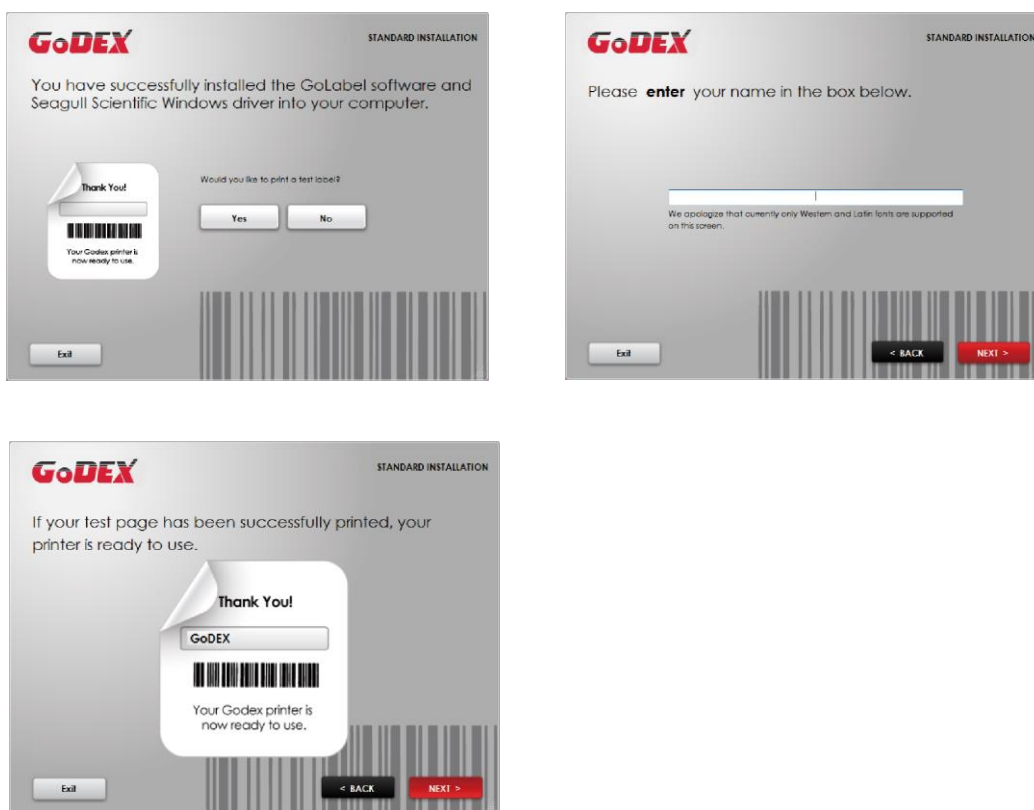

NOTE


- * If you need more resources, tools or reference documents, you can also find them on Super Wizard CD. Just click “Other Choices” on the Welcome Screen to access the files.

Step.06 ➡ Once the installation is complete, you can start to make and print labels with GoLabel or through the printer driver.

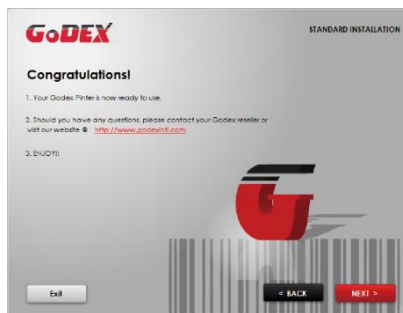


2-5 Wizard CD Other Choice Installation


Step.01 ➡ Click “OTHER CHOICES” to next screen and select “PRINTER DRIVERS”.

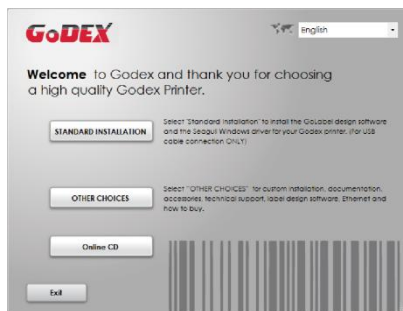

Step.02 ➡ Click “INSTALL SEAGULL SCIENTIFIC WINDOWS DRIVER” to next screen, and click “NEXT”.

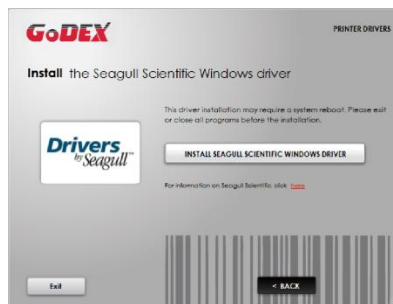



Step.03 ➡ Select “I accept the terms in the license agreement”, and click “Next” · then click “Finish” to step 4.

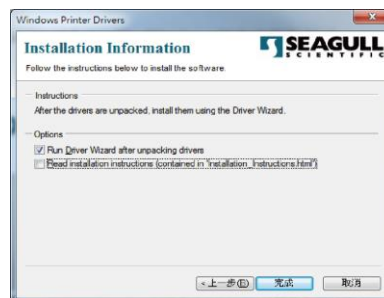


Step.04 ➡ The Driver Wizard will guide you through the installation procedure. Select "Install printer drivers" and click "Next".




Step.05 ➡ With a USB connection, search models such as the right diagram printer device. Specify your printer model and click "Next".

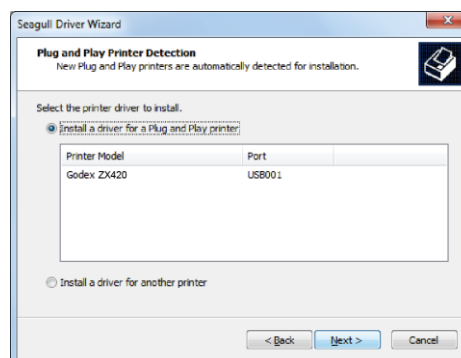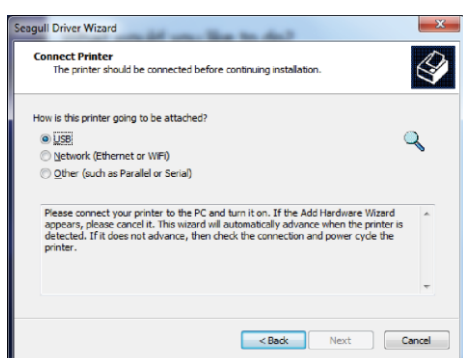

Step.06 ➡ Enter the printer name (you can use default), then click "Next" to display as right diagram. Click "Finish" button to start installation.

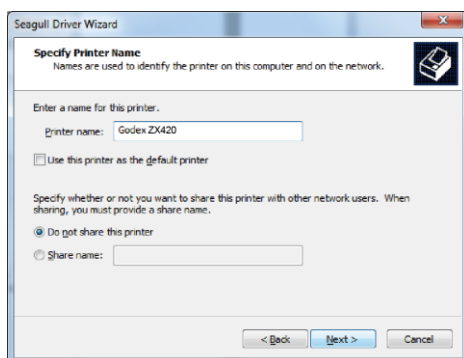


Step.07 ➡ Driver installation completed.

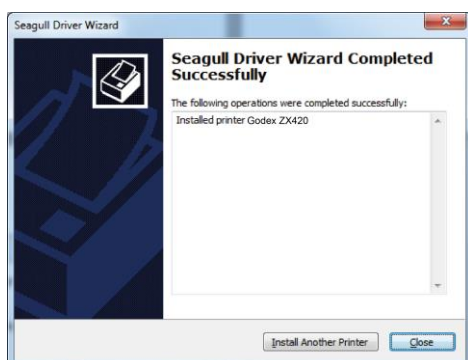

3. Operation Panel

3-1 LED Operation Panel

(For ZX400i Series)

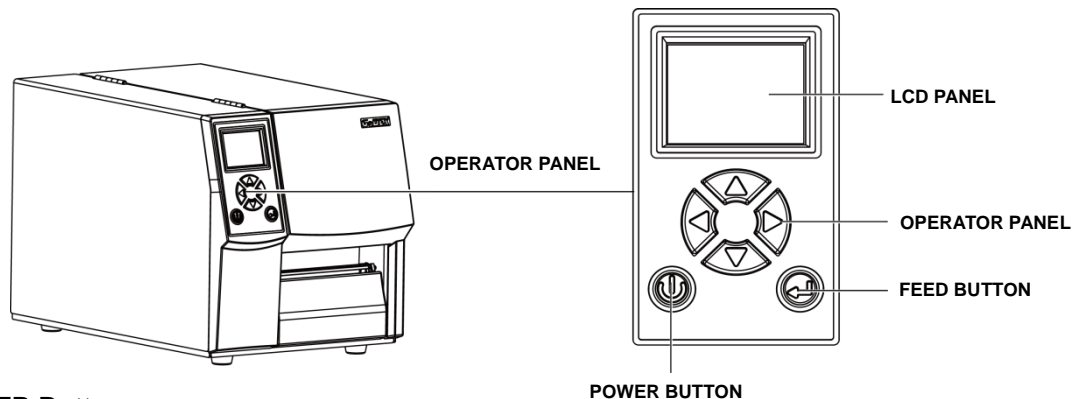

POWER Button

Press the POWER button to turn on the printer, and the START UP SCREEN appears. The printer is on “ready to print” status, the LCD screen should display the message “READY” on the screen.

When printer is turned on, hold and press down the POWER button for 3 second will turn the printer off.

FEED Button

Turn on the printer and press the FEED button.

When you press the FEED button, the printer will advance media until the FEED button is released.

If you are using continuous labels, pressing the FEED button will advance a length of media until the button is released.

If you are using media with gaps, pressing the FEED button once will advance only one label.

If the label does not stop at the correct position, you need to run the auto-detection function for your media, please see Section 3.6 Label Calibration and Self-Test.

PAUSE PRINTING_FEED Button

Pressing the FEED button while the printer is in standby mode will set the printer to pause mode. In this mode, the printer can receive commands, but it will only process them when it is reset to standby mode. Pressing the FEED button again will reset the printer to standby mode.

Pressing the FEED button during printing will interrupt printing. When the FEED button is pressed again, the printer resumes printing. Example: While a 10-label print job is running, you press the FEED button to pause the printer.

Two of the labels have been printed. To resume printing and print the remaining eight labels, you will need to press the FEED button again.


CANCEL PRINTING_FEED Button

Press and hold the FEED button for 3 seconds during printing cancels a print job. The current print job is cancelled.

Example: While a 10-label print job is running, you press the FEED button. Two of the labels have been printed.

The print job is cancelled and the remaining eight labels will not be printed

(For ZX400 Series)

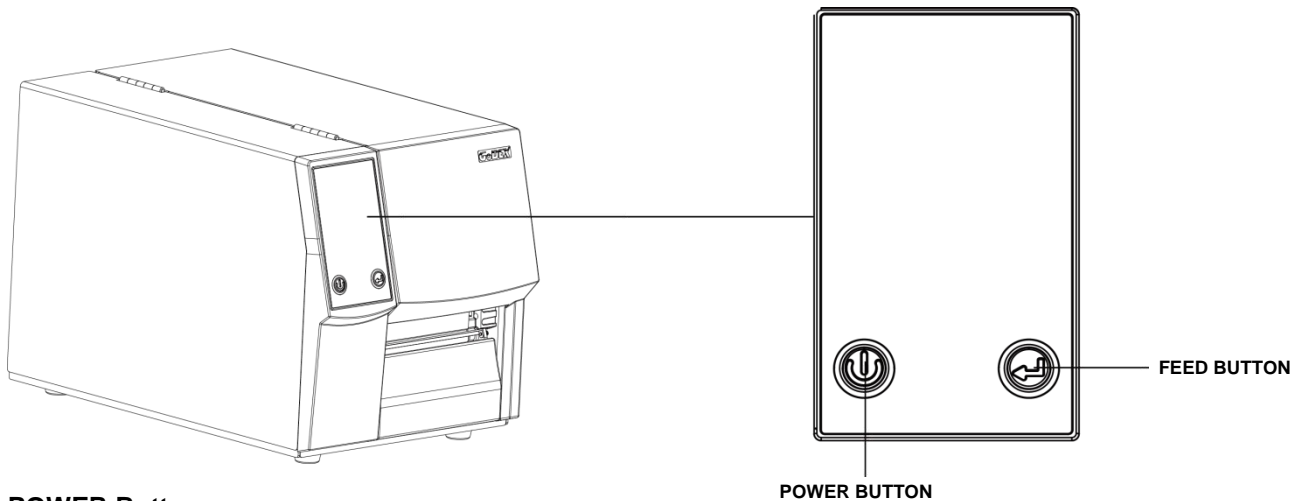

POWER Button

Press the POWER button to turn on the printer, and the START UP SCREEN appears. The printer is on "ready to print" status. When printer is turned on, hold and press down the POWER button for 3 second will turn the printer off.

FEED Button

Turn on the printer and press the FEED button.

When you press the FEED button, the printer will advance media until the FEED button is released.

If you are using continuous labels, pressing the FEED button will advance a length of media until the button is released.

If you are using media with gaps, pressing the FEED button once will advance only one label.

If the label does not stop at the correct position, you need to run the auto-detection function for your media, please see Section 3.6 Label Calibration and Self-Test.

PAUSE PRINTING_FEED Button

Pressing the FEED button while the printer is in standby mode will set the printer to pause mode. In this mode, the printer can receive commands, but it will only process them when it is reset to standby mode. Pressing the FEED button again will reset the printer to standby mode.

Pressing the FEED button during printing will interrupt printing. When the FEED button is pressed again, the printer resumes printing. Example: While a 10-label print job is running, you press the FEED button to pause the printer.

Two of the labels have been printed. To resume printing and print the remaining eight labels, you will need to press the FEED button again.

CANCEL PRINTING_FEED Button

Press and hold the FEED button for 3 seconds during printing cancels a print job. The current print job is cancelled.


Example: While a 10-label print job is running, you press the FEED button. Two of the labels have been printed.

The print job is cancelled and the remaining eight labels will not be printed

3-2 LCD Interface Introduction

Getting Started



Press the POWER button to turn on the printer, and the START UP SCREEN appears.

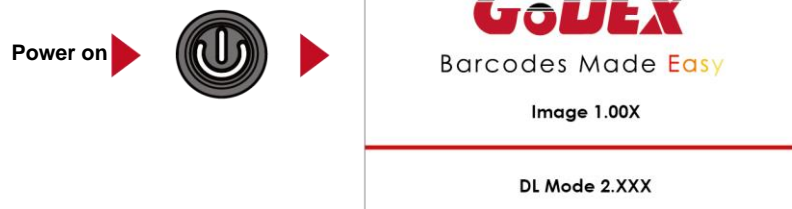



If the printer is on "ready to print" status, the LCD screen should display the message "Ready" on the screen.




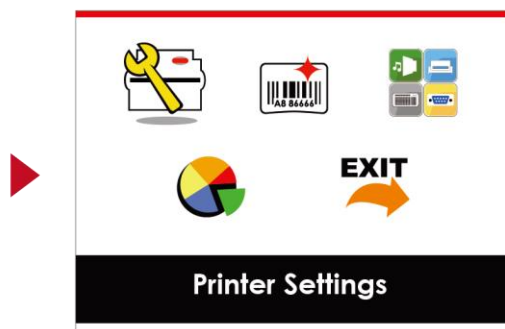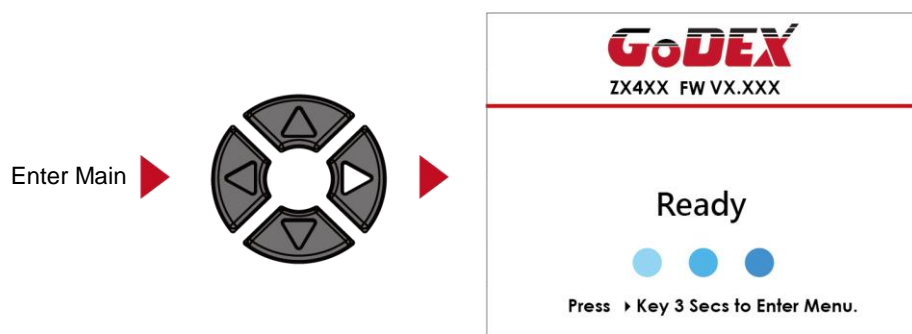

Please keep pressing ▶ button and wait for the timer to be filled, then the LCD interface will enter into the MAIN PAGE for SETTING MODE. You can make various setting functions in SETTING




Operations on Setting Page

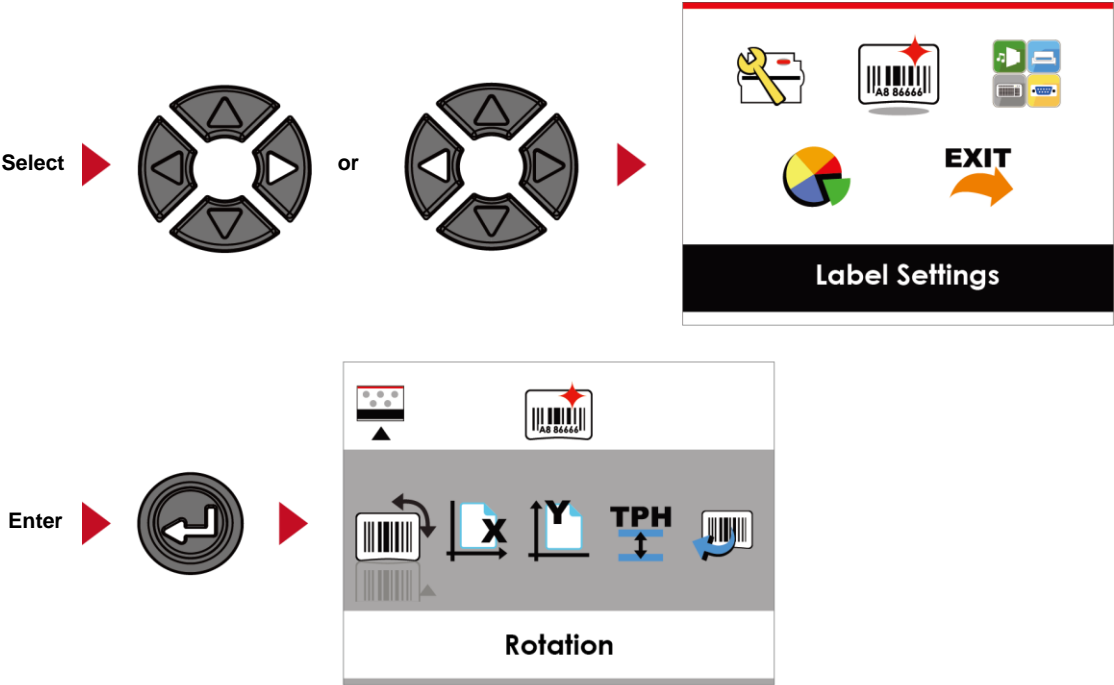
On MAIN PAGE, press  or  button to move the cursor and select the functions.
Select a designated function and press FEED button, you will enter the SETTING PAGES for the function.




On SETTING PAGES, press  or  button to select the setting items.
Select a designated function and press FEED button, you will enter the SETTING VALUE PAGES for the function.

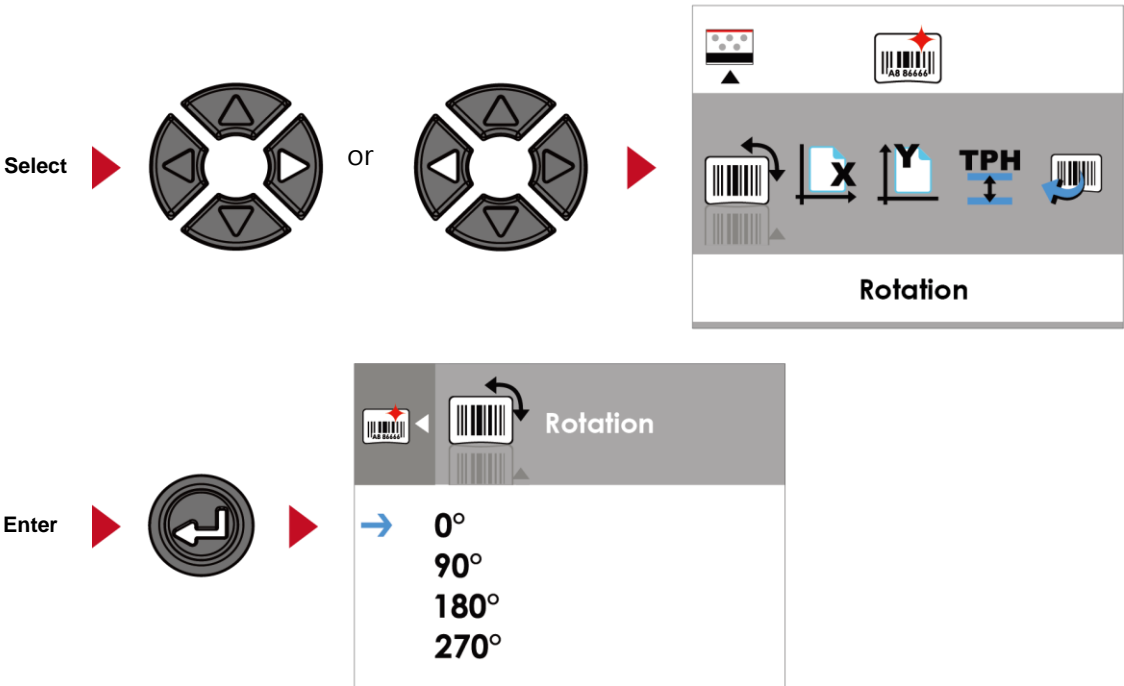

On SETTING VALUE PAGES, press ▲ or ▼ button to change the setting values.

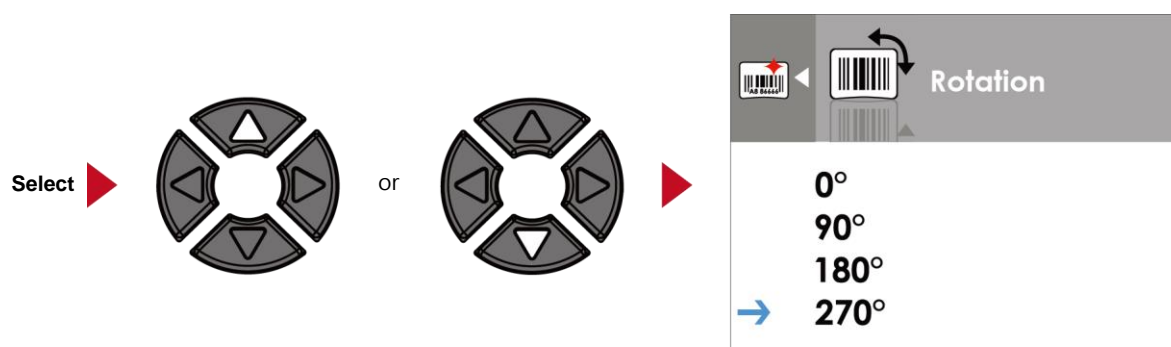

Press FEED button will apply the setting value you just selected, and the red tick will appear to mark the value.

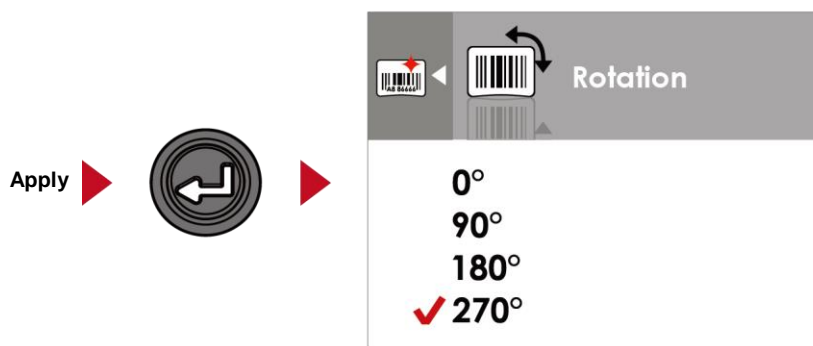

NOTE

* The blue arrow indicates the value you are selected.




** The red tick indicates that the selected value is applied now.




Exit from Current Page to Ready Status


The icon on top-left corner displays the capture of upper level screen and also guides you back to upper level with left or up arrow.

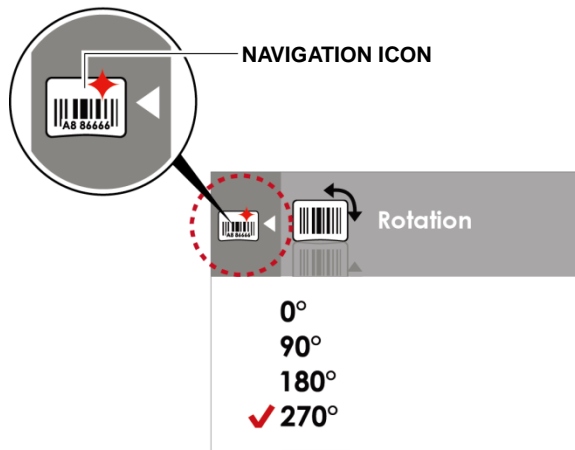

On **SETTING VALUE PAGES**, press ◀ button will go back to the upper level screen.

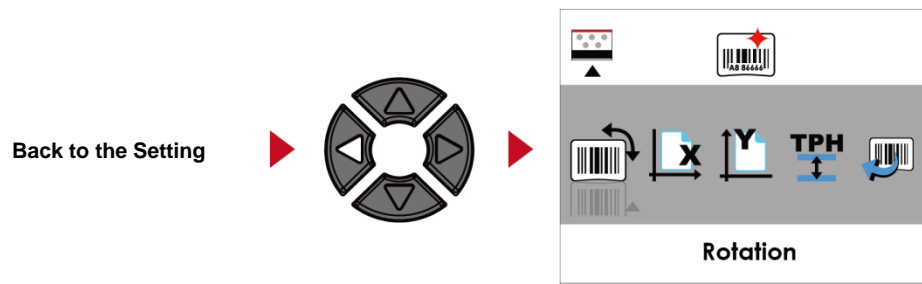

On **SETTING PAGES**, press ▲ button will go back to the **MAIN PAGE**

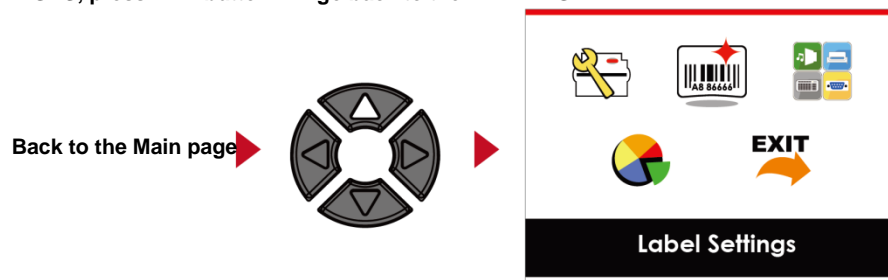

On MAIN PAGE, select the “EXIT” icon and press the FEED button to exit from SETTING MODE and the printer goes back to READY status.

EXIT from Setting Mode



OR



Back to the Ready status





3-3 LAN Setting

Operations on Setting Page


On MAIN PAGE, press ◀ or ▶ button to move the cursor and select the functions.

Select a designated function and press FEED button, you will enter the SETTING PAGES for the function.

Select

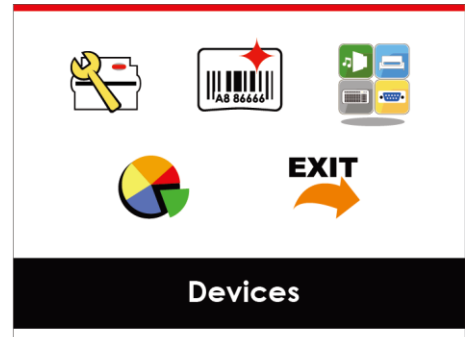
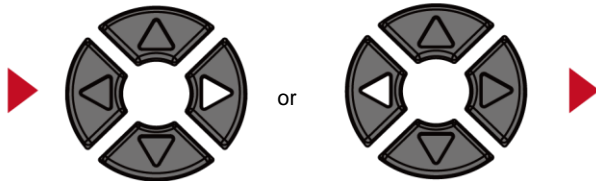


Enter LAN Setting

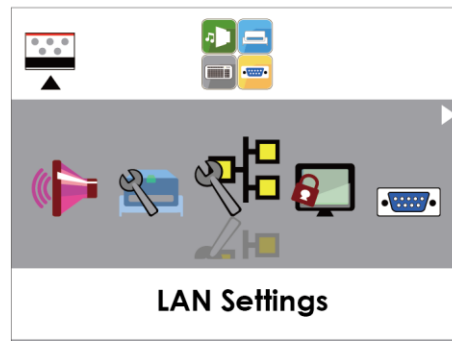


On LAN Setting PAGE, press ◀ or ▶ button to select the setting items.


Select a designated
function

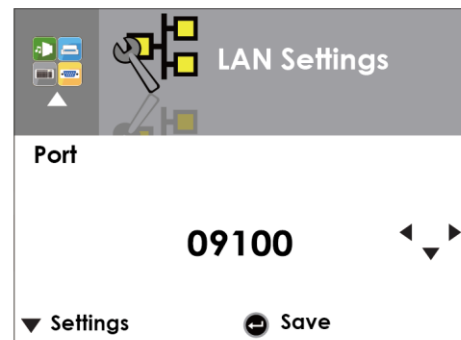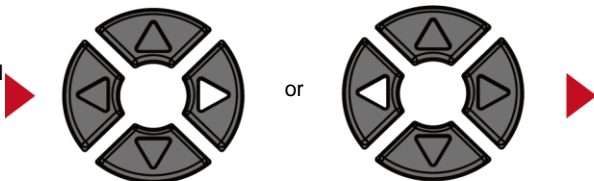


Select DHCP and press FEED button, you will be able to setup DHCP function

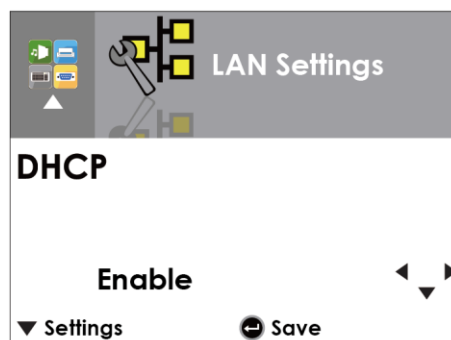

The default of DHCP is Disable. Press ▲ or ▼ button to change the setting values.

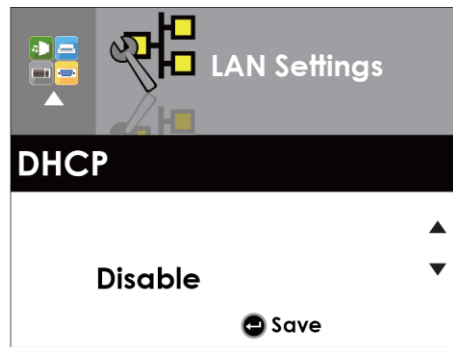


Select ▼ to enable DHCP

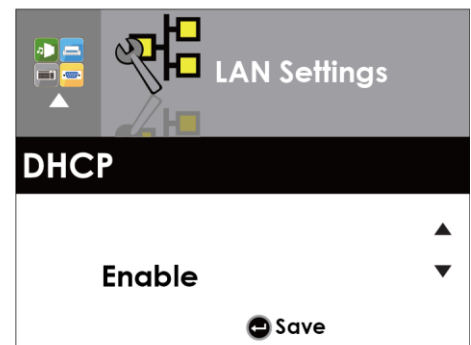


Press FEED button twice to save the setting.

Press FEED once to exit

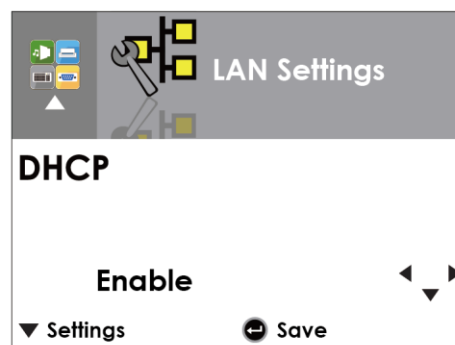

Press FEED again to save and return to previous


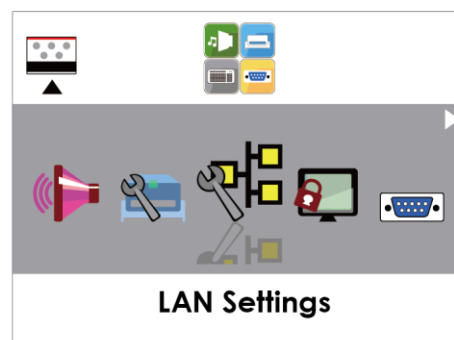


3-4 LCD Password



Operations on Setting Page

On MAIN PAGE, press ◀ or ▶ button to move the cursor and select the functions.


Select a designated function and press FEED button, you will enter the SETTING PAGE for the

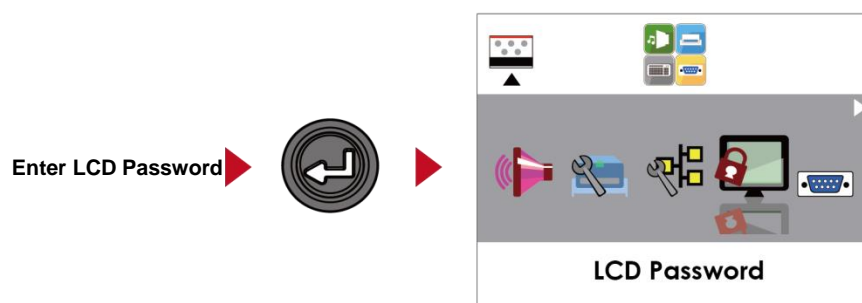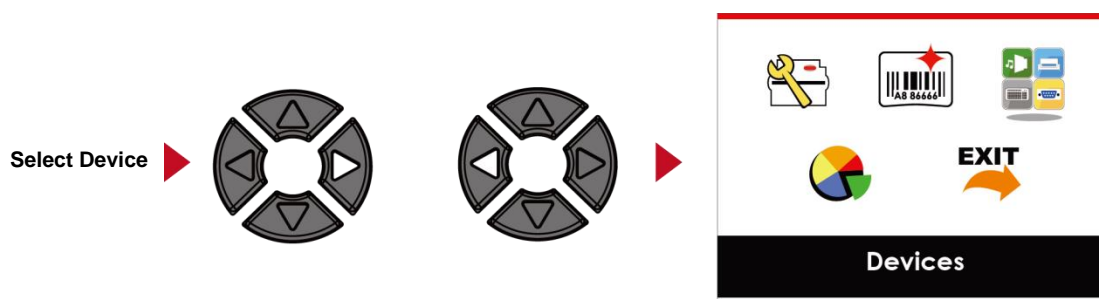

The default of LCD Setting is Disable. Press ▲ or ▼ button to change the setting values.

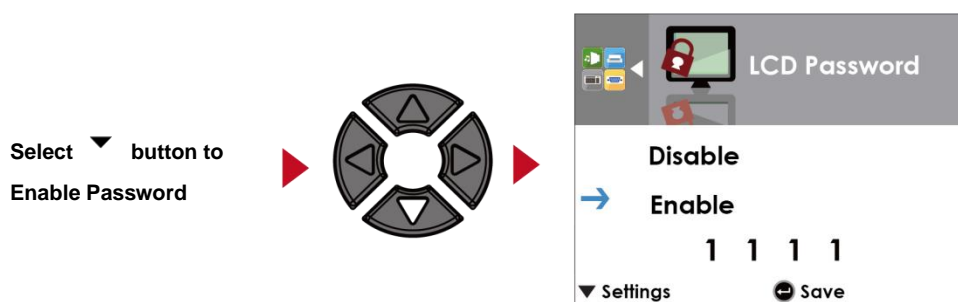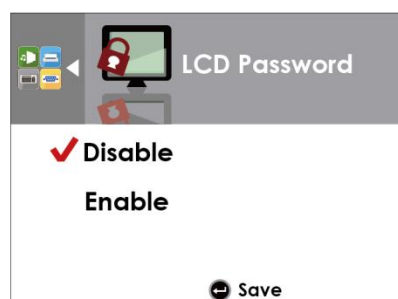


Select ▼ button again to setup the password

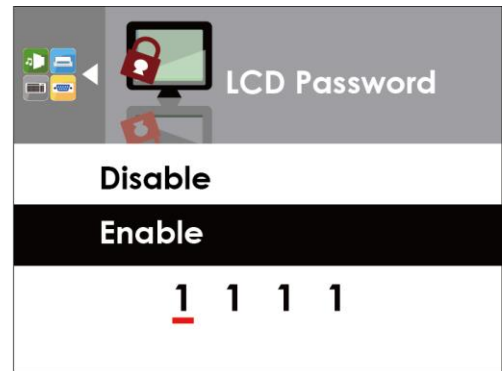


Press FEED button twice to save the setting

Press FEED button once to exit

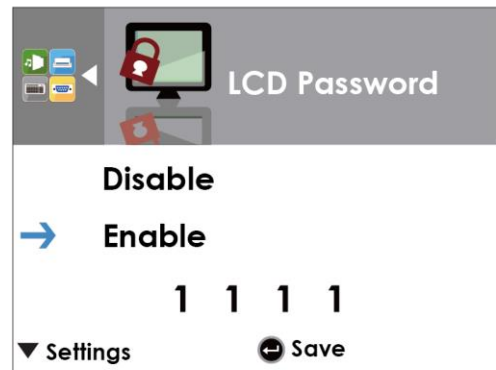

Press FEED button again to save and return to previous SETTING PAGE

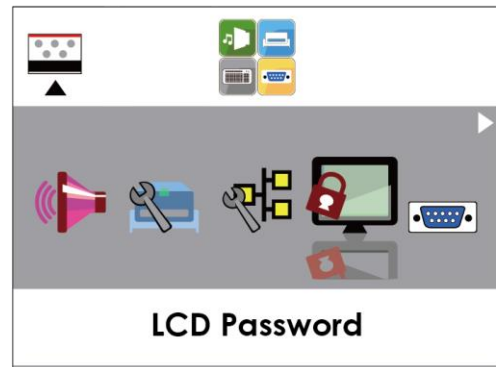

3-5 LCD Interface Function

Main Page



Printer

Setting items for printer, ex. Printing speed, darkness.
Also includes a Printing Wizard for your ease of printing.



Label

Setting items for printing label, ex. Rotation, Printing position offset.



Device

Option modules and connection port settings.



Analysis

Self-Diagnose functions for printer, ex. TPH testing, self-test page printing.




Exit

Self-Diagnose functions for printer, ex. TPH testing, self-test page printing.

Status of LCD Interface


When printer is on standby status (ready to print), the LCD interface will display “Ready” on screen.

You can only print on this “Ready” status.

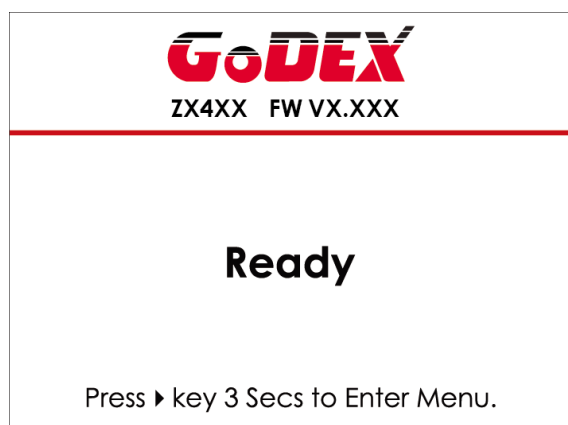

If there is any printers error, the LCD screen will display the error screen to show the type of error.

You can fix the error according the notice.

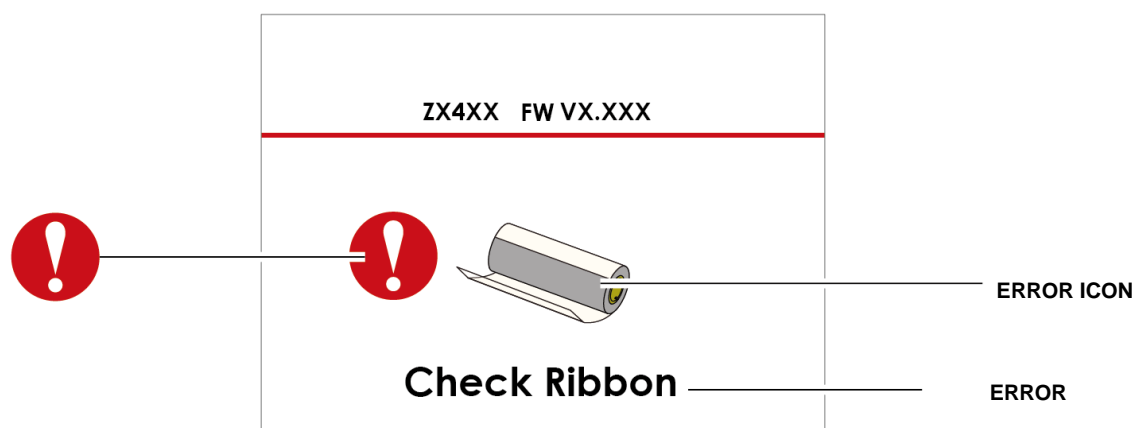

Icon Definition

	To upper level	Appears on the NAVIGATION ICON of SettingPages. It guides you back to upper level bypressing “LEFT” key.
	To upper level	Appears on the NAVIGATION ICON of SettingValue Pages. It guides you back to upper level by pressing “UP” key.
	Lock	On Setting Value pages, press “RIGTH” key to lock the value for preventing unexpected change.
	Unlock	For locked value, press “RIGHT” key again to unlock the value.
	Scroll the value	On Setting Value pages, press “UP” or “DOWN” key to scroll the values for your selection.

Setting Items in Setting Mode



Printer Setting

LCD Language		English	
		Deutsch	
		繁體中文	
		简体中文	
		Français	
		Español	
		日本語	
		Italiano	
		Русский	
		Türk	
Wizard	Speed	2-5 or 7	
	Darkness	0-19	
	Media Type	Label with Gaps	
		Label with Marks	
		Continuous	
	Printer Mode	Direct Thermal	
		Thermat Transfer	
	Tear-off Position	0-40	
Darkness	0-19		
Speed	2-5 or 7		
	Sensor	Media Detection	Auto Select
			See-Through
			Reflective
	Media Type		Label with Gaps
			Label with Marks
			Continuous
	Printing Mode	Direct Thermal	
		Thermat Transfer	
	Tear-off Position	0-40	
	Top of Form	Apply	
Cancel			
Setting	850		
	852		
	437		
	860		
	863		
	865		
	857		
	861		
	862		
	855		
	Codepage	866	
		737	
		851	
		869	
		Win 1252	
		Win 1250	
		Win 1251	
		Win 1253	
		Win 1254	
	Win 1255		
	Win 1257		



Label Setting

Rotation	0°	
	90°	
	180°	
	270°	
Horizontal Offset	-100 - 100	
Vertical Offset	-100 - 100	
Start Offset	-100 - 100	
Recall Label	001 Form Name	
	002 Form Name	



Device



Analysis



Exit

Buzzer		Apply
		Cancel
Optional Setting	Option	None
		Cutter
		Label Dispensor
		Applicator
	Pre-Printing	Apply
		Cancel
LAN Setting	Part NO.	09100
	DHCP	Disable
		Enable
	Default Gateway	192.168.000.254
	Dynamic IP	192.168.102.076
	Subnet Mask	255.255.255.000
LCD Password		Disable
		Enable
Serial Port Setting	Baud Rate	4800 bps
		9600 bps
		19200 bps
		38400 bps
		57600 bps
		115200 bps
	Parity	Non
		Odd
		Even
	Data bits	7 bits
8 bits		
Stop bits	1 bits	
	2 bits	
RTC Setting	Clock Display	Apply
		Cancel
	RTC Setting	YYYY/MM/DD
		HH:MM:SS
Bluetooth Setting	Clear Bind	Enable
		Disable
	Make Device Visible	Enable
		Disable
	SSP	Enable
		Disable
PIN Code		0000
Search Devices		
Calibration		Apply
		Cancel
Self-test		Apply
		Cancel
TPH Testing		Apply
		Cancel
Reset to Default		Apply
		Cancel
Clear Memory	Label Format	Apply
		Cancel
	Graphic	Apply
		Cancel
	Bitmap Fonts	Apply
		Cancel
	True Type Fonts	Apply
Cancel		
Asian Fonts	Apply	
	Cancel	
ALL		Apply
		Cancel
Exit		

3-6 Label size calibration and Self Test Page

The printer can automatically detect and store label height.

That means the host computer does not need to transmit the label height to the printer.

And the self-test function lets you check whether the printer is functioning normally.

Here is how you run the label size calibration and self test.

Step.01 ➡ Check that the label stock is loaded correctly.

Step.02 ➡ Switch off the printer.

Step.03 ➡ Switch the printer on again, keeping the FEED button pressed. When the READY LED starts to flash red and the STATUS LED lights up orange, release the FEED button. The printer will now measure the label stock and store the label height

Step.04 ➡ Once the printer has successfully measured the label stock, it will print a self-test label.



The contents of a self-test printout are listed below.

(The data below is for reference only, actual result may vary according to each situation.)

Model & Version	ZX420:Y2.XXX
USB ID setting	USB S/N:12345678
Serial port setting	Serial port:96,N,8,1
MAC address of Ethernet port	MAC Addr:xx-xx-xx-xx-xx-xx
IP protocol setting	DHCP Enable
IP address of Ethernet	IP xxx.xxx.xxx.xxx
Gateway setting	Gateway xxx.xxx.xxx.xxx
Netmask setting	Sub-Mask xxx.xxx.xxx.xxx
Card Status	Card Status:HW Unable to detect any card
Network Status	Network: Cable Not Plug
	#####
Number of DRAM installed	1 DRAM installed
Image buffer size	Image buffer size:1500 KB
Number of forms	0000 FORM(S) IN MEMORY
Number of graphics	0000 GRAPHIC(S) IN MEMORY
Number of fonts	000 FONT(S) IN MEMORY
Number of Asian fonts	000 ASIAN FONT(S) IN MEMORY
Number of Databases	000 DATABASE(S) IN MEMORY
Number of Scalable fonts	000 TTF(S) IN MEMORY
Free memory size	4073 KB FREE MEMORY
Speed, Density, Ref. Point, Print direction	^S4 ^H8 ^R000 ~R200
Label width, Form length, Stop position	^W102 ^Q100,3 ^E18
Cutter, Label Dispenser, Mode	Option:~D0 ~O0 ~AD
Sensor Setting	Reflective AD:1.96 2.84 2.49[0.88_23]
Code Page	Code Page:850

Label Calibration Button

A hardware button to make a Label Calibration while printer encountering “Media Error” during the cases when first-time printer start up or change label or ribbon to another type, such as change using gap label to continuous or black mark labels.

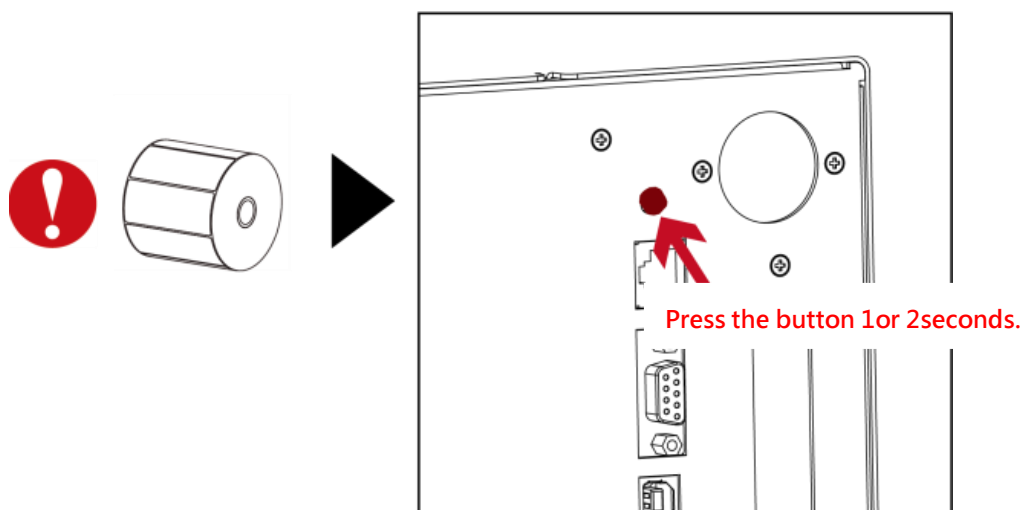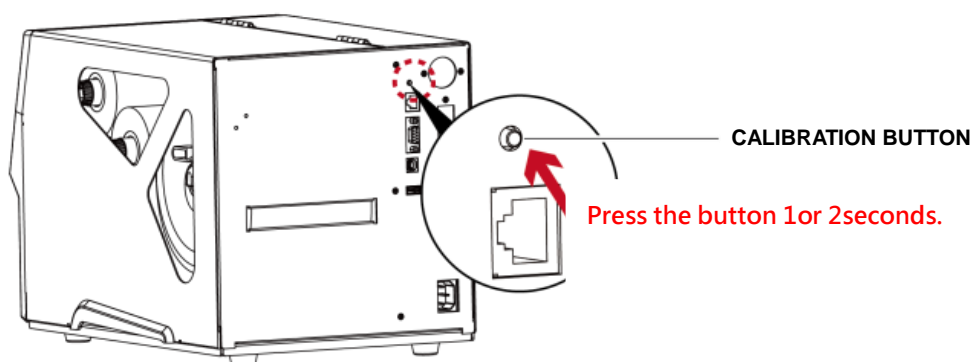


NOTE

- * Press C-button is equivalent to the auto-sensing command “~S,SENSOR” that will cancel on-printing-job and make the Label Calibration immediately.







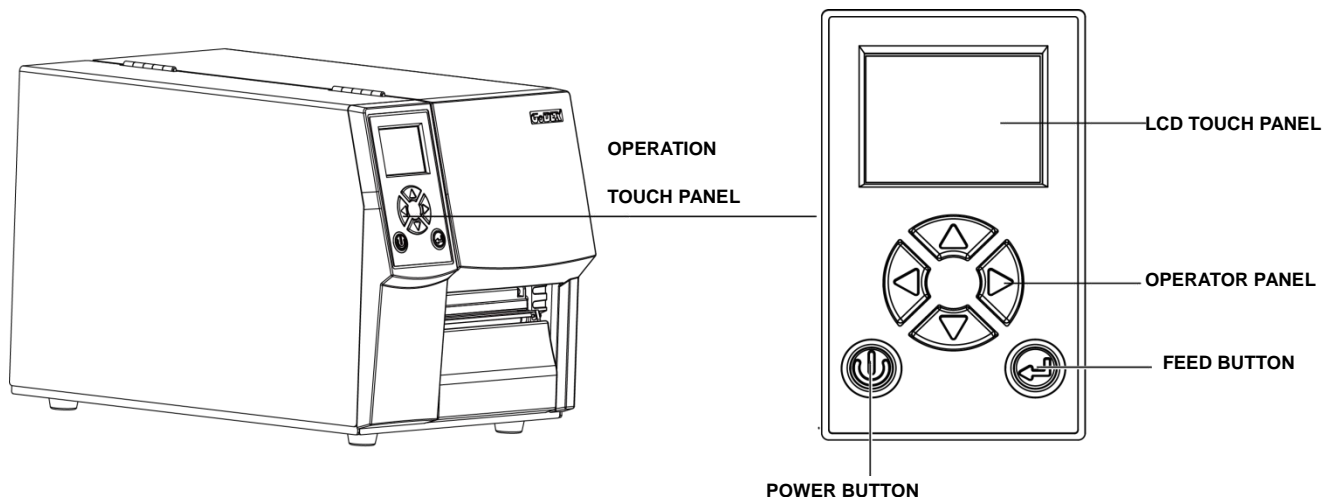

3-7 Error Alerts

(For ZX400i Series)




In the event of a problem that prevents normal functioning of the printer, you will see an error message on LED indicators and hear some beep signals. Please refer to below table for the error alerts.



Operation Panel
Status


	Type	Beeps	Description	Solution
  Printhead Open	Print Head Error	2 x 4 beeps	The printing mechanism is not correctly closed.	Open the print mechanism and close it again.
  TPH overheat	Print Head Error	None	High temperature at the print head.	Once the print head has cooled down, the printer switches to standby mode.
  Check Ribbon	Media Error	2 x 3 beeps	No ribbon is installed and the printer displays an error. The ribbon is finished or the label supply hub is not moving.	Make sure that the printer is set to direct thermal printing mode. Replace the ribbon roll.
  Check Media	Media Error	2 x 2 beeps	No paper is detected. Paper is finished. Printer feed problem.	Make sure that the label sensor is positioned correctly. If the sensor still does not detect the paper, run the auto-detection function again. Replace the label roll. Possible reasons: the print medium has become trapped around the rubber roll; the sensor cannot detect a gap or black mark between the labels; there is no paper. Please reset the sensor.




Operation Panel
Status





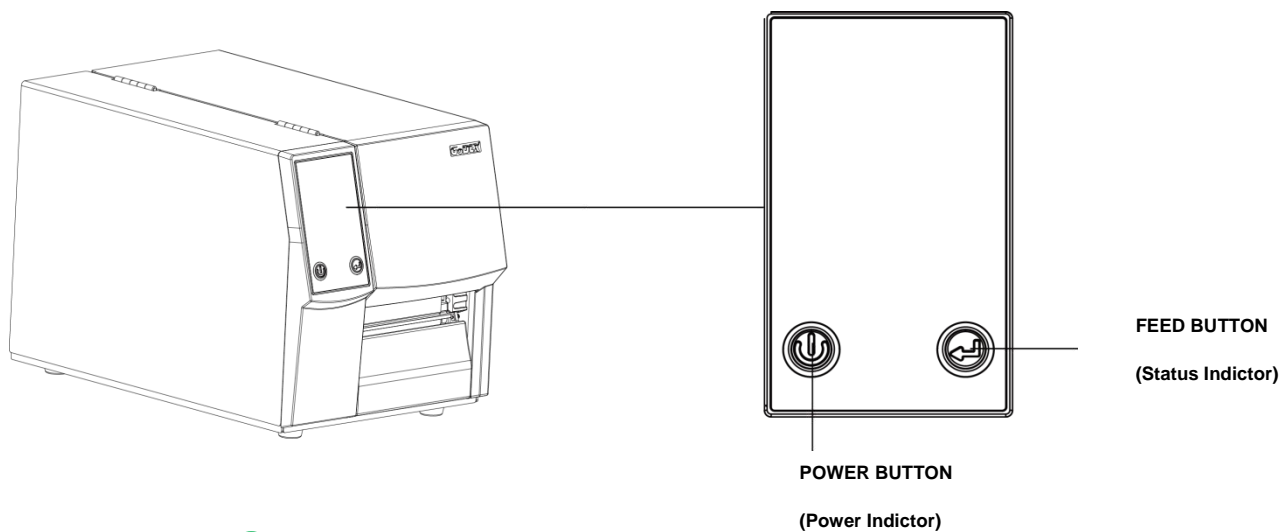

	Type	Beeps	Description	Solution
 <p>The icon shows a red exclamation mark, a memory card, and the text "File System Full".</p>			The memory is full. The printer prints the message "File System full".	Delete unnecessary data or install additional memory.
 <p>The icon shows a red exclamation mark, a magnifying glass over a document, and the text "File Not Found".</p>	File Error	2 x 2 beeps	Unable to find file. The printer prints the message "File Name not found".	Use the "~X4" command to print all files. Then check whether the files exist and whether the names are correct.
 <p>The icon shows a red exclamation mark, a barcode, and the text "Duplicated Name".</p>			A file of the same name already exists. The printer prints the message "Duplicate Name".	Change the name of the file and try storing it again.



(For ZX400 Series)

In the event of a problem that prevents normal functioning of the printer, you will see an error message on LED indicators and hear some beep signals. Please refer to below table for the error alerts.



- Green Light 
- Red Light 
- Red Light flashes 

Types	LED above the display		Beeps	Description	Solution
	Power Indicator	Status Indicator			
Print head is open			4x2 beeps	The print mechanism is not closed.	Please make sure that the print mechanism is closed correctly.
Print head is overheat				The print head is too hot.	Once the print head has cooled down, the printer switches to standby mode.
check ribbon			3x2 beeps	No ribbon is loaded.	Please make sure that the printer is set to thermal direct mode.
				The ribbon is finished or the ribbon roll is not moving.	Replace the ribbon roll.

check media			1x2 beeps	Unable to detect the paper.	Please make sure that the gap sensor is positioned correctly. If that does not fix the problem, run the auto-detection function again.
				The labels are finished.	Replace the label roll.
				Paper jam.	Check the path of paper feeding.

3-8 USB Host


Definition : USB Host port supports either device : USB memory stick, keyboard or scanner.

Purpose:

- USB memory stick : It extends the user memory space up to 32GB for Graphic, Font, Label Format, DBF and Command files downloading. The printer's Firmware also can be updating if copy new version of Firmware into USB memory stick.
- Connecting an USB keyboard to printer for "Keyboard Mode" mode operation.
- Plug-in an USB scanner to operate the printer in "Keyboard Mode" .

Usage of Extended Memory

- USB memory stick : It supports hot-plugging function; printer will create a Folder "LABELDIR" and switch "User Flash" to " Extended Memory" automatically while user plugs an USB memory stick into a GoDEX printer.
- Connect the USB Stick plugged -in printer to PC via USB Device or Ethernet port and run "GoLabel" software to download Graphic, Font, Label Format, DBF and Command files to the printer.
- Detail download procedures, please refer to "GoLabel On-line Help".

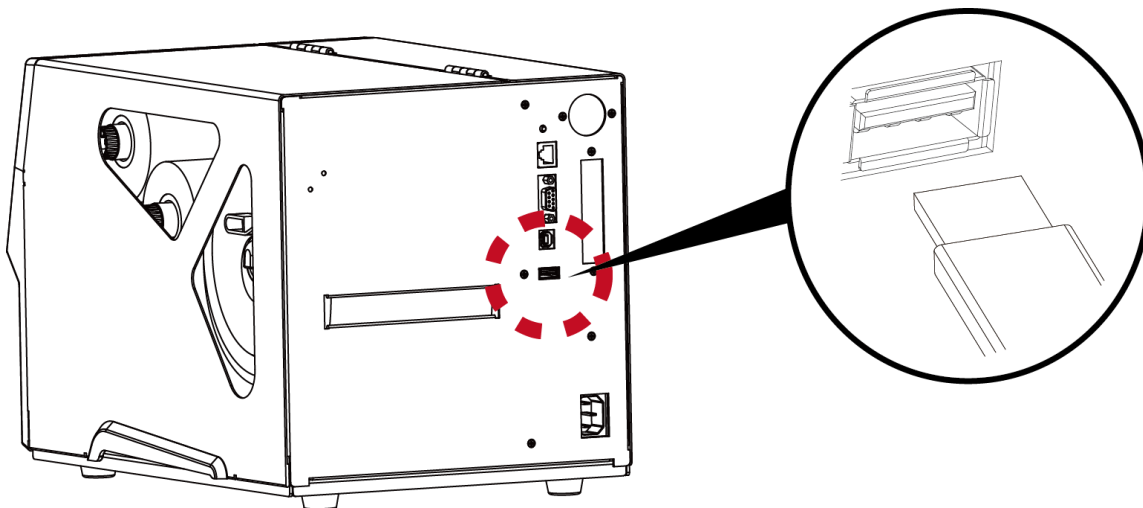

Usage of Firmware Update

- Remove USB memory stick from printer and plug-in it to a PC's USB port; delete Firmware "*.bin" file from "LABELDIR\FW" of USB memory stick if it existing; or create a Folder "LABELDIR\FW" to USB memory stick if it doesn't existing.
- Copy a new version of Firmware "xxxx.bin" to the Folder "LABELDIR\FW"; and then remove USB and plug-in back to the printer that going to update Firmware.
- The printer will update the Firmware automatically when plug-it-into the printer and printer find-out the Firmware in "LABELDIR\FW" is newer version.
- Don't remove the USB memory stick out while it's under updating with "Flash Writing..." message that displays on LCD panel.

USB Keyboard

When plug-in an USB keyboard to the printer, LCD touch panel will display “Enter Standalone”, press the “Y” key on keyboard to entering to the dialog for “Keyboard Mode” operation.

Here have six sub-dialogs “Recall Label” “Country Code” “Code Page” “Clock Setting” “Database Setting” “Label Edit” is able operating by keyboard as follow definition:

1. Press “ESC” key to exist from “Keyboard Mode” or back to previous dialog
2. Press “F1”, it will let the printer from “Home Page” mode entering into “Keyboard Mode”
3. Press “Enter”, “Arrow” and “Alphabetic” keys as the usual in PC that will perform the key-in function of “Keyboard Mode”.

Scanner

When plug-in an USB scanner to the printer, LCD touch panel will display “Enter Standalone”, tap the “Y” to entering the dialog of “Keyboard Mode” operation.

Scanner is using in “Keyboard Mode” to scanning the “Serial Number, Variable” and Print Quantity while the printer prompts a message on LCD touch panel and wait for data input.

-
- * The USB Host port on GoDEX printer is without “HUB” function.
 - ** The USB Memory Stick supports with “FAT32” Disk Format and up to 32GB only. The certified venders are Transcend, Apacer, Patriot, Consair and Kingston.
 - *** The download function for Graphic, Font, Label Format, DBF and Command files is operated by GoLabel of PC and must go through the a “i” “x” model printer itself.
 - **** On a PC, user may copy entire folder “\LABELDIR” from USB memory stick to PC or vice-versa. Copy a sub-folder or individual file in “\LABELDIR” to PC or vice-versa is not supported.

4 NetSetting for Ethernet

4-1 Installing the NetSetting software


The NetSetting software is used to manage the network configurations when connecting the printer via Ethernet port. It is available on product CD or can be downloaded from official website. To install the NetSetting, please follow below steps.

Step.01 ➡ Insert the product CD in the CD/DVD drive, and click "OTHER CHOICES" button.



Step.02 ➡ Select "ETHERNET".




Step.03 ➡ Click "Install Ethernet NetSetting Software", installation screen as right diagram, click "Next".

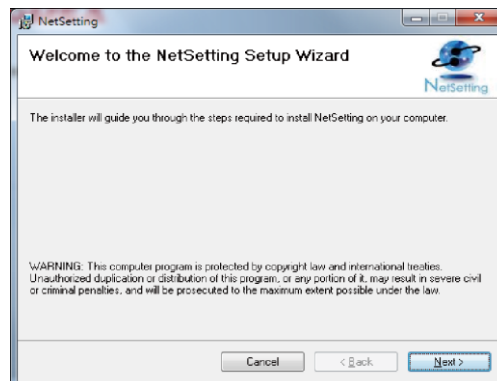

Step.04 ➡ Specify the "Installation Folder", then click "Next" to installing.

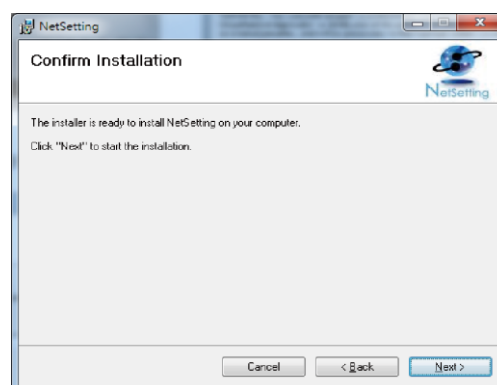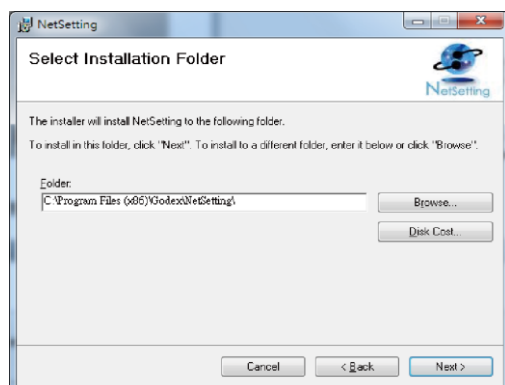



Step.05 ➡ Once the installation is completed, you will see the NetSetting icon on your desktop as right diagram.

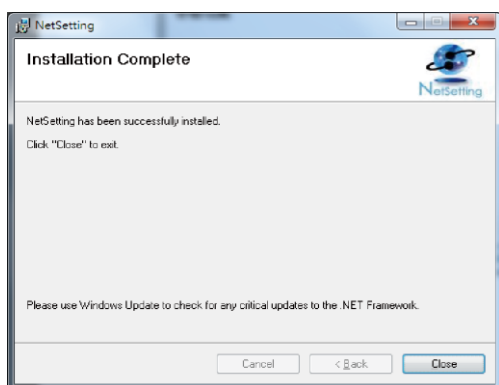

4-2 The Interface of NetSetting

GoDEX printer can also be used through a network connection (as a remote network printer), make sure the printer connected to the Internet and the power cord, you can use the Interface of NetSetting to search connected network printers.

Step.01 ➡ Click the NetSetting icon to start the program, you will see the start page as left diagram. Click the magnifier icon to search the Godex printers which are connected via Ethernet port in you network environment (as right diagram).

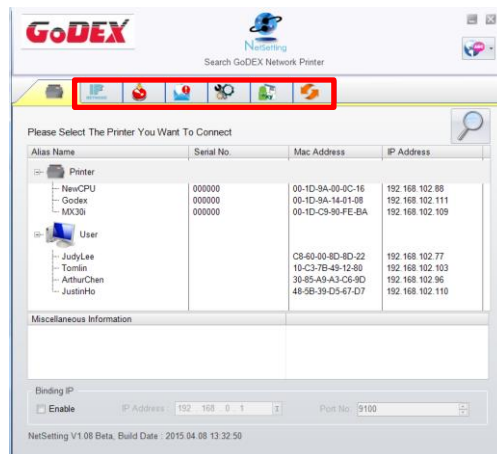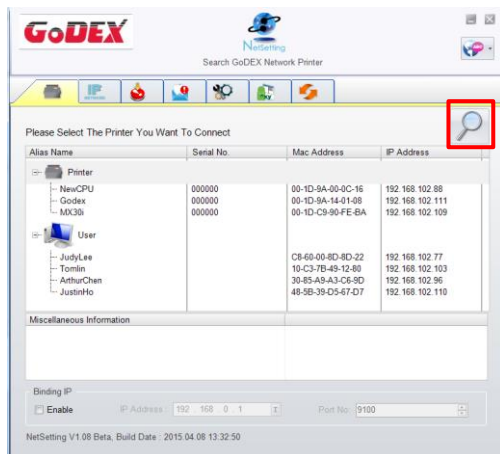

Step.02 ➡ There are six tabs on the top of interface which can configure different types of network settings. But for the data security reason, you need correct password to enter the configuration pages.



NOTE

* The default password is "1111", you can change the password later from the "IP Setting" tab.

IP Setting

The IP Setting tab can change the printer name, Port number, Gateway setting and the password for configuring the printer. You can also set the printer's IP address either by DHCP or by Static IP.

GoDEX NetSetting IP Setting

Printer Name: BP500L Length(1~16)

Port No: 9100

Default Gateway: 192 . 168 . 102 . 254

Password: 1111 Length(1~4)

☒ Get IP From DHCP Server

☐ Static IP

IP Address: 192 . 168 . 102 . 111

Subnet Mask: 255 . 255 . 255 . 0

Set Refresh

You can press “Set” button to apply the settings and “ReGet” button to refresh the setting values.

NOTE

- * To fully benefit from the NetSetting software, you should be familiar with basic networking principles. Please contact your network administrator for related network setting information.
- * When enabling DHCP, if you find the IP Address as: IP = 169.254.229.88, Net mask = 255.255.0.0, Gateway = invariable (last value), the IP Address is invalid.

Alert Path Setting

NetSetting will send the alert messages to designated mail account when the error happened on printer.

The alert messages are sent by SMTP (Simple Mail Transfer Protocol) or SNMP (Simple Network Management Protocol).

You can set or change the configurations of SMTP and SNMP on this “Alert Path Setting” tab.

The screenshot shows the 'Alert Mail Setting' window in the GoDEX NetSetting application. The window has a title bar with the GoDEX logo, the NetSetting logo, and the text 'Alert Mail Setting'. Below the title bar is a navigation bar with icons for printer, IP, alert, settings, and other functions. The main content area is divided into two sections: 'Enable SMTP Alert Message Notification' and 'Enable SNMP Alert Message Notification'. The SMTP section is currently active and contains the following fields: 'Login Account' (default), 'Login Password' (masked with asterisks), 'Server IP Address' (192.168.0.1), 'Mail Subject' (Barcode printer message), 'Mail From Address' (default@default.com), 'Mail To Address' (default@default.com), 'Duration Cycle' (1), and 'Event Counter' (5). The SNMP section is inactive and contains the following fields: 'SNMP Community' (public), 'SNMP Trap Community' (public), and 'Trap IP Address' (192.168.0.1). At the bottom of the window are two buttons: 'Set' and 'Refresh'.

GoDEX NetSetting Alert Mail Setting

☐ Enable SMTP Alert Message Notification

Login Account: default Length(1~64)
Login Password: ***** Length(1~16)
Server IP Address: 192 . 168 . 0 . 1 xxx.xxx.xxx.xxx
Mail Subject: Barcode printer message Length(1~60)
Mail From Address: default@default.com Length(1~32)
Mail To Address: default@default.com Length(1~32)
Duration Cycle: 1 0 ~ 168 Hours
Event Counter: 5 1 ~ 100

☒ Enable SNMP Alert Message Notification

SNMP Community: public Length(1~16)
SNMP Trap Community: public Length(1~16)
Trap IP Address: 192 . 168 . 0 . 1 xxx.xxx.xxx.xxx


Set Refresh

You can press “Set” button to apply the settings and “ReGet” button to refresh the setting values.

Alert Message Setting

For the alert message notification function, you can decide which error cases need to be sent out to the operator.

Moreover, the alert messages can be set to be sent by SMTP, SNMP or both.

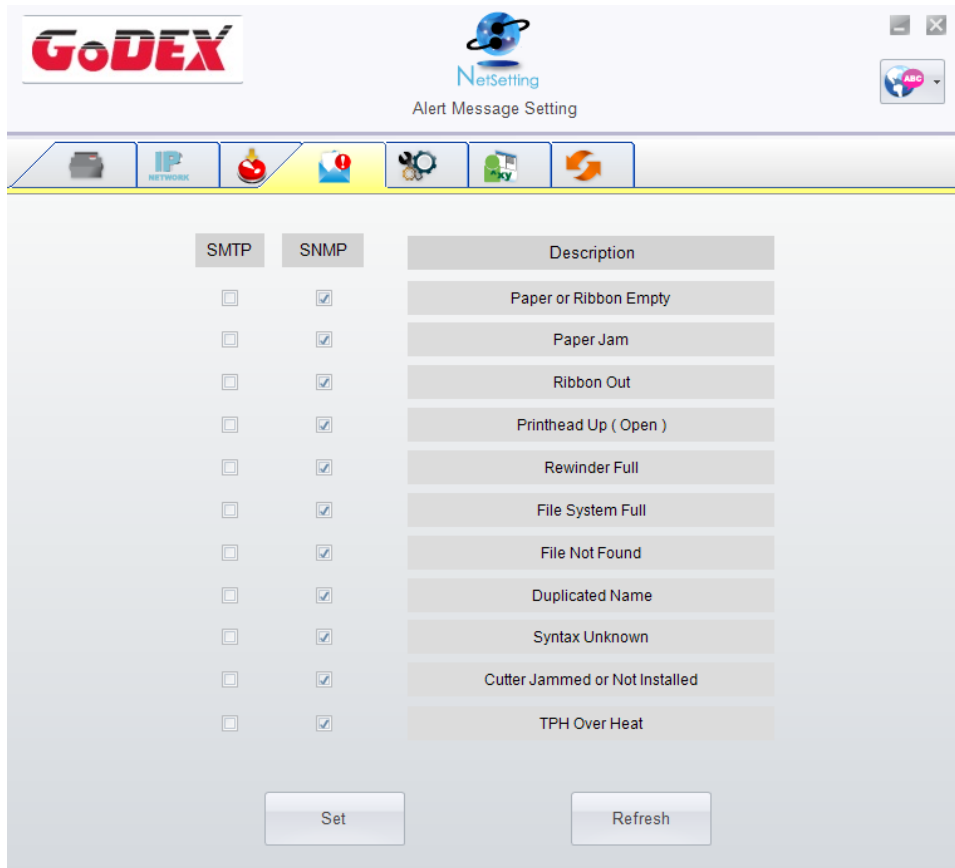


SMTP	SNMP	Description
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Paper or Ribbon Empty
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Paper Jam
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Ribbon Out
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Printhead Up (Open)
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Rewinder Full
<input type="checkbox"/>	<input checked="" type="checkbox"/>	File System Full
<input type="checkbox"/>	<input checked="" type="checkbox"/>	File Not Found
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Duplicated Name
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Syntax Unknown
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cutter Jammed or Not Installed
<input type="checkbox"/>	<input checked="" type="checkbox"/>	TPH Over Heat

Set Refresh

You can press “Set” button to apply the settings and “ReGet” button to refresh the setting values.

Printer Configuration

Set or change the configurations of connected printer. Most of key settings for the printer operation can be done by this setting page.

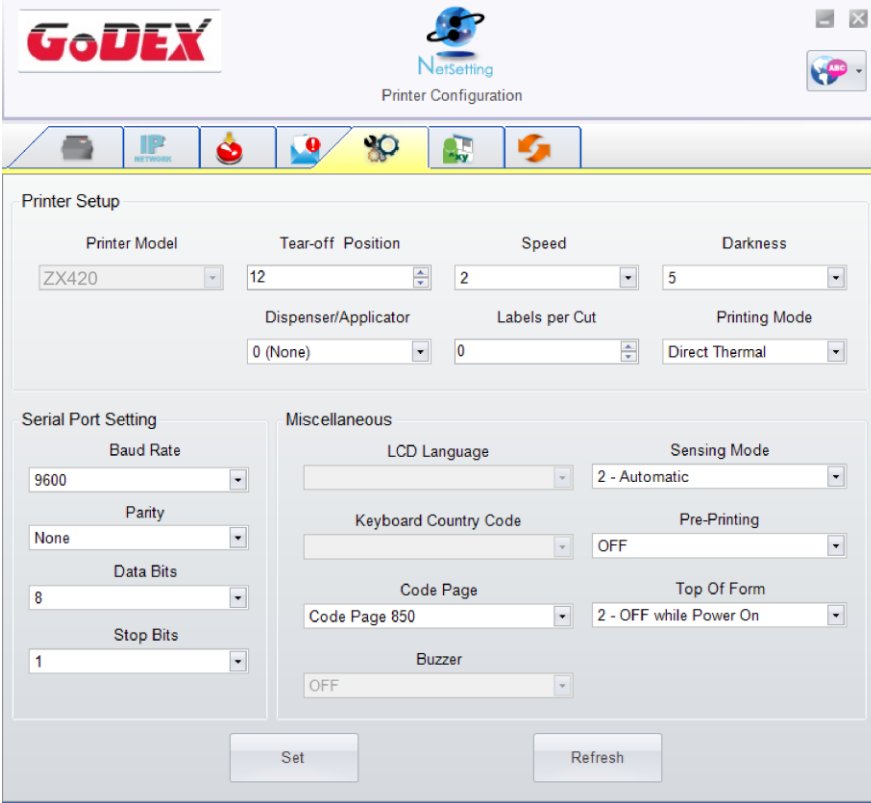

The image shows a software window titled "GoDEX NetSetting Printer Configuration". The window has a header bar with the GoDEX logo, a NetSetting logo, and a language dropdown menu. Below the header is a toolbar with icons for printer, network, help, settings, and other functions. The main content area is divided into two sections: "Printer Setup" and "Miscellaneous".

Printer Setup

Printer Model	Tear-off Position	Speed	Darkness
ZX420	12	2	5

Dispenser/Applicator	Labels per Cut	Printing Mode
0 (None)	0	Direct Thermal

Serial Port Setting

Baud Rate	Parity	Data Bits	Stop Bits
9600	None	8	1

Miscellaneous

LCD Language	Sensing Mode	Keyboard Country Code	Pre-Printing	Code Page	Top Of Form	Buzzer
	2 - Automatic		OFF	Code Page 850	2 - OFF while Power On	OFF


At the bottom of the window, there are two buttons: "Set" and "Refresh".

You can press "Set" button to apply the settings and "ReGet" button to refresh the setting values.

User Command

The “User Command” tab provides a communication interface for operator to control the printer. Input printer commands in “Input Command” window and press “Send Command” button, the commands will be sent to the printer.


For some commands that will return response message, the message will be displayed in “Output Message” window.

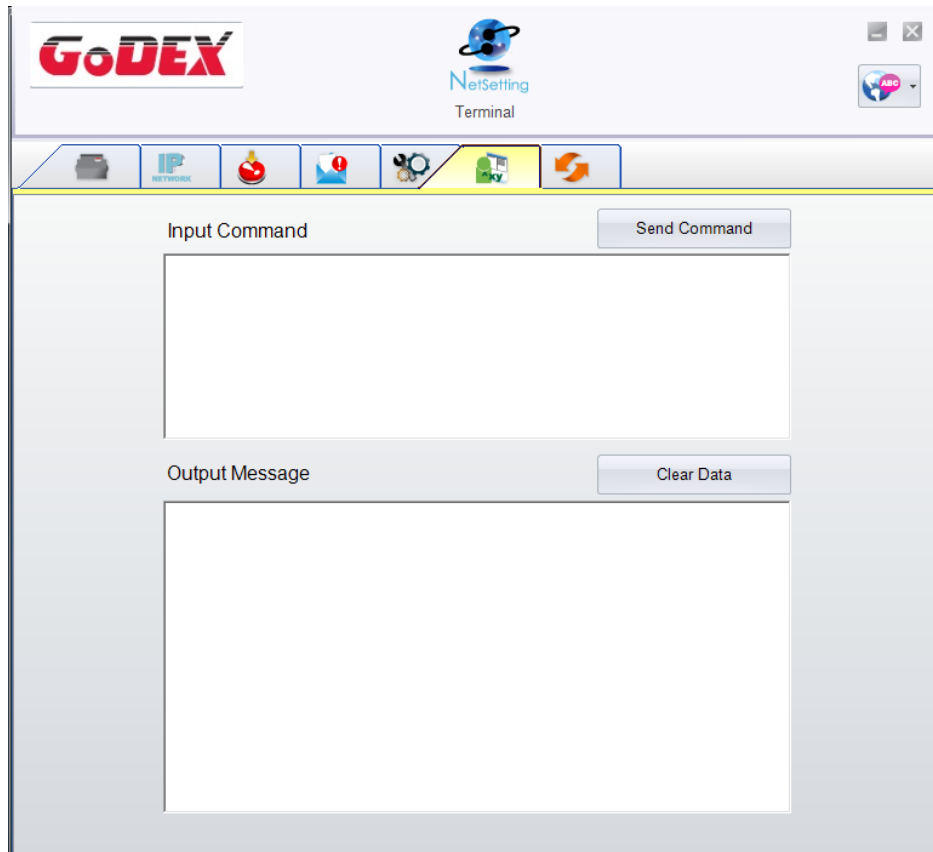

You can press “Set” button to apply the settings and “ReGet” button to refresh the setting values.

Firmware Download

On “Firmware Download” tab, the current version of printer firmware will be showed on the screen. If you need to update the printer firmware, just specify the file location of firmware file and press “Start Download Firmware” button. The printer firmware then can be updated remotely.

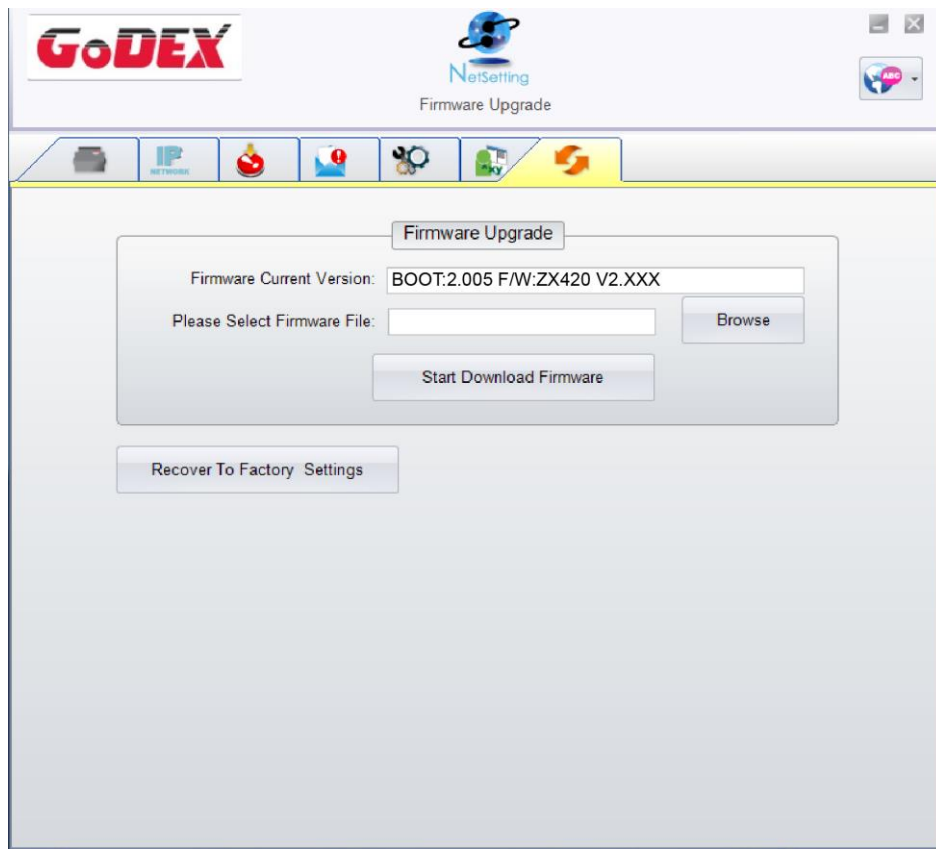


In addition to the firmware update, you can press “Recover To Factory Settings” button to restore the printer configurations back to factory default.

5 Accessories

5-1 Preparation Steps

Before installing the optional modules, please make some preparations as follows.

1. Turn off the printer :
Remember to switch off the printer before installing any module.
2. Open the printer cover

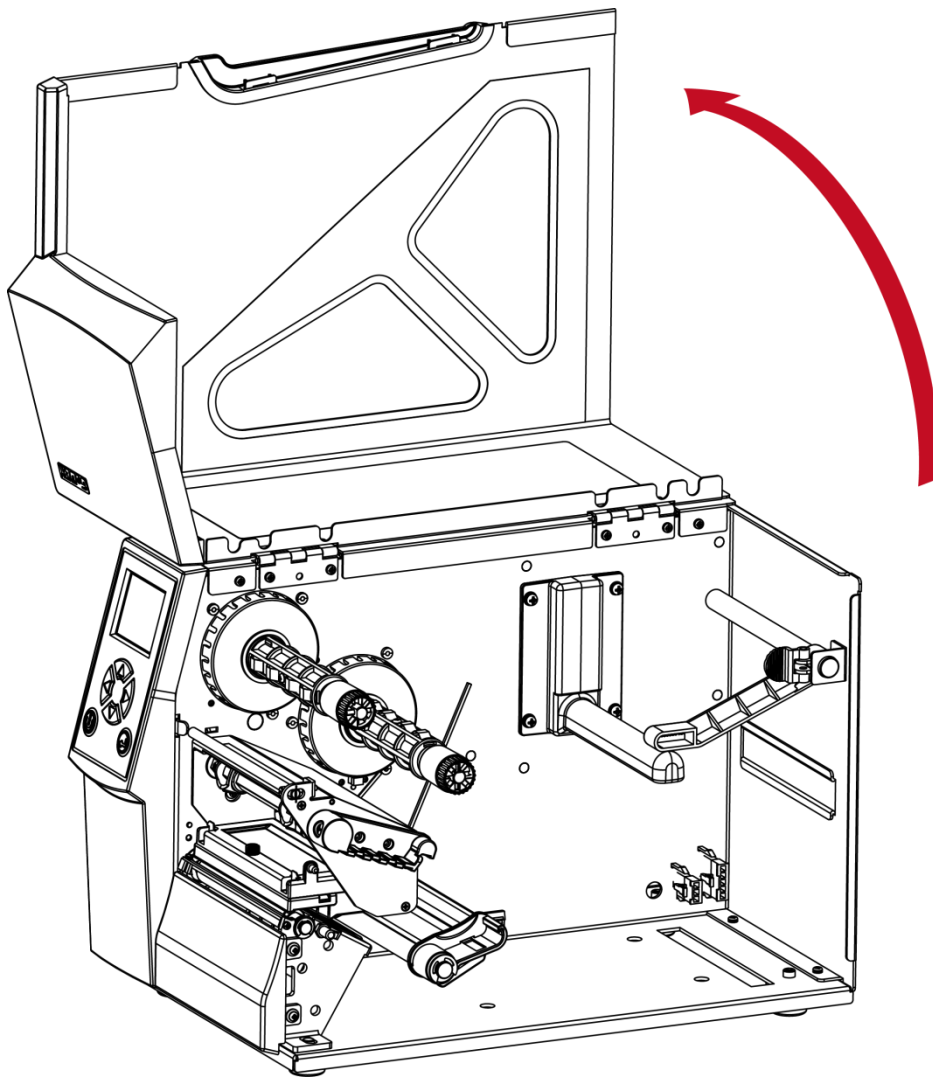


NOTE

-
- * Remember to switch off the printer before installing the cutter.
 - ** Do not use to cut adhesive labels! Glue residue will be left on the cutter blade and impair its functioning.

5-2 Installing the Cutter


5-2-1 Installing the Guillotine Cutter

Overview Of Guillotine Cutter

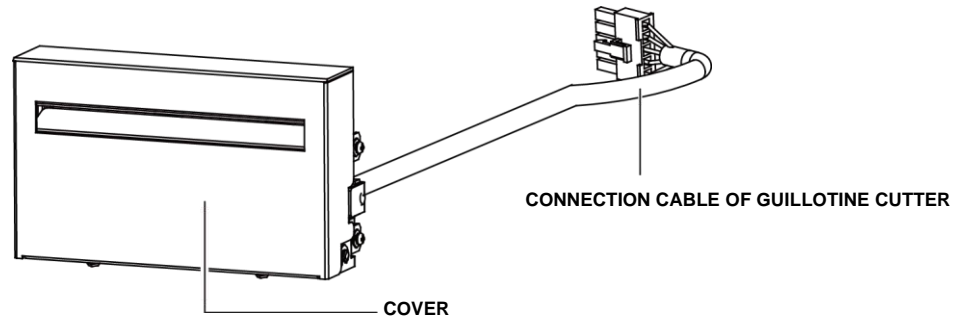

Steps for installing the Guillotine Cutter:


(Power off the printer and remove the power cable before installing the guillotine cutter module)

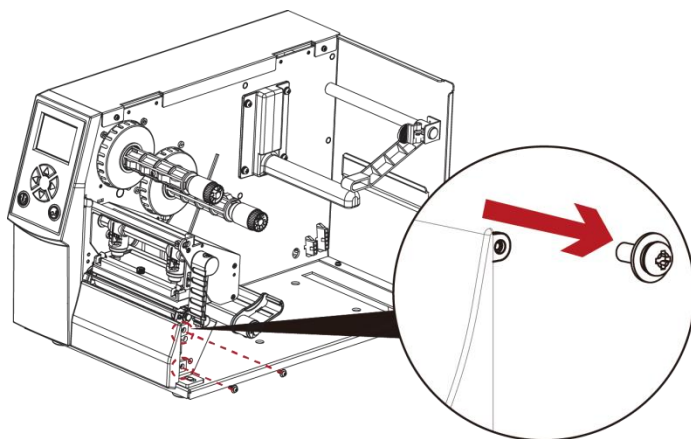


1. Remove the screw (as circle indicated).

NOTE


- * Power off the printer and remove the cable from the connector before installing guillotine cutter module.
- ** Labels with adhesive glue are not applicable or otherwise could result to malfunction.
- *** Applicable label size is at maximum width of 118mm and minimum length of 30mm. (Usage with labels outside this range will be excluded from warranty terms)
- **** Stop position (^Ex command) should set to 26~27 through GoLabel before using the guillotine cutter.

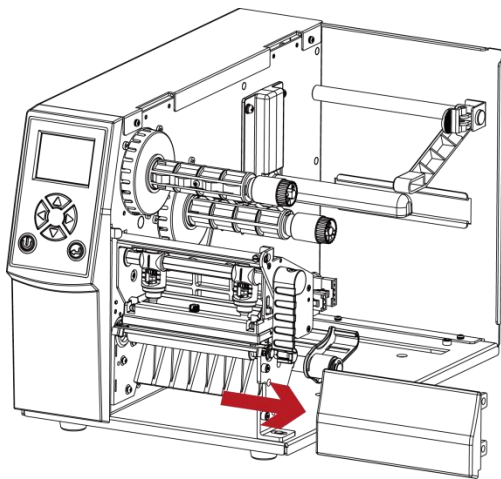


2. Remove the cover panel by pushing to right-hand side.

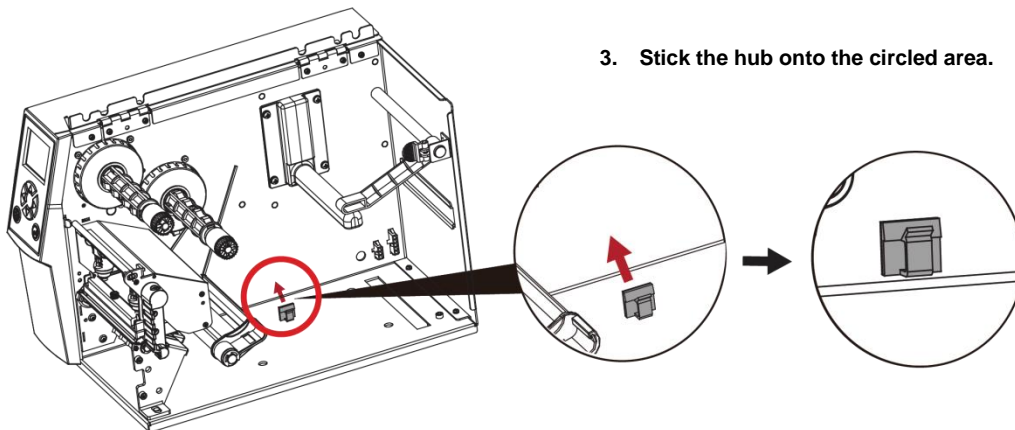

3. Stick the hub onto the circled area.


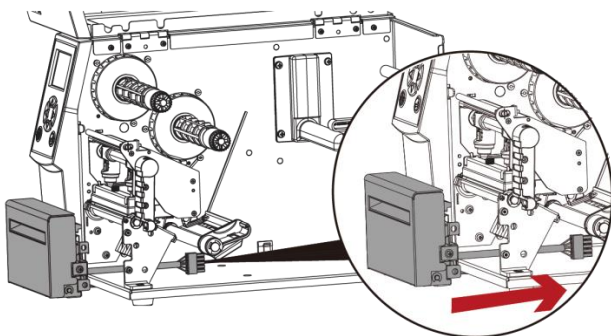


4. Direct the cutter's cable through the platen bracket of the printer.

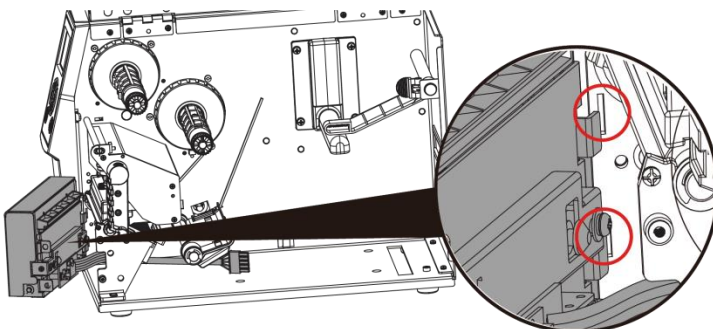


5. Engage the catches of the cutter module firmly into the printer.

6. Tighten the screws and plug the cutter's cable into the printer in the direction of the arrow.

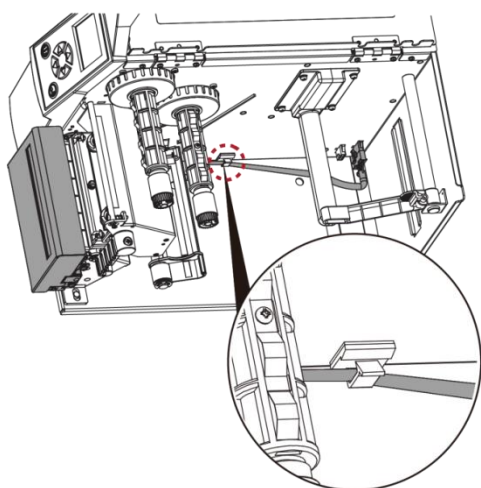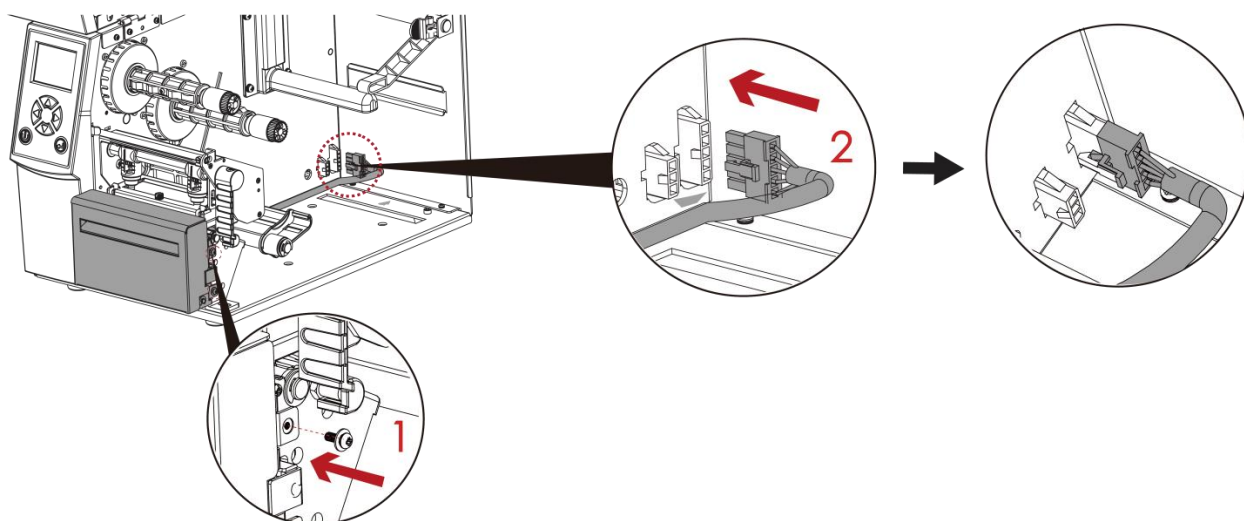

7. Put the cable into the hub.

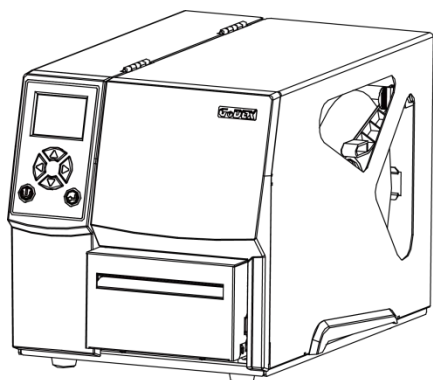


8. Close printer cover.

NOTE

* Printer power should be off when plugging the connector to avoid malfunction


5-2-2 Installing the Rotary Cutter

Overview Of Rotary Cutter

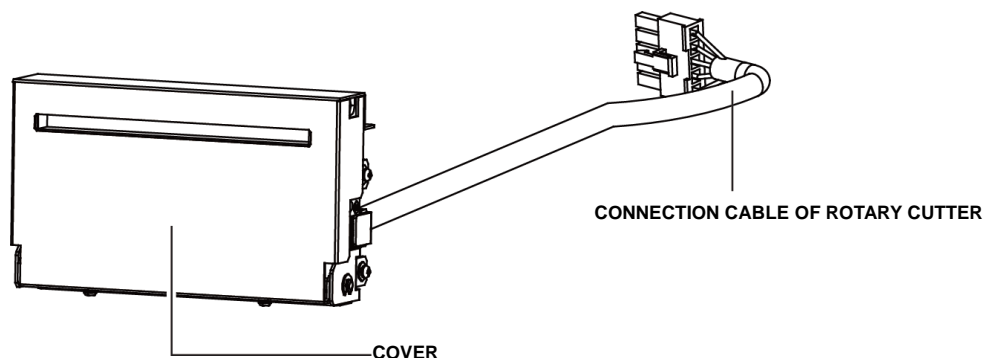


Steps for installing the Rotary Cutter:

(Power off the printer and remove the power cable before installing the guillotine cutter module)

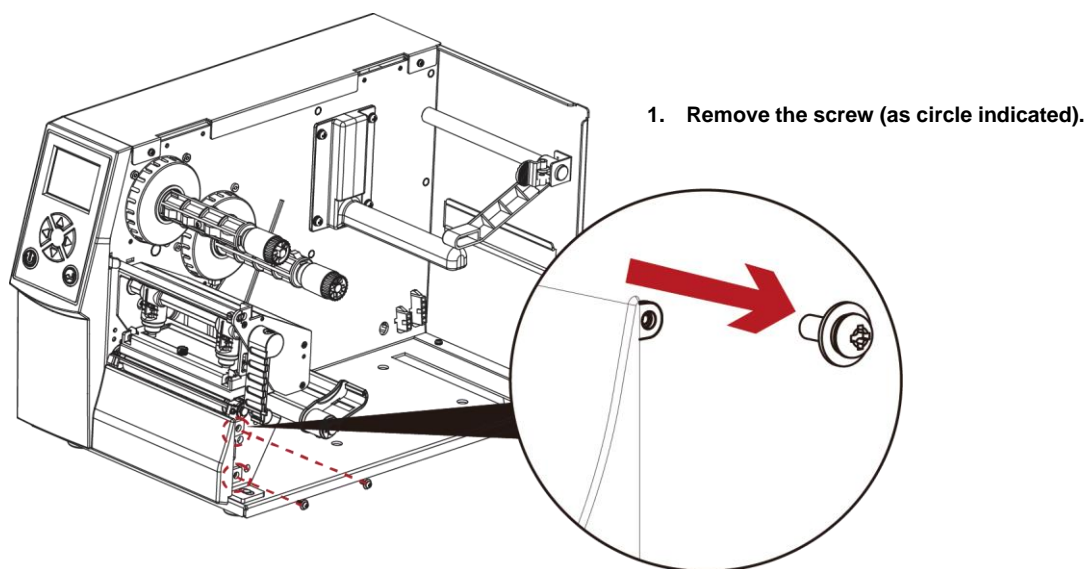


NOTE


- * Power off the printer and remove the cable from the connector before installing rotary cutter module.
- ** Labels with adhesive glue are not applicable or otherwise could result to malfunction.
- *** Applicable label size is at maximum width of 118mm and minimum length of 30mm. (Usage with labels outside this range will be excluded from warranty terms)
- **** Stop position (^Ex command) should set to 29~30 before using the rotary cutter.

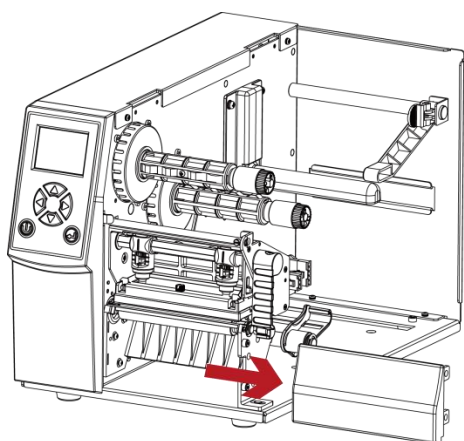


2. Remove the cover panel by pushing to right-hand side.

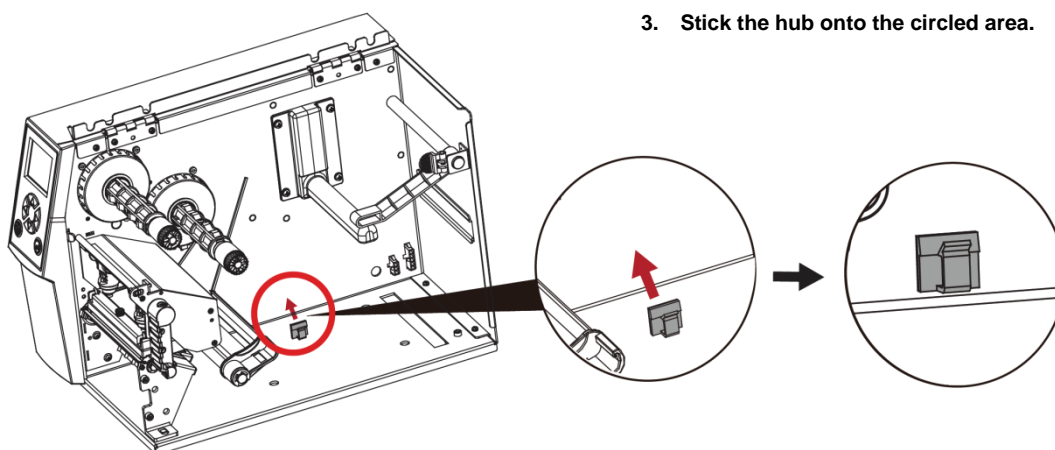

3. Stick the hub onto the circled area.

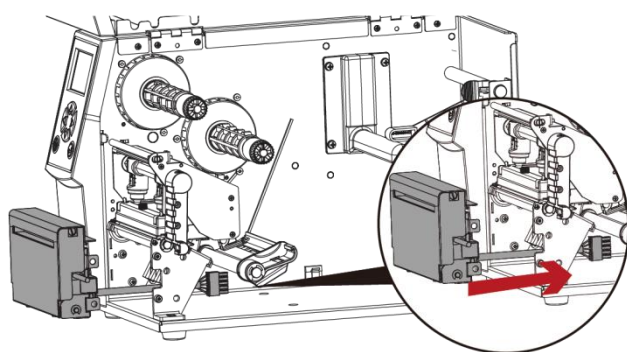


4. Direct the cutter's cable through the platen bracket of the printer.

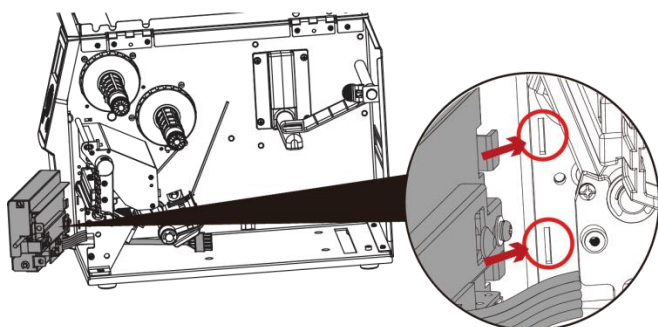


5. Engage the catches of the cutter module firmly into the printer.


6. Plug the cutter's cable into the printer in the direction of the arrow.

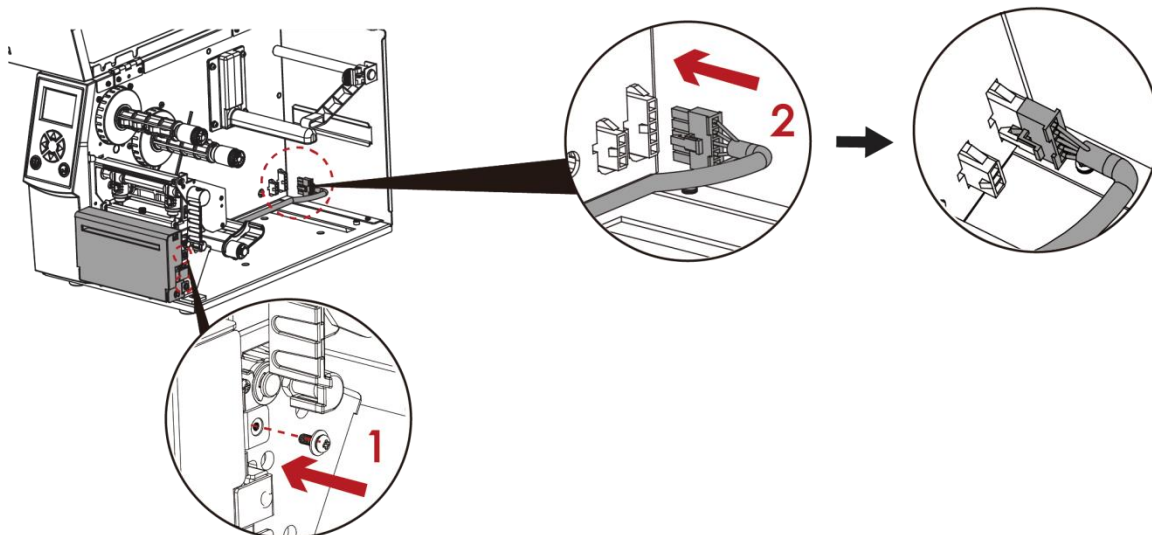

7. Put the cable into the hub.

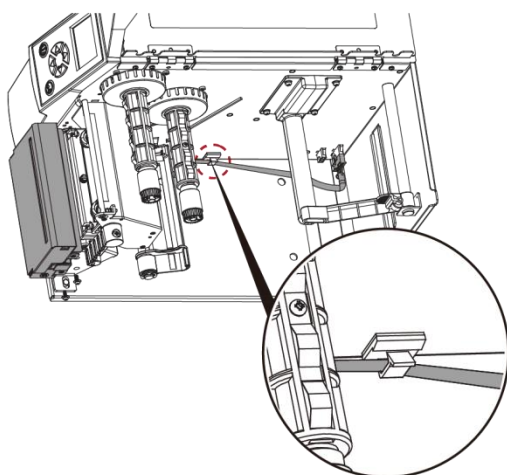

8. Close printer cover.

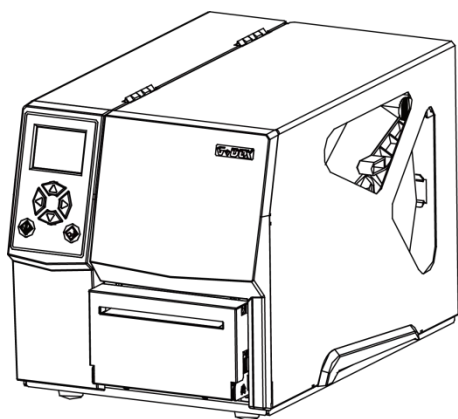


NOTE

* Printer power should be off when plugging the connector to avoid malfunction


5-3 Installing The Label Dispenser

The Overview of the Label Dispenser

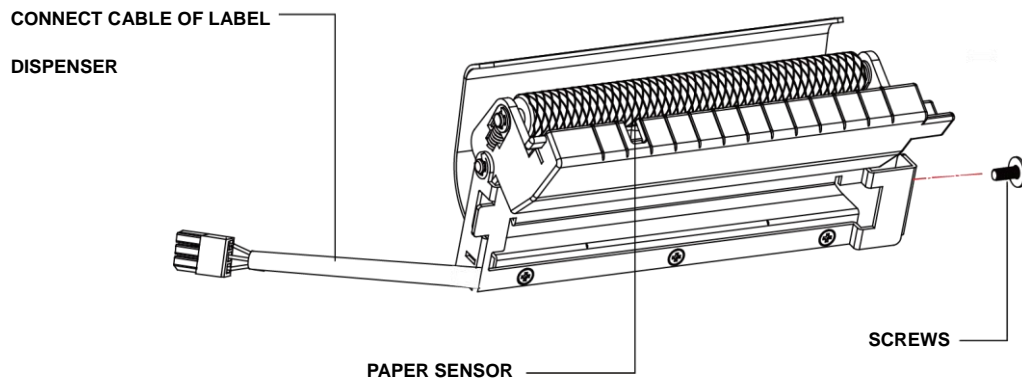


Steps for installing the Label Dispenser:

(Power off the printer and remove the power cable before installing the label dispenser module)

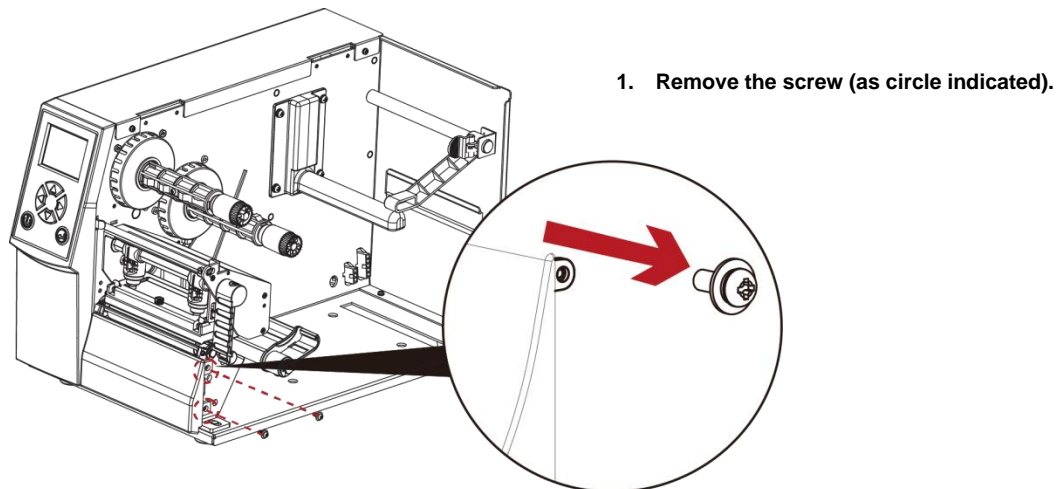


NOTE


- * A label liner thickness of $0.006 \text{ mm} \pm 10\%$ and a weight of $65 \text{ g/m}^2 \pm 6\%$ are recommended.
- ** The label dispenser will take labels up to a max. width of 110 mm, and labels should be at least 25 mm high.
- *** When using the label dispenser, set the stop position to 9 mm.

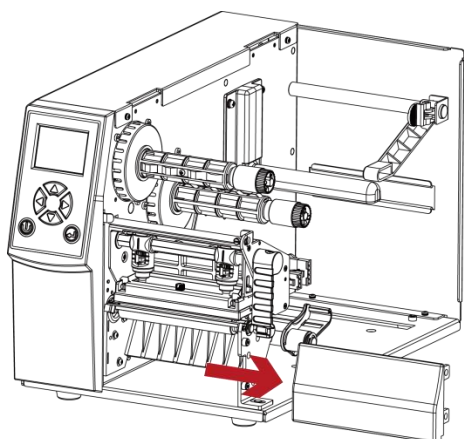


2. Remove the cover panel by pushing to right-hand side.

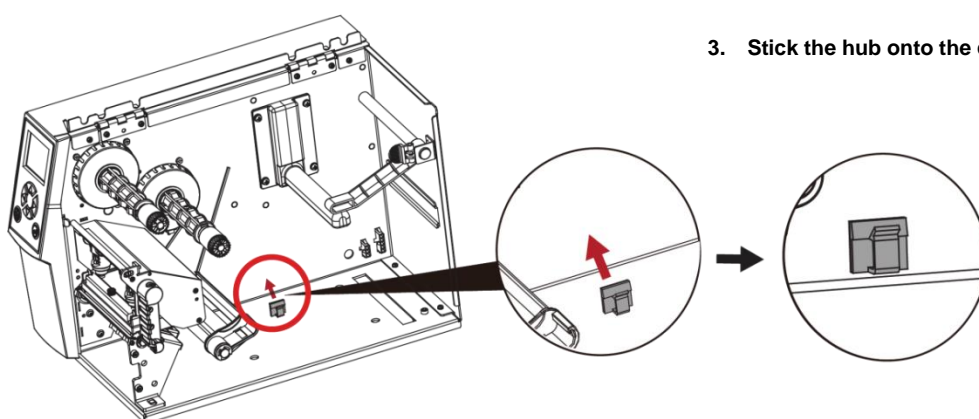

3. Stick the hub onto the circled area.

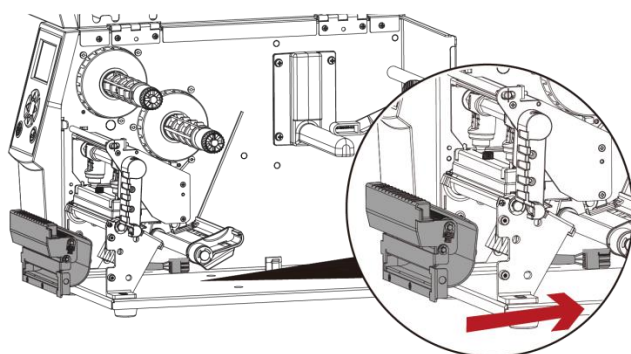


4. Direct the label dispenser's cable through the platen bracket of the printer.

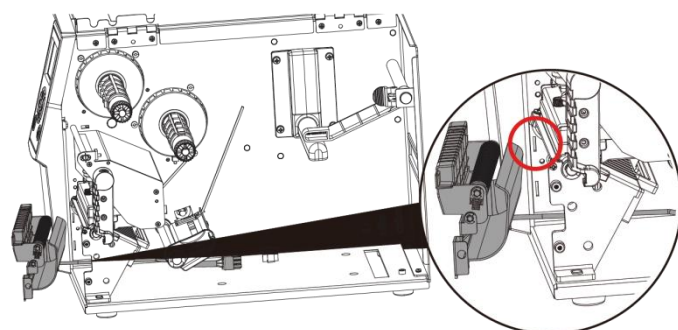


5. Engage the catches of the label dispenser module firmly into the printer.


6. Plug the label dispenser's cable into the printer in the direction of the arrow.

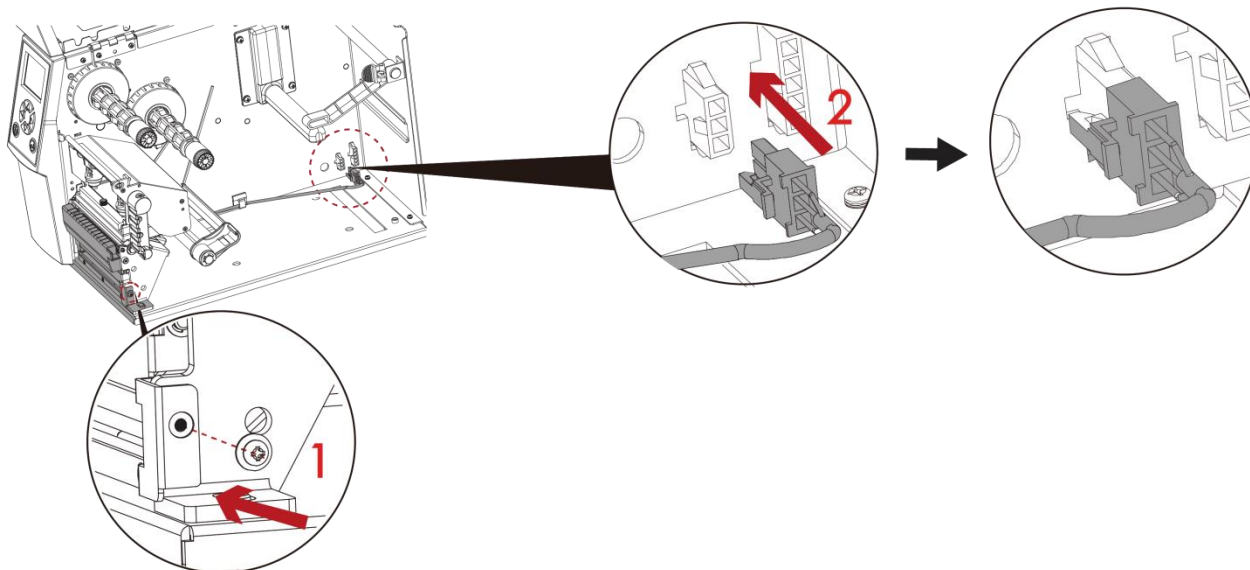

7. Put the cable into the hub.

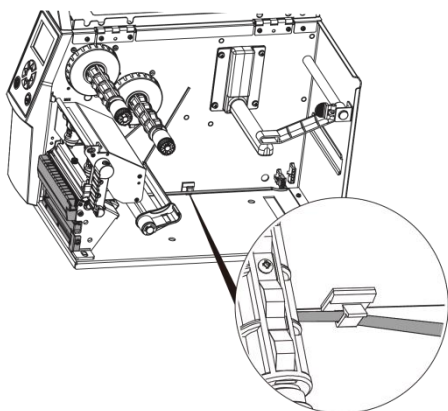


8. Close printer cover.

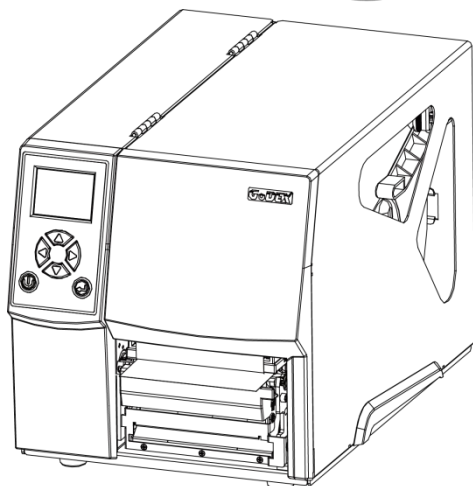


NOTE

* Printer power should be off when plugging the connector to avoid malfunction


5-4 Installing The WiFi Module

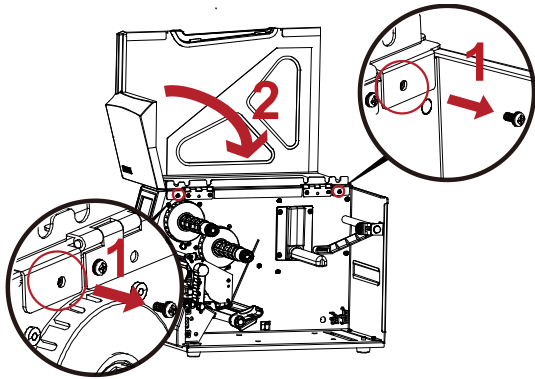


Step1. Remove the screw on the left side cover.

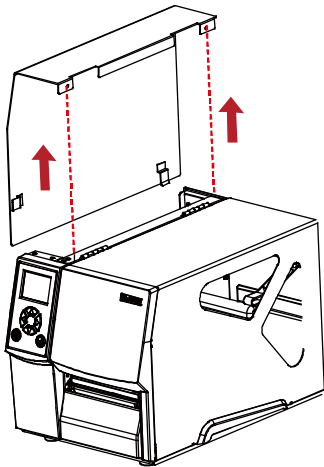


Step2. Disassemble the left side cover.

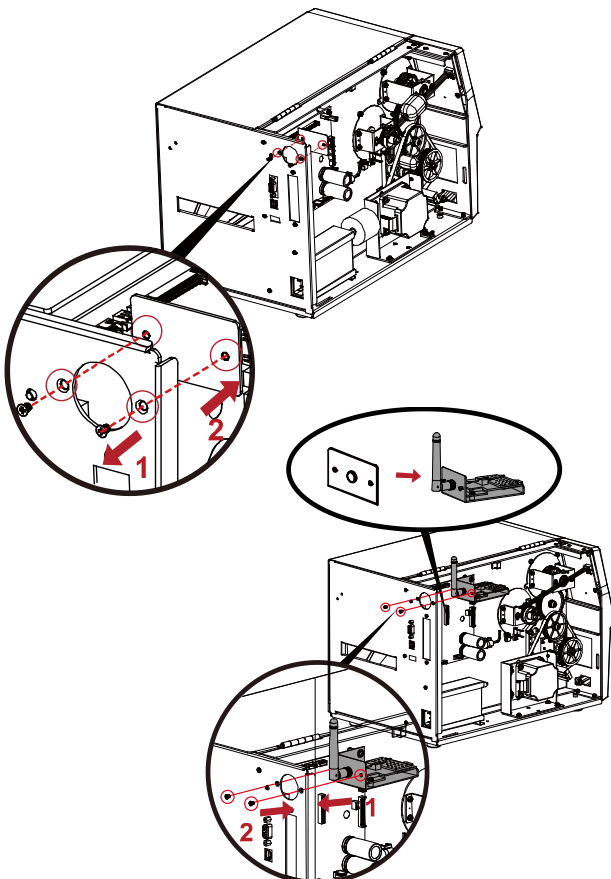


Step3. Install the WiFi Module.

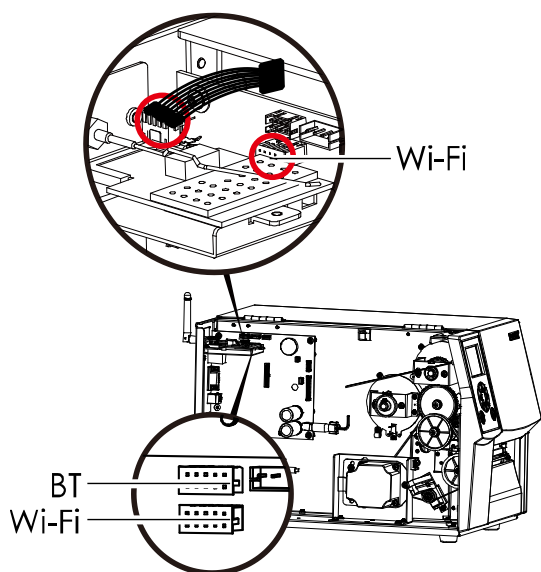


Step4.Connect the cable.

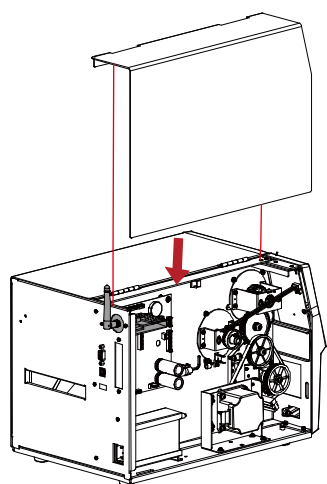


Step5.Install the left side cover.

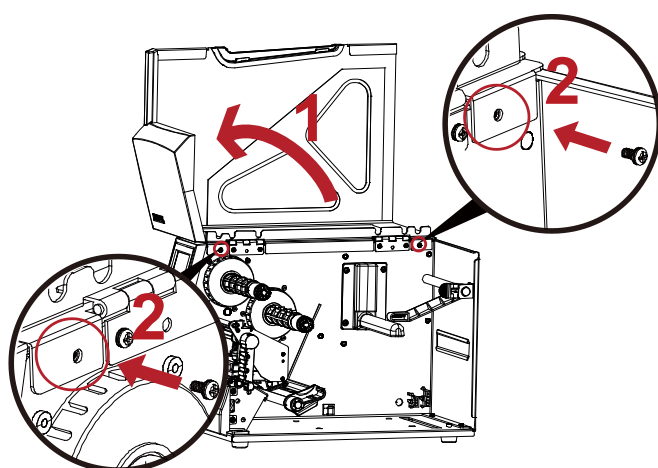


Step6. Lock the left cover screws.

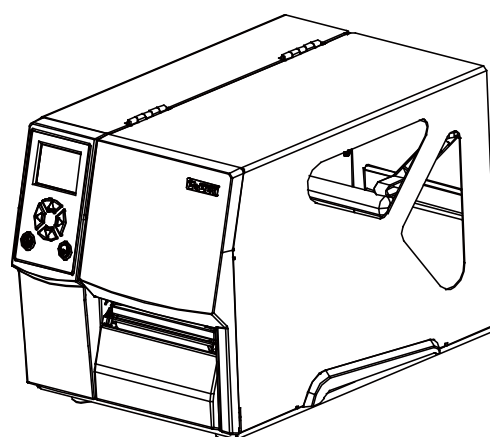


5-5 Installing The Bluetooth Module

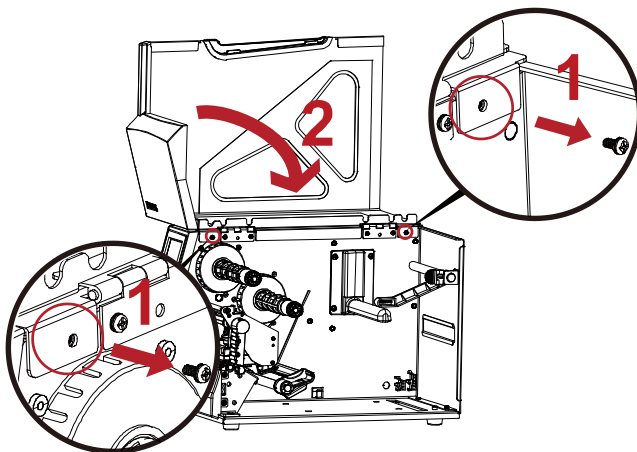



Step1. Remove the screw on the left side cover.

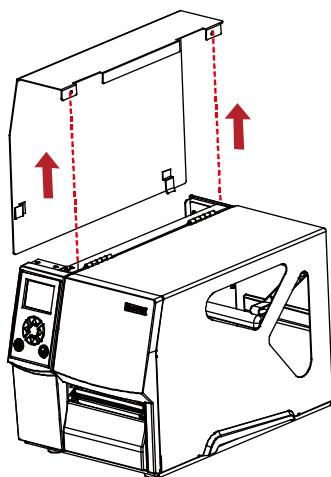


Step2. Disassemble the left side cover.

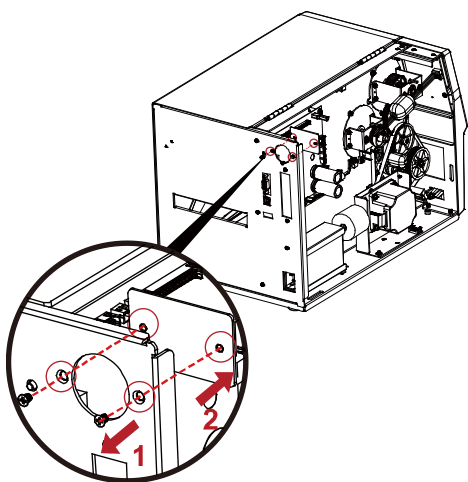


Step3. Install the Bluetooth Module.

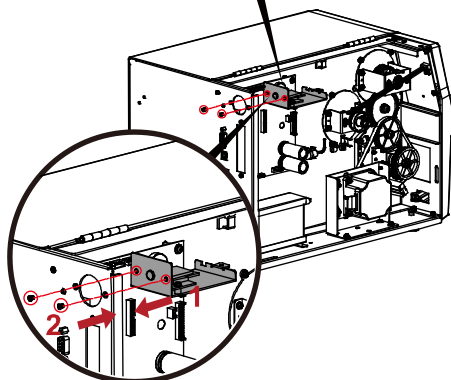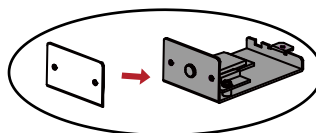


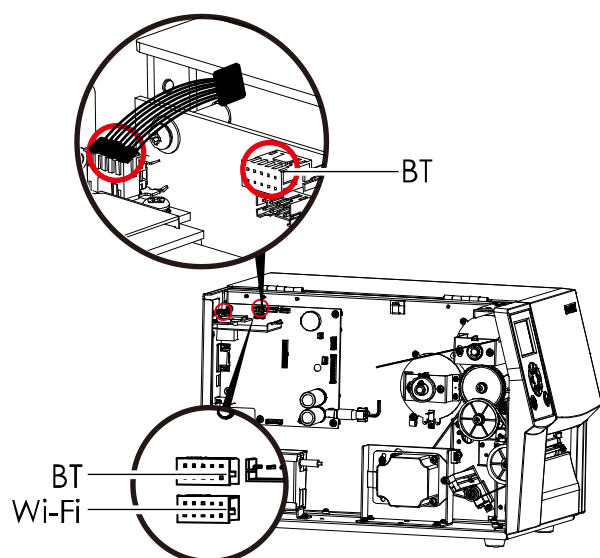


Step4. Connect the cable.

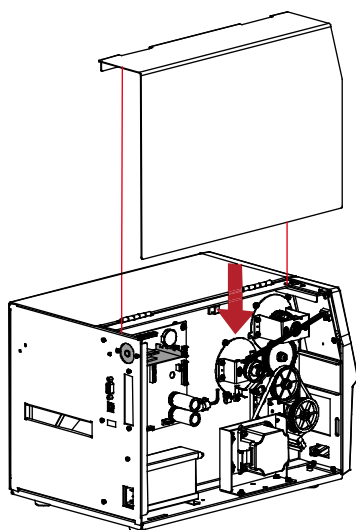

Step5. Install the left side cover.

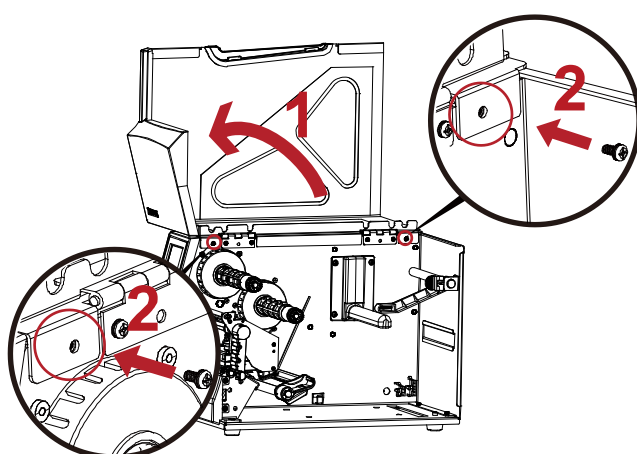


Step6. Lock the left cover
screws.

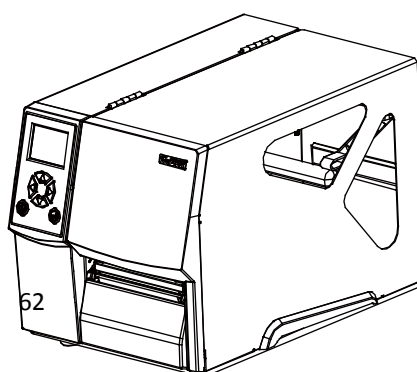


6 Maintenance and Adjustment


6-1 Installing / removing the print head module

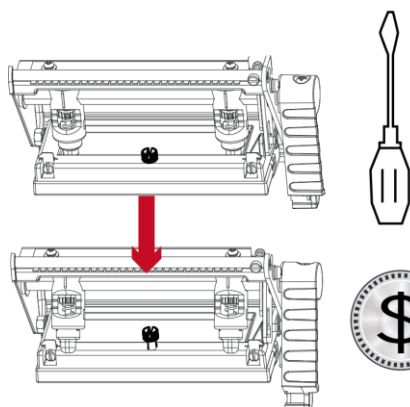


1. Open the printer cover.

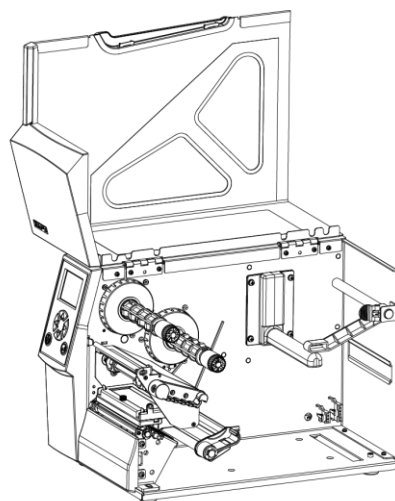

2. Using a screwdriver or a coin, loosen the screw to take out the TPH module.

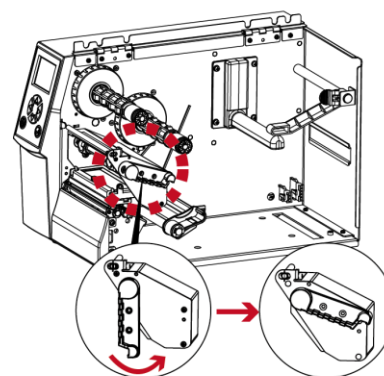

3. Turn the print head counterclockwise to a top right position

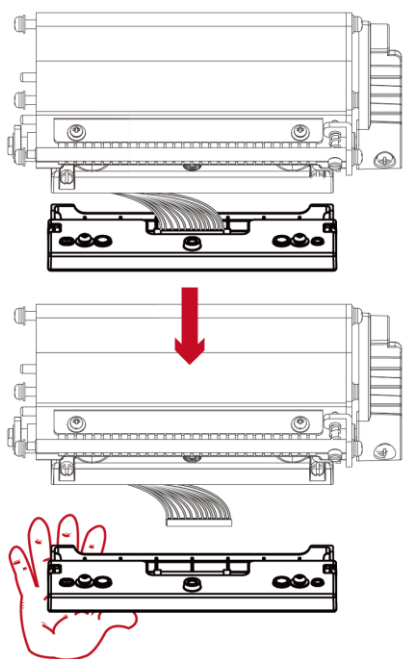


4. Turn the print head counterclockwise to a top right position

NOTE

* Remember to switch off the printer before removing the print head module.

6-2 Adjusting the print line

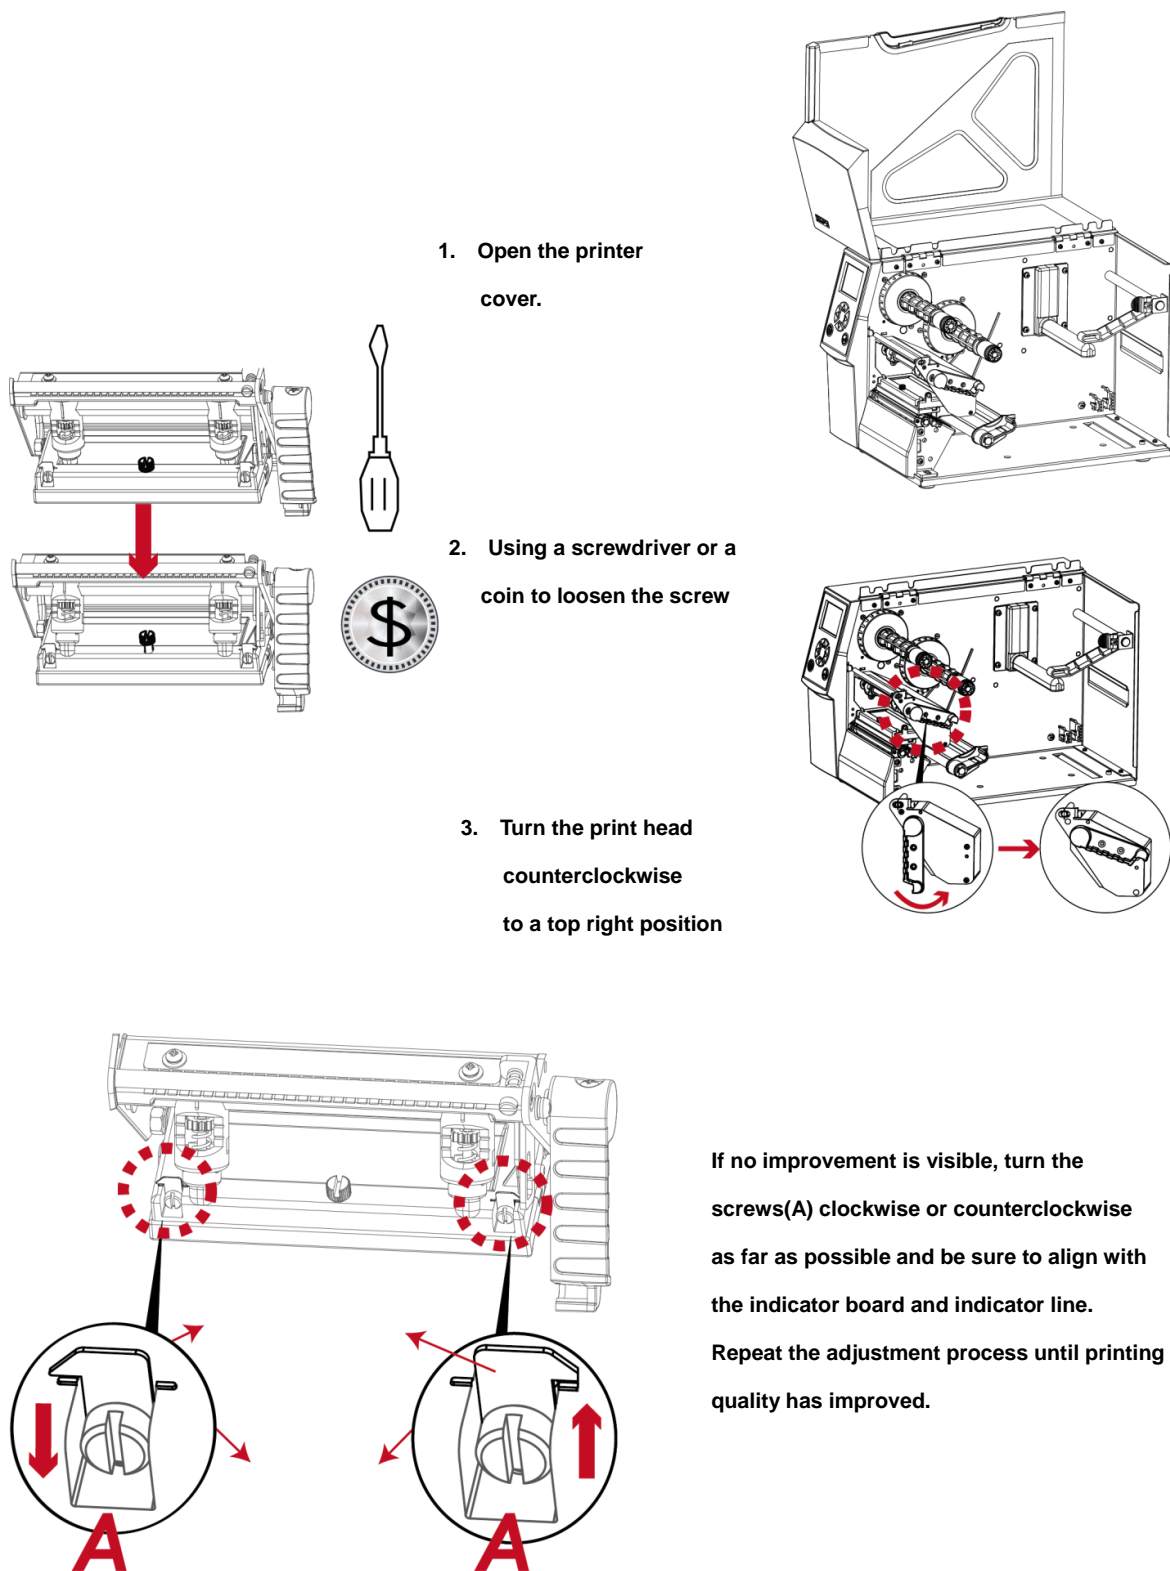

6-3 Adjusting ribbon tension

You can adjust the ribbon tension by turning the ribbon shaft knob (see illustration) clockwise or counterclockwise.

There are 4 possible settings, which is marked on the ribbon supply hub.

1 : Tension is the highest


4 : Tension is the lowest

If the tension is so low that the ribbon does not move forward, you need to reduce the tension of the ribbon supply hub.

To set the tension, press in the knob and turn it clockwise or counterclockwise as required.

Increasing the tension of the ribbon rewind hub will remove any wrinkling of the ribbon during printing, which results from the use of different ribbon materials. (For details about the wrinkling/creasing of ribbons, see Section 6-6.)

If you are using a very narrow ribbon, the printer may not move the label stock forward (particularly with a ribbon that is less than 2" wide). In that case, reduce the tension by turning the knob of the ribbon supply hub counterclockwise.

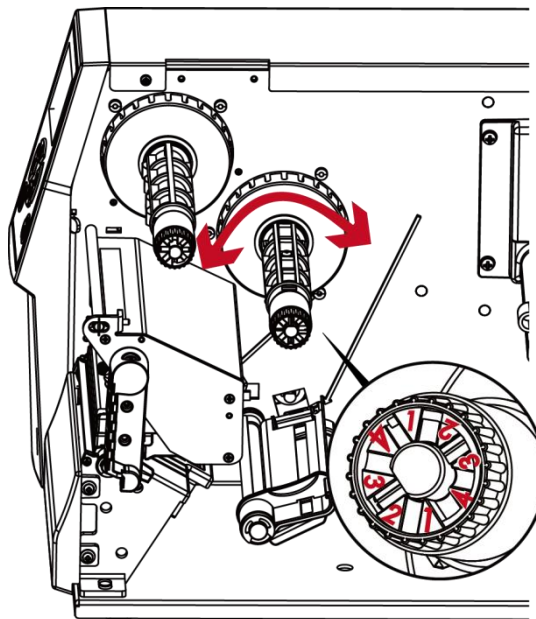


6-4 Cleaning the thermal print head

Dirt on the print head or ribbon may result in inadequate print quality

(there are only partial images on the label). The printer cover should therefore be kept closed when possible.

Keeping dirt and dust away from the paper or labels ensures a good print quality and a longer lifespan of the print head. Here is how you clean the print head:

1. Switch off the printer.
2. Open the printer cover.
3. Remove the ribbon.
4. Release the print head by turning the print head release lever.
5. To remove any label residue or other dirt from the print head
(see Red arrow), please use a soft lint-free cloth dipped in alcohol to wipe.

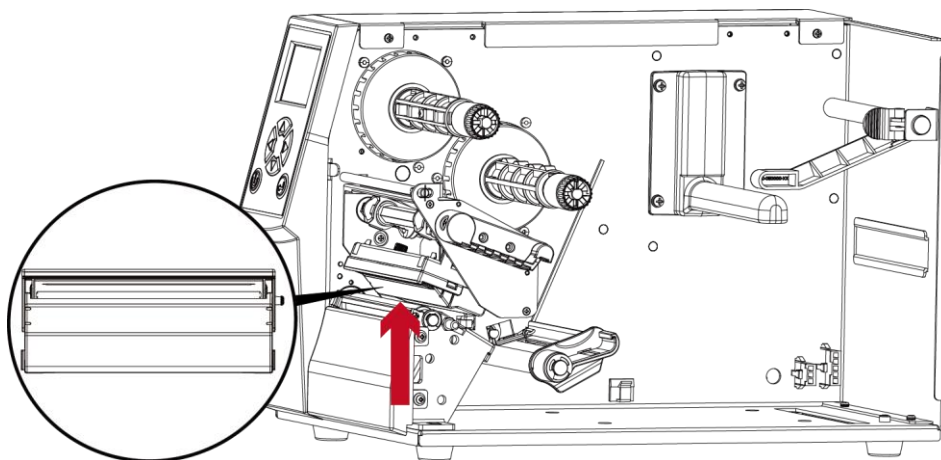


NOTE


- * The print head should be cleaned once a week.
- ** Please make sure that there are no metal fragments or other hard particles on the soft cloth used to clean the print head.

6-5 Adjusting the balance and print head tension

1. Open the printer

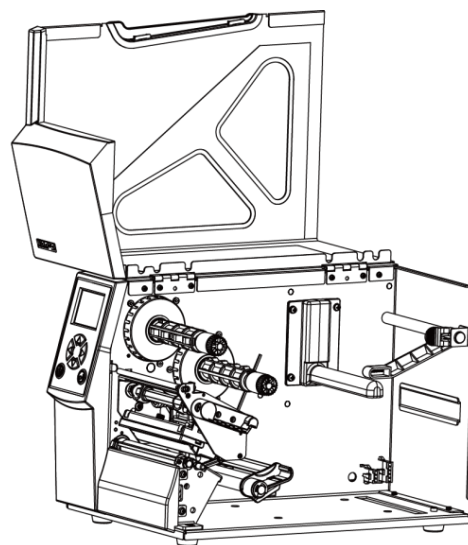

2. Using a screwdriver or a coin to loosen the screwcoin to loosen the screw

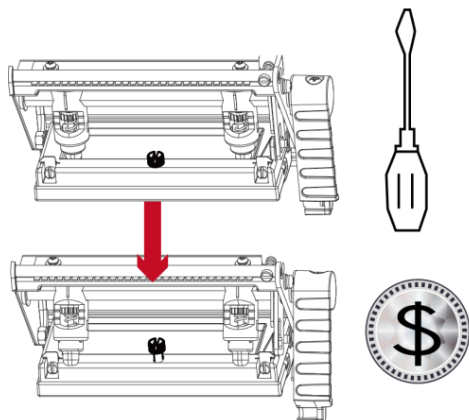

When using a variety of label stock

and ribbons, the ink may not be evenly distributed.

If there is no printed image on one side of the paper,

or the ribbon wrinkles, the print head pressure

must be readjusted using the TPH spring boxes.

Move the TPH spring boxes as shown in the illustration


to change the print head pressure.

The wider the label you are using, the further apart

the TPH spring boxes must be moved away from

each other. If there is no quality improvement,


you need to change the pressure on the TPH spring boxes.

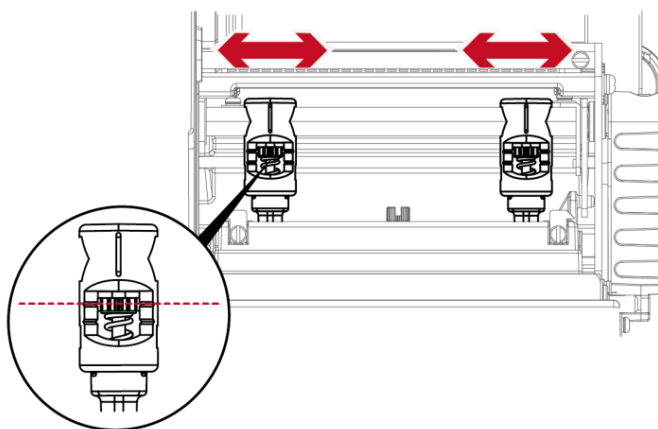

Turning the screw left increases the pressure,

while turning it right reduces the pressure.

Be sure not to turn the screw so that it goes below Mark(B).

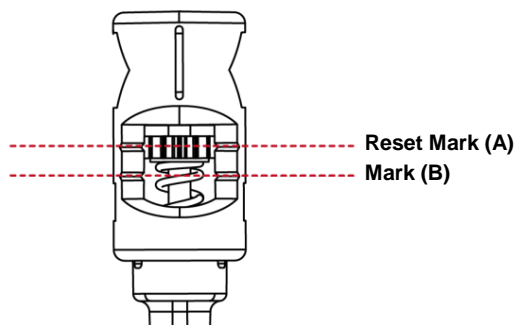

6-6 Ribbon shield settings

The use of different ribbon materials may cause wrinkling of the ribbon, which in turn affects the print result as illustrated by the examples in (a) and (b). To change the print quality, you can adjust the ribbon shield screws.

If your print result looks like the example in (a), you need to turn ribbon shield screw clockwise.

If your print result looks like the example in (b), you need to turn ribbon shield screw counterclockwise.



(a)





(b)

To keep track of the change in print quality, you should adjust the screws by half a turn at a time.

Print a test page. If there is no improvement in the print result, turn the screw by another half turn.


Do not turn the adjustment screw more than two full turns (360°).

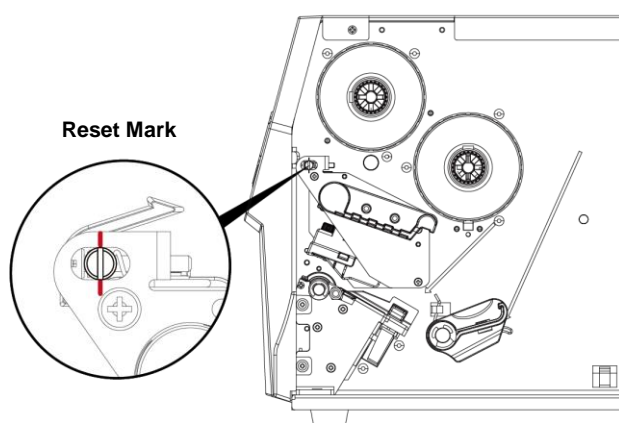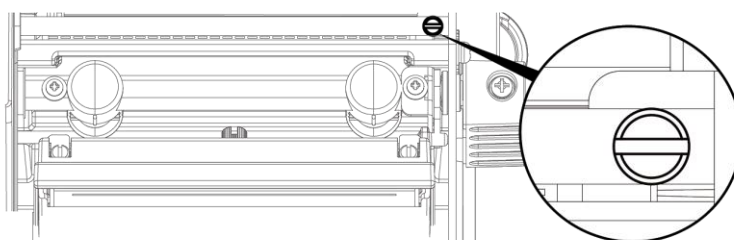

NOTE

- * If you adjust the screw by more than two full turns, the paper feed may no longer function correctly. In that case, unscrew the ribbon shield screws to align the reset mark and restart the adjustment process.



6-7 Cutter settings

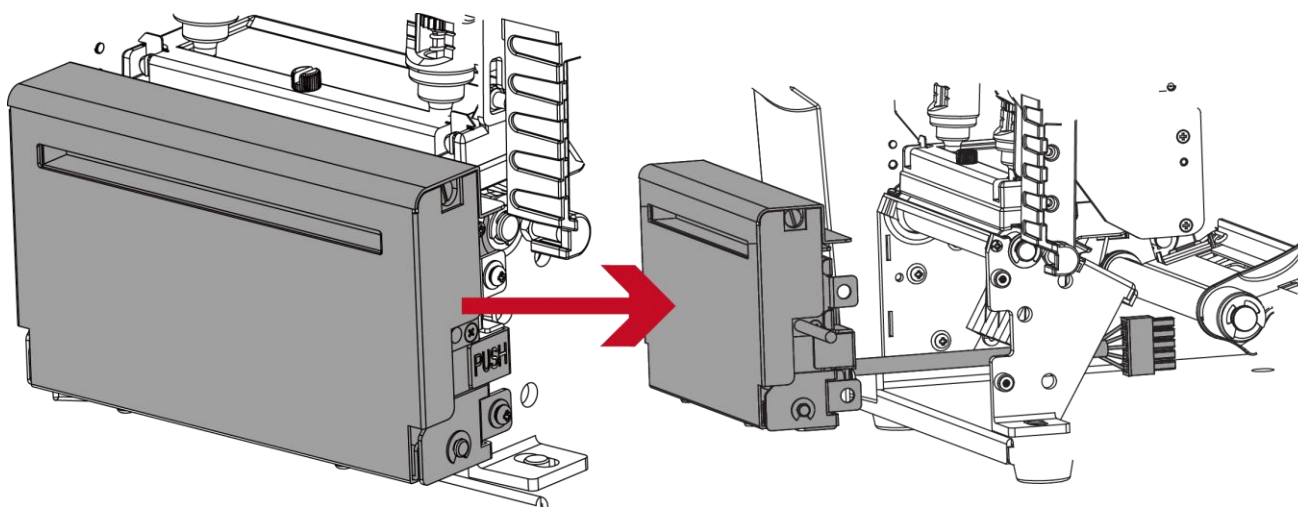

Switch off the printer before removing the CUTTER.

(Remove or install cutter refer to "accessories" in Section 5)

Unscrew the screw at the bottom of cutter .

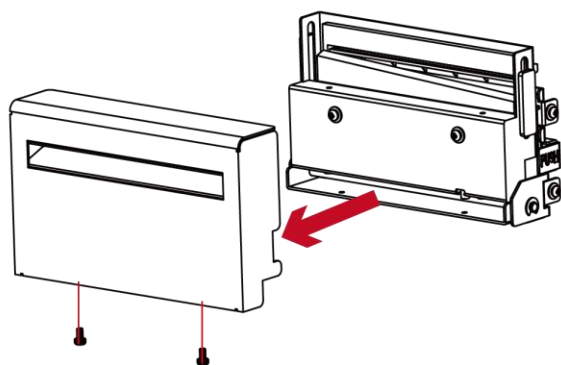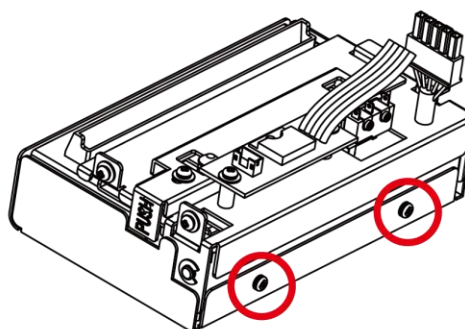

Remove the cutter cover.

Clean and remove jammed paper.

Reinstall CUTTER back onto printer.

NOTE

* Remember to switch off the printer before removing the CUTTER.

** The label medium should be at least 30 mm long to ensure correct functioning of the cutter.

6-8 Troubleshooting

Problem	Solution
The printer is switched on but the LED does not light up.	<ul style="list-style-type: none"> ◆ Check the power supply. Please see the Section 2.4
The LED lights up red and printing is interrupted.	<ul style="list-style-type: none"> ◆ Check the software settings (driver settings) or command codes. ◆ Look for the error alert in the table in Section 3.3. Error Alerts. ◆ Check whether the print mechanism is closed correctly. Please see the Section 3.3
The label stock passes through the printer but no image is printed.	<ul style="list-style-type: none"> ◆ Please make sure that the label stock is loaded the right side up and that it is the suitable material. ◆ Choose the correct printer driver. ◆ Choose the correct label stock and a suitable printing mode.
The label stock jams during printing.	<ul style="list-style-type: none"> ◆ Clear the paper jam. Remove any label material left on the thermal print head and clean the print head using a soft lint-free cloth dipped in alcohol. Please see the Section 6.1
There is no printed image on some parts of the label.	<ul style="list-style-type: none"> ◆ Check whether there is any label material or ribbon stuck to the the print head. ◆ Check for errors in the application software. ◆ Check whether the starting position has been set correctly. ◆ Check the ribbon for wrinkles.
There is no printed image on part of the label or the image is blurred.	<ul style="list-style-type: none"> ◆ Check the thermal print head for dust or other dirt. ◆ Use the internal "~T" command to check whether the thermal print head will carry out a complete print job. ◆ Check the quality of the print medium.
The printed image is positioned incorrectly.	<ul style="list-style-type: none"> ◆ Check whether there is paper or dust covering the sensor. ◆ Check whether the label stock is suitable. Contact your supplier. ◆ Check the paper guide settings.
Skipping labels during printing.	<ul style="list-style-type: none"> ◆ Check the label height setting. ◆ Check whether there is dust covering the sensor. ◆ Run the auto-detection function. Please see the Section 3.2
The printed image is blurred.	<ul style="list-style-type: none"> ◆ Check the darkness setting. ◆ Check the thermal print head for dust or dirt. Please see the Section 6.1
The cutter does not cut off the labels in a straight line.	<ul style="list-style-type: none"> ◆ Check whether the label stock is positioned straight.
The cutter does not cut off the labels completely.	<ul style="list-style-type: none"> ◆ Check whether the label is more than 0.2 mm thick.
When using the cutter, the labels are not fed through or cut off incorrectly.	<ul style="list-style-type: none"> ◆ Check whether the cutter has been correctly installed. ◆ Check whether the paper guides are functioning correctly.
The label dispenser is not functioning normally.	<ul style="list-style-type: none"> ◆ Check whether there is dust on the label dispenser. ◆ Check whether the label stock is positioned correctly.

NOTE

* If any problems occur that are not described here, please contact your dealer.

APPENDIX-PRODUCT SPECIFICATIONS

Model Name		ZX420	ZX420i	ZX430	ZX430i
Print Method		Thermal Transfer / Direct Thermal			
Resolution		203 dpi (8 dots/mm)		300 dpi (12 dot/mm)	
Print Speed		6 ips (152 mm/s)		4 ips (102 mm/s)	
Print Width		4.25" (108mm)		4.16" (105.7mm)	
Print Length		Min. 0.16" (4 mm)** ; Max. 157.44" (3999mm)		Min. 0.16" (4 mm)** ; Max. 73.19"(1859 mm)	
Processor		32-bit RISC CPU			
Memory	Flash	128 MB Flash (60 MB for user storage)			
	SDRAM	32 MB			
Sensor Type		Adjustable reflective sensor and transmissive sensor, left aligned			
Media	Type	Continuous form, gap labels, black mark sensing, and punched hole; label length set by auto sensing or programming			
	Width	Tear : Min. 1" (25.4 mm) – Max. 4.64" (118 mm) Cutter : Max. 4.61" (117 mm) Dispenser / Rewind : Max. 4.64" (118 mm)			
	Thickness	Min. 0.003" (0.076 mm) – Max. 0.01" (0.25 mm)			
	Label roll diameter	Max. 8" (203.2 mm) with 3" (76.2 mm) core Max. 6" (152.4 mm) with 1.5" (38.1 mm) core Max. 5" (127 mm) with 1" (25.4 mm) core			
	Core diameter	Min. 1" (25.4 mm) – Max. 3" (76.2 mm)			
	Core diameter	1" (25.4 mm)			
Ribbon	Types	Wax, wax/resin, resin			
	Length	Max. 1476' (450 m)			
	Width	Min. 1.18" (30 mm) – Max. 4.33" (110 mm)			
	Ribbon roll diameter	3" (76.2 mm)			
Core diameter	1" (25.4 mm)				
Printer Language		EZPL, GEPL, GZPL, GDPL auto switch			
Software	Label design software	GoLabel (for EZPL only)			
	Driver	Vista, Windows 7, Windows 8 & 8.1, Windows 10, Windows Server 2008 R2, 2012, 2012 R2, 2016, 2019, MAC, Linux			
	SDK	Win CE, .NET, Windows Vista, Windows 7, Windows 8 & 8.1, Windows 10, Android, Mac, iOS			
Resident Fonts	Bitmap Fonts	6, 8, 10, 12, 14, 18, 24, 30, 16X26 and OCR A & B Bitmap fonts 90°, 180°, 270° rotatable, single characters 90°, 180°, 270° rotatable Bitmap fonts 8 times expandable in horizontal and vertical directions			
	TTF Fonts	TTF Fonts (Bold / Italic / Underline). 0°,90°, 180°, 270° rotatable			
Download Fonts	Bitmap Fonts	90°, 180°, 270° rotatable, single characters 90°, 180°, 270° rotatable			
	Asian Fonts	16x16, 24x24. Traditional Chinese (BIG-5), Simplified Chinese(GB2312), Japanese (S-JIS), Korean (KS-X1001) 90°, 180°, 270° rotatable and 8 times expandable in horizontal and vertical directions			
	TTF Fonts	TTF Fonts (Bold / Italic / Underline). 0°,90°, 180°, 270° rotatable			
Barcodes	1-D Bar Codes	China Postal Code, Codabar, Code 11, Code 32,Code 39, Code 93, Code 128 (subset A, B, C), EAN-8/EAN-13 (with 2 & 5 digits extension), EAN 128, FIM, German Post Code, GS1 DataBar, HIBC, Industrial 2 of 5 , Interleaved 2-of-5 (I 2 of 5), Interleaved 2-of-5 with Shipping Bearer Bars, ISBT-128, ITF 14, Japanese Postnet, Logmars, MSI, Postnet, Plessey, Planet 11 & 13 digit, RPS 128, Standard 2 of 5, Telepen, Matrix 2 of 5, UPC-A/UPC-E (with 2 or 5 digit extension), UCC/EAN-128 K-Mart and Random Weight			
	2-D Bar Codes	Aztec code, Code 49,Codablock F , Datamatrix code, MaxiCode, Micro PDF417, Micro QR code, PDF417,QR code, TLC 39, GS1 Composite			
Code Pages		Codepage 437, 737,850, 851, 852, 855, 857, 860, 861, 862, 863, 865, 866, 869, Windows 1250, 1251, 1252, 1253, 1254, 1255, 1257 Unicode UTF8 · UTF16BE · UTF16LE			
Graphics		Resident graphic file types are BMP and PCX, other graphic formats are downloadable from the software			
Interfaces		<ul style="list-style-type: none">• USB 2.0 (B-Type)• USB 2.0 (B-Type)• Serial port: RS-232 (DB-9)• IEEE 802.3 10/100 Base-Tx Ethernet port (RJ-45)• USB Host (A-Type)• Color TFT LCD with navigation button• 1 Power on/standby button with green color LED backlight• 1 Calibration button at rear panel• 1 Control key : FEED / PAUSE / CANCEL with dual color LED backlight: Ready (Green); Error (Red)			
Control Panel		<ul style="list-style-type: none">• USB 2.0 (B-Type)• Serial port: RS-232 (DB-9)• IEEE 802.3 10/100 Base-Tx Ethernet port (RJ-45)• USB Host (A-Type)• Color TFT LCD with navigation button• 1 Power on/standby button with green color LED backlight• 1 Calibration button at rear panel• 1 Control key : FEED / PAUSE / CANCEL with dual color LED backlight: Ready (Green); Error (Red)			
RTC		Standard			
Power		Auto Switching 100-240V AC, 50-60Hz			
Environment	Operation temperature	41°F to 104°F (5°C to 40°C)			
	Storage temperature	-4°F to 140°F (-20°C to 60°C)			
Humidity	Operation	20-85%, non-condensing			
	Storage	10-90%, non-condensing			
Agency Approvals		CE (EMC) · FCC Class B · CB · UL · cUL · CCC			
Dimension	Length	15.86" (403 mm)			
	Height	10.79" (274 mm)			
	Width	10.24" (260 mm)			
Weight		23.81lbs (10.8 Kg), excluding consumables			
Options		Cutter (Dealer Install) Parallel port adaptor module (Centronic female 36-pin)(Dealer Install) Bluetooth (Dealer Installer) Wireless LAN (IEEE 802.11 b/g/n) (Dealer Install) External label rewinder Label Dispenser (Dealer Install)			
* Specifications are subject to change without notice. All company and/or product names are trademarks and/or registered trademarks of their respective owners.					
** Minimum print height and maximum print speed specification compliance can be dependent on non-standard material variables such as label type, thickness, spacing, liner construction, etc. GoDEX is pleased to test non-standard materials for minimum print height, and maximum print speed capability.					
***Due to ZX400 Series WiFi module message communication through LAN port, please make sure WiFi module has been removed when you want to use LAN port.					

APPENDIX- INTERFACE

- Parallel port

Handshaking : DSTB is sent to the printer, BUSY to the host computer

Interface cable : Parallel cable compatible with IBM computers

Pinout : See below

Pin No.	Function	Transmitter
1	/Strobe	Computer / printer
2-9	Data 0-7	Computer
10	/Acknowledge	Printer
11	Busy	Printer
12	/Paper empty	Printer
13	/Select	Printer
14	/Auto-Linefeed	Computer / printer
15	N/C	
16	Signal Gnd	
17	Chassis Gnd	
18	+5V, max 500mA	
19-30	Signal Gnd	Computer
31	/Initialize	Computer / printer
32	/Error	Printer
33	Signal Ground	
34-35	N/C	
36	/Select-in	Computer / printer

- Serial Port

Default settings : Baud rate 9600, no parity, 8 data bits, 1 stop bit, XON/XOFF protocol and RTS/CTS

RS232 Housing(9-pin to 9-pin)			
DB9 Socket		DB9 Plug	
-	1	+5V, max 500mA	
RXD	2	TXD	
TXD	3	RXD	
DTR	4	N/C	
GND	5	GND	
DSR	6	RTS	
RTS	7	CTS	
CTS	8	RTS	
RI	9	N/C	
Computer		Printer	

- USB Port

Computer Connector : Type A

Pin NO.	1	2	3	4
Function	VBUS	D-	D+	GND

Connector Type : Type B

Pin NO.	1	2	3	4
Function	VBUS	D-	D+	GND

- Ethernet (RJ-45)

PIN NO.	FUNCTION
1	T+
2	T-
3	R+
4	N/C
5	N/C
6	R-
7	N/C
8	N/C

Notice

* The total current to the serial port may not exceed 500mA.

APPENDIX

WiFi Printer Server Module Installation

1.1 Check the Wireless Access Point Setting Value

Connect ZX420i Wireless Module to Wireless Access Point,
and then connect the Module to the Mobile phones or computers through
network.

About the parameters of wireless access point, please refer to the figure below(Example:D-Link AP)

The screenshot displays the 'NETWORK SETTINGS' page for the ZX420i device. It features three main sections: 'WIRELESS NETWORK SETTINGS', 'WIRELESS SECURITY MODE', and 'PRE-SHARED KEY'. Red boxes and arrows highlight specific configuration fields: 'Wireless Network Name' (labeled 'SSID'), 'WPA Mode' (labeled 'Security'), and 'Pre-Shared Key' (labeled 'PRE-SHARED KEY').

WIRELESS NETWORK SETTINGS

changes made on this section may also need to be duplicated on your Wireless Client.

Save Settings Don't Save Settings

Enable Wireless : ☒ Always ☐ Add New

Wireless Network Name : ZX420iAP (Also called the SSID) ← SSID

802.11 Band : ☒ 2.4GHz ☐ 5GHz

802.11 Mode : Mixed 802.11n, 802.11g and 802.11b

Enable Auto Channel Scan : ☒

Wireless Channel : 2.437 GHz - CH 6

Transmission Rate : Best (automatic) (Mbit/s)

Channel Width : 20 MHz

Visibility Status : ☒ Visible ☐ Invisible

WIRELESS SECURITY MODE

To protect your privacy you can configure wireless security features. This device supports three wireless security modes, including WEP, WPA-Personal, and WPA-Enterprise. WEP is the original wireless encryption standard. WPA provides a higher level of security. WPA-Personal does not require an authentication server. The WPA-Enterprise option requires an external RADIUS server.

Security Mode : WPA-Personal

WPA

Use WPA or WPA2 mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use WPA2 Only mode. This mode uses AES(CMP) cipher and legacy stations are not allowed access with WPA security. For maximum compatibility, use WPA Only. This mode uses TKIP cipher. Some gaming and legacy devices work only in this mode.

To achieve better wireless performance use WPA2 Only security mode (or in other words AES cipher).

WPA Mode : WPA2 only ← Security

Cipher Type : AES

Group Key Update Interval : (seconds)

PRE-SHARED KEY

Enter an 8- to 63-character alphanumeric pass-phrase. For good security it should be of ample length and should not be a commonly known phrase.


Pre-Shared Key : ← PRE-SHARED KEY

ZX420i Series USER MANUAL APPENDIX


WiFi Printer Server Module Installation

1.2 Set up ZX420i Wireless Network through Godex WiFi tool

- Step 1. Connect ZX420i and computer by USB cable
- Step 2. Turn on ZX420i
- Step 3. Start Golabel
- Step 4. "Generic" → "Printer Setup" → Select printer model to ZX420i (see the screenshot below)

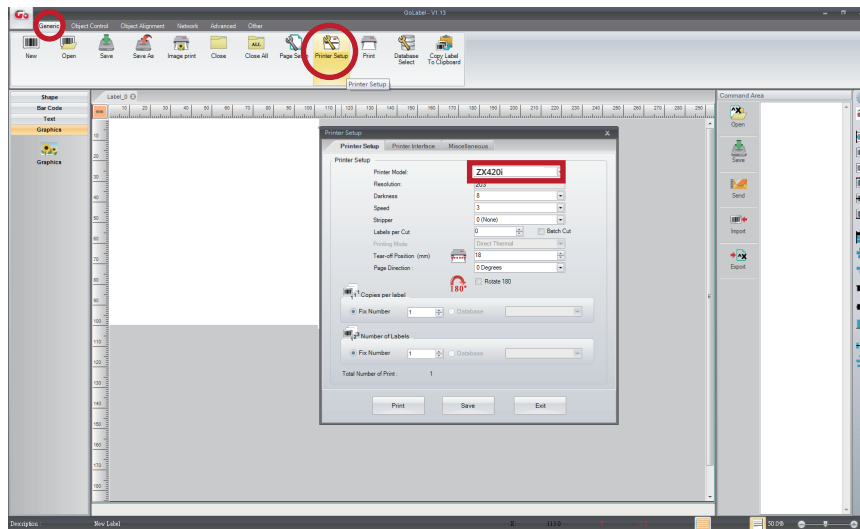

- Step 5. Click "WiFi Setting" icon (see the screenshot below)

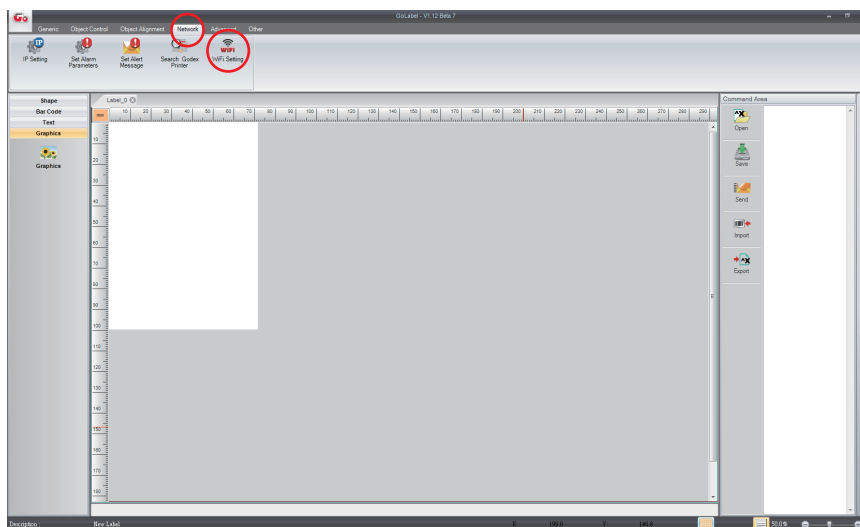


APPENDIX

WiFi Printer Server Module Installation

Step 6. Input parameters of wireless access point (see the screenshot below)

Step 7. Click "Set Data" icon, and the printer will reboot

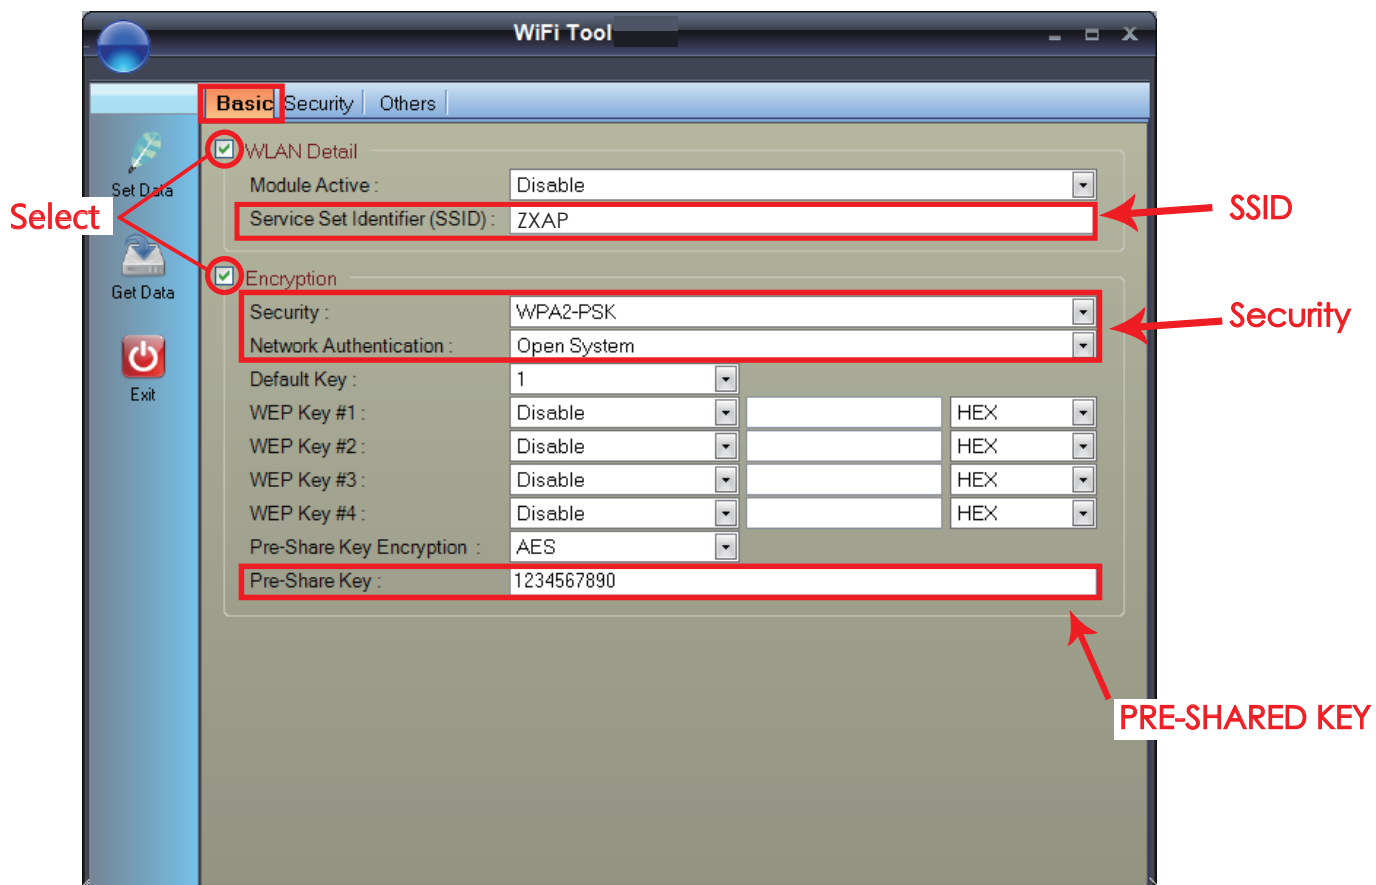

PS : If printer doesn't reboot after a few seconds and 3 beeps are not heard, please repeat the steps from chapter 1.2)

After successful connection, the WiFi icon will change from gray to purple.




ZX420i SERIES
USER MANUAL

APPENDIX


WiFi Printer Server Module Installation

- 1.3 Activate DHCP function for ZX420i
1. First of all, configure DHCP function through USB

Steps : Click "Generic" → Click "Printer Setup" → Select "USB port/GoDEX ZX420i" → Click "Save"

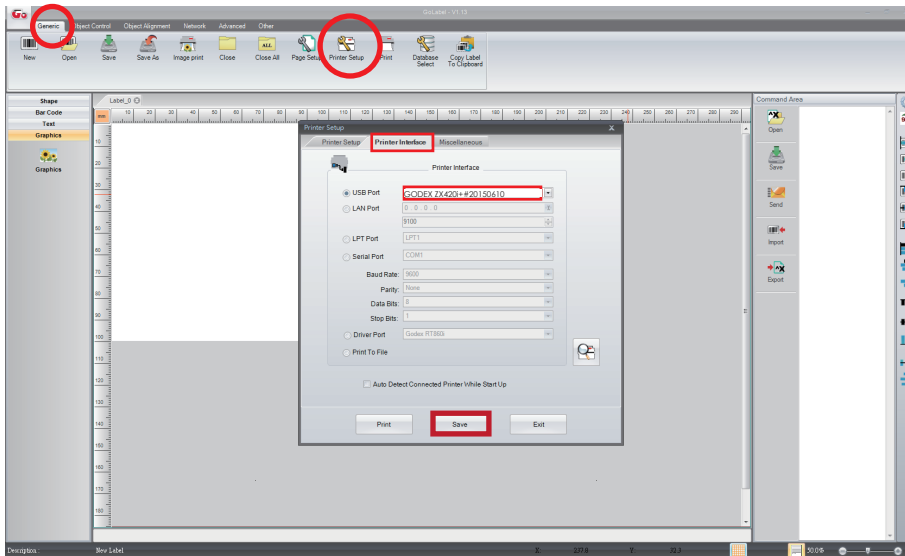


2. Obtain the printer IP address through WiFi Setting
(Please refer to the screenshot below)

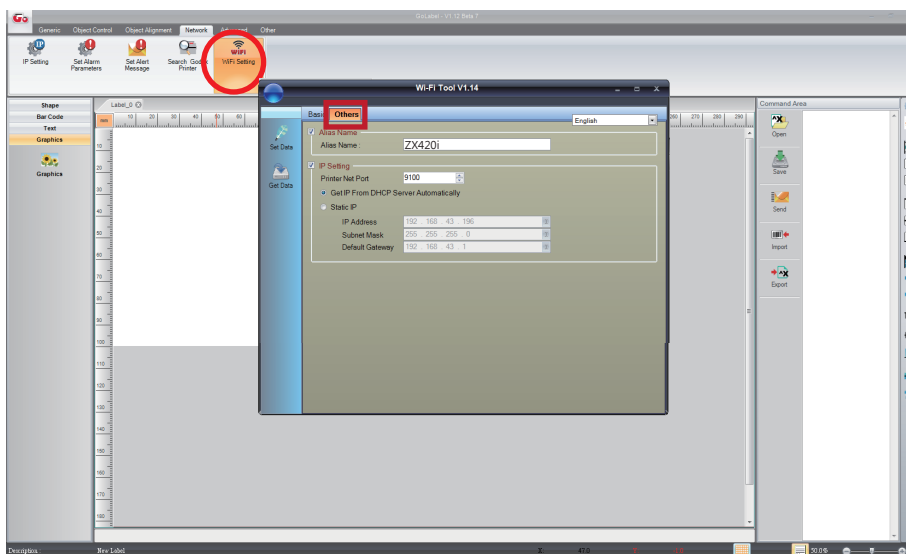

APPENDIX

WiFi Printer Server Module Installation

3. Fill the IP address into the label printer interface.

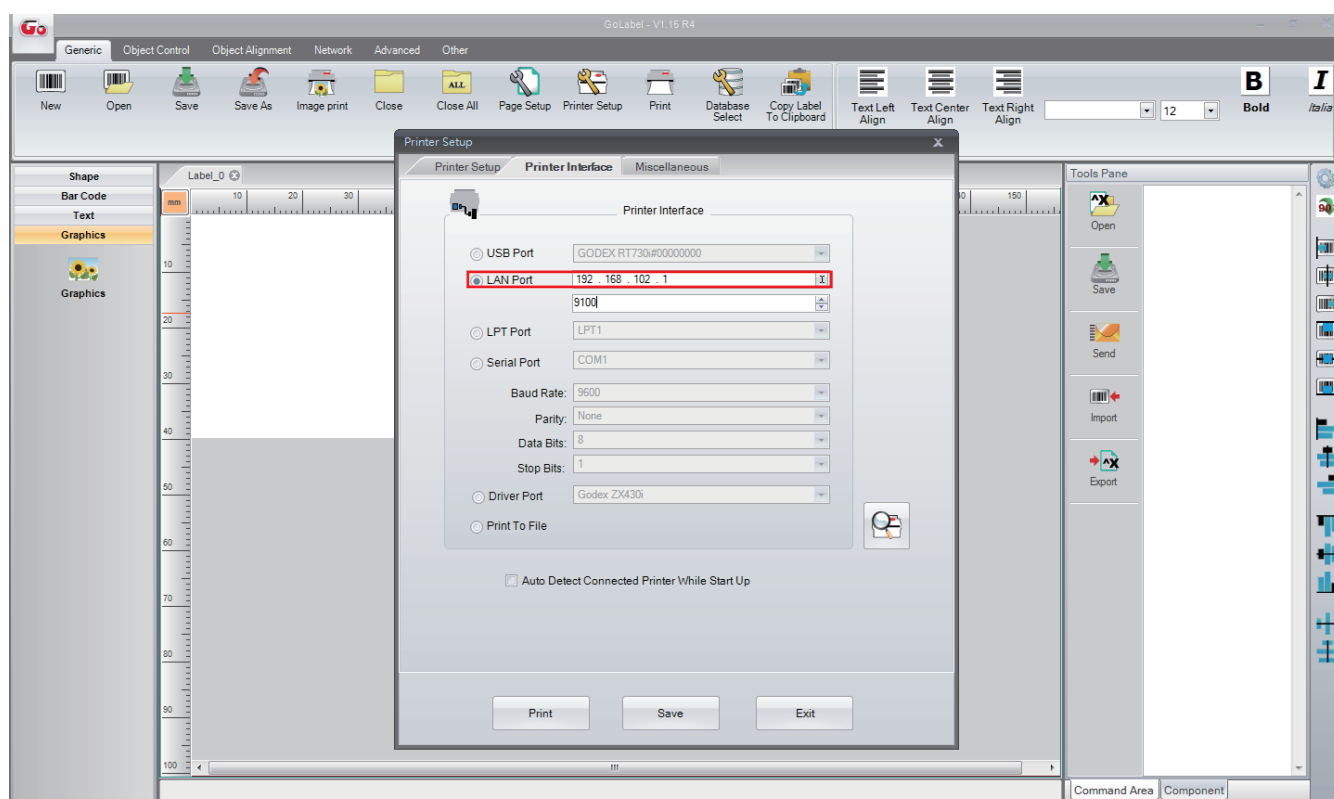

APPENDIX


Wi-Fi Printer Sever Module Installation(Quick Setting)




* Quick setting only supports GoLabel 1.15K and Arm 7 (FW1.100)
Or Arm 9 (FW2.00A) or higher version

Set up wireless network through GoDEX Wi-Fi tool

1. Turn on the printer, connect printer and computer by USB cable.
2. Start GoLabel.
3. "Generic" → "Printer Setup".

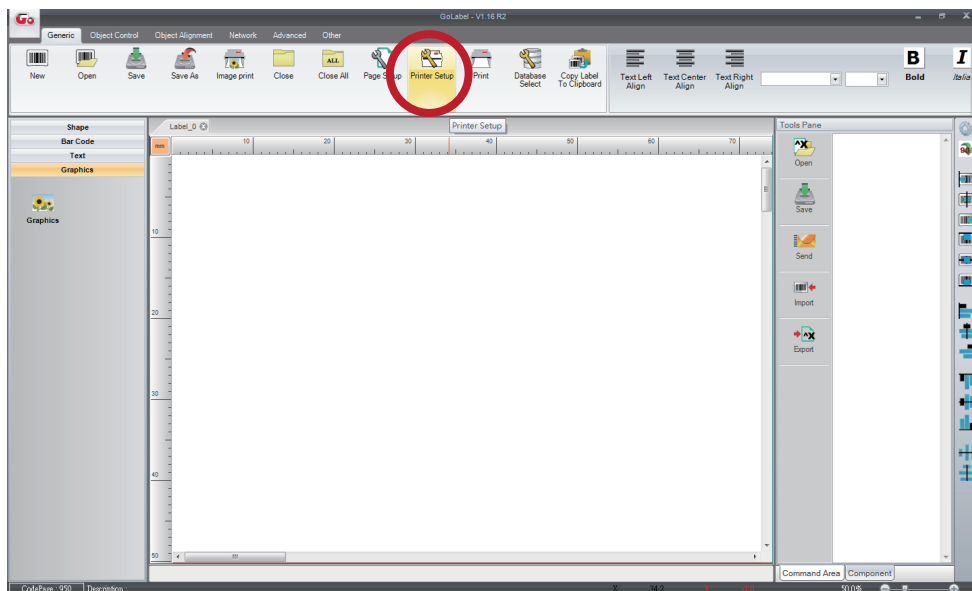

4. Select printer model(Wi-Fi supported models).

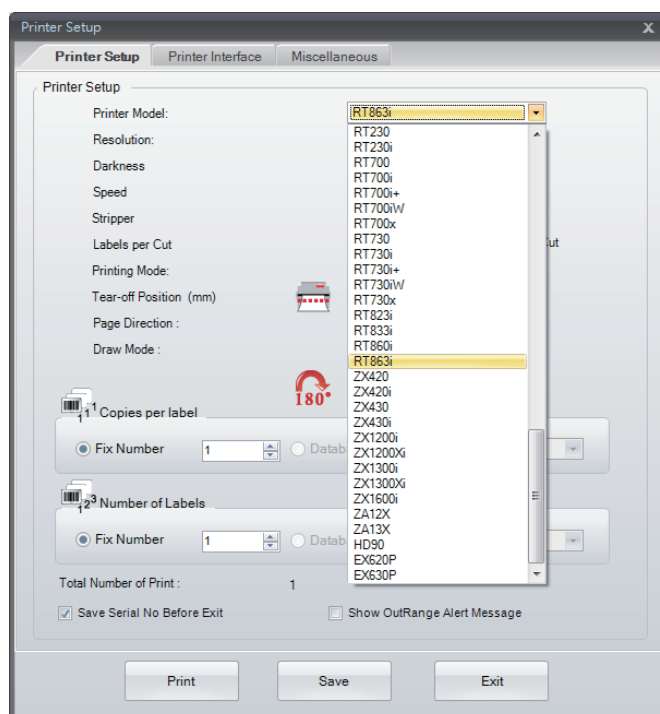


APPENDIX


Wi-Fi Printer Sever Module Installation(Quick Setting)



5. Click "WiFi Setting" icon.

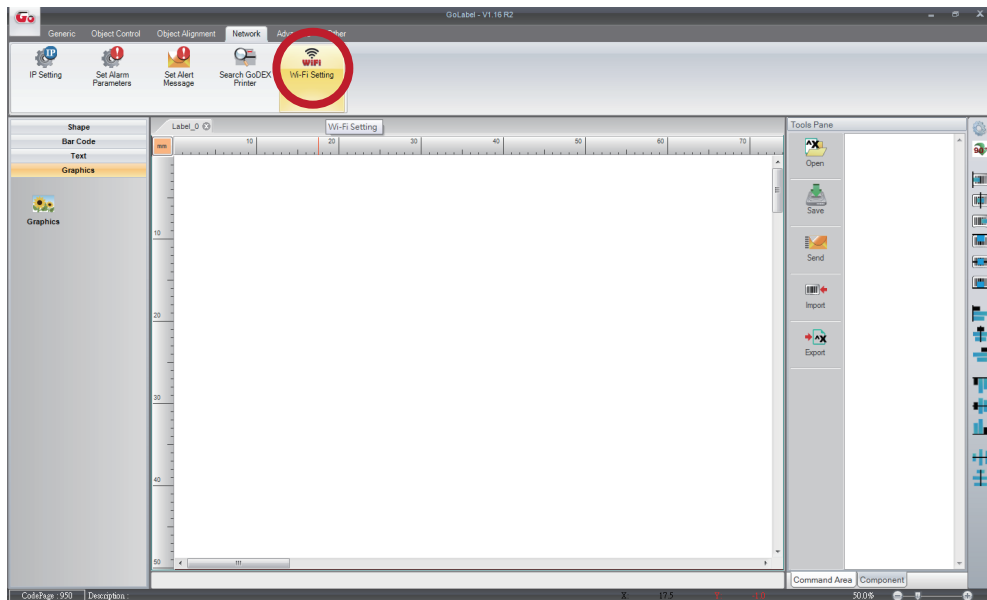

6. Click "Quick Setting" icon.

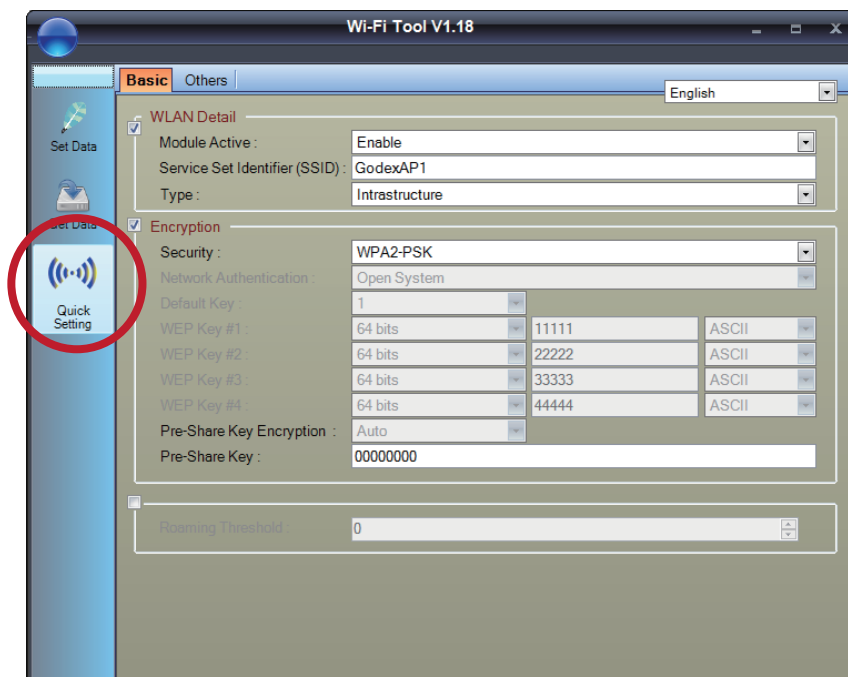

APPENDIX

Wi-Fi Printer Sever Module Installation(Quick Setting)



7. Click the Search button.

[illegible][illegible]

APPENDIX


Wi-Fi Printer Sever Module Installation(Quick Setting)



8. Select server and click **next** button.

<Step.1> Search Wi-Fi

No.	SSID	Security	MAC Address	RSSI
00	MXAP	None	D4:8C:B5:BE:AD:05	-44
01	WiFiAP	WPA2-PSK	D6:8C:B5:BE:AD:05	-44
02	WLAN51111	WEP	D2:8C:B5:BE:AD:05	-44
03	WIFIPRINTER1	None	DE:8C:B5:BE:AD:05	-44
04	GDX-BYOD	None	24:DE:C6:97:57:B0	-54
05	GDX-Guest	None	24:DE:C6:97:57:B2	-54
06	GDX-test	WPA2-PSK	24:DE:C6:97:57:B3	-56
07	GDX-BYOD	None	24:DE:C6:97:57:80	-62
08	GDX-Guest	None	24:DE:C6:97:57:82	-62
09	GDX-test	WPA2-PSK	24:DE:C6:97:57:83	-62
10	HUAWEI-B525	WPA2-PSK	10:B1:F8:14:A2:F4	-70
11	GodexAP1	WPA-AUTO	00:50:7F:4A:24:61	-72
12	WLAN511010	None	00:50:7F:4A:24:60	-74
13	ABC123	None	00:50:7F:4A:24:63	-74
14	MXAPWPA2PER	None	00:50:7F:4A:24:62	-76
15	GDX-BYOD	None	24:DE:C6:97:57:60	-78
16	GDX-Guest	None	24:DE:C6:97:57:62	-78

 **Next >** **Cancel**


9. Enter the **password** set on the server side and click the **"Setting"** button.

<Step.2> WiFi Setting

No.

SSID Name

Security

Password 


Setting **< Back** **Cancel**

APPENDIX


Wi-Fi Printer Sever Module Installation(Quick Setting)



10. After the setting succeeded, a prompt will pop up and the printer will restart.

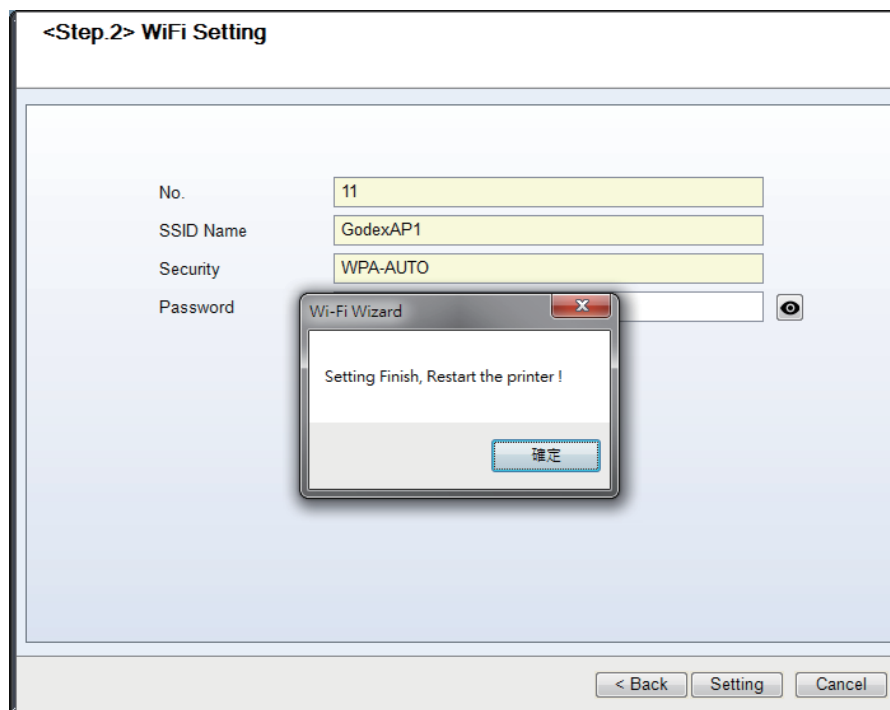

11. Select the "Other" tab and click the "Get Data" icon after selecting "IP Settings".

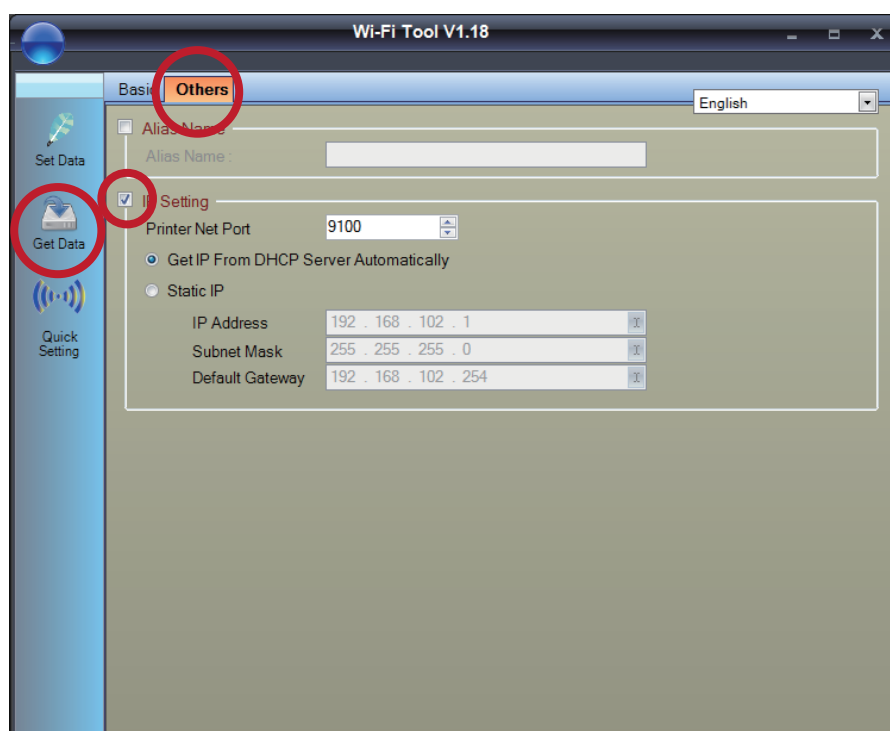


APPENDIX


Wi-Fi Printer Sever Module Installation(Quick Setting)



12. After remembering the IP address, open the "Printer Settings" window.


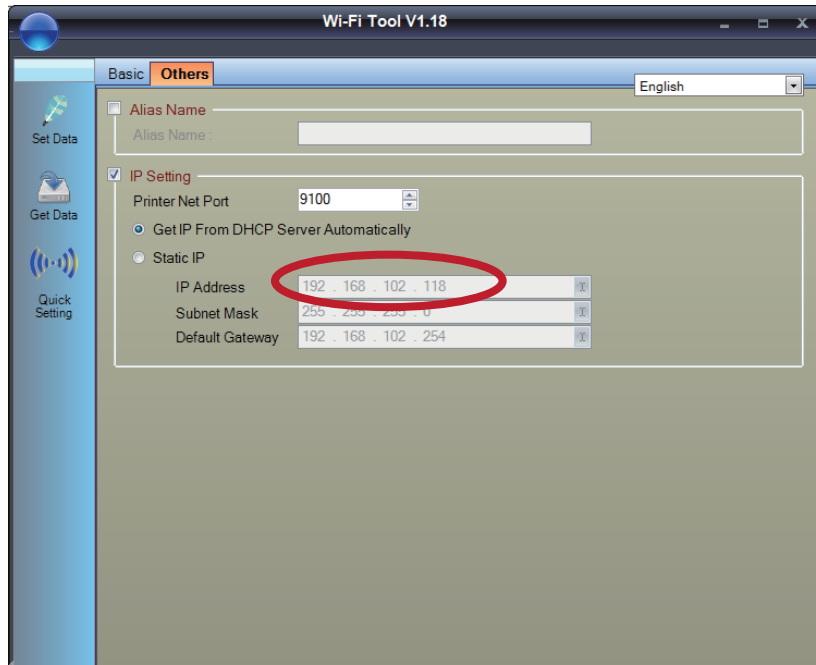


13. Select the "Printer Interface" tab, fill in the IP address and click "Save" to complete the setting.

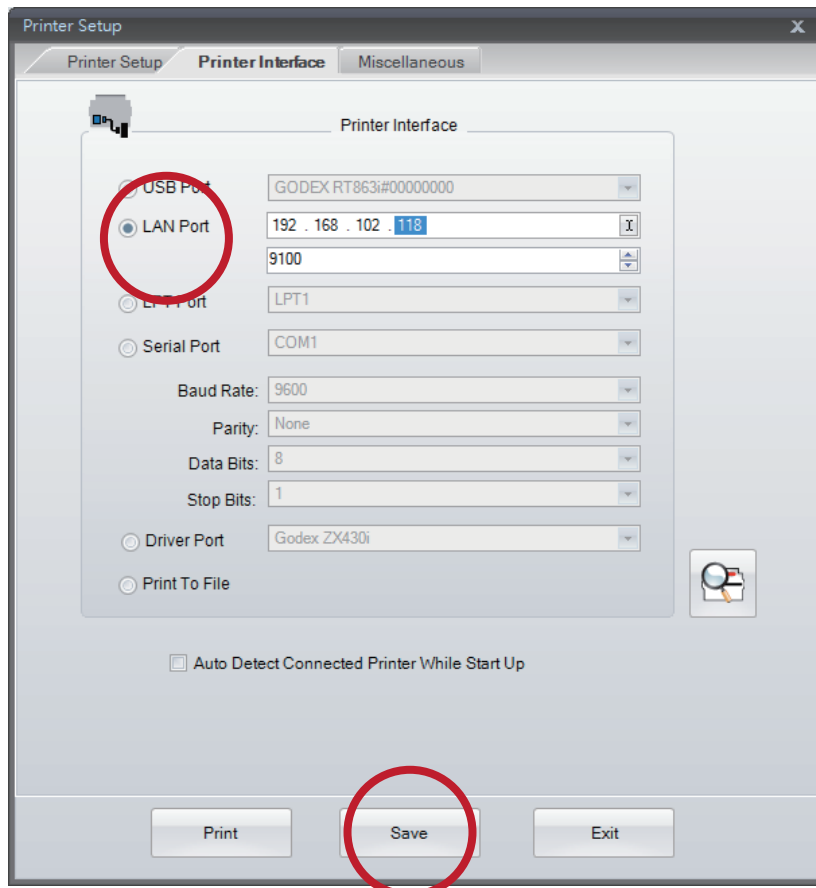

Work with Logitech K810 Keyboard


After install BT Module,
the icon will be appear on LCD display.

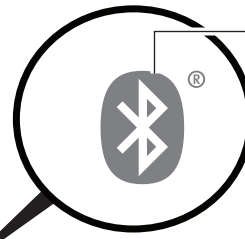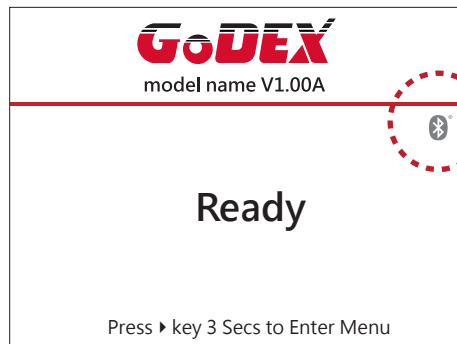

instruction icon

Connect printer and wireless keyboard

Turn on the switch and push the Connect Button.

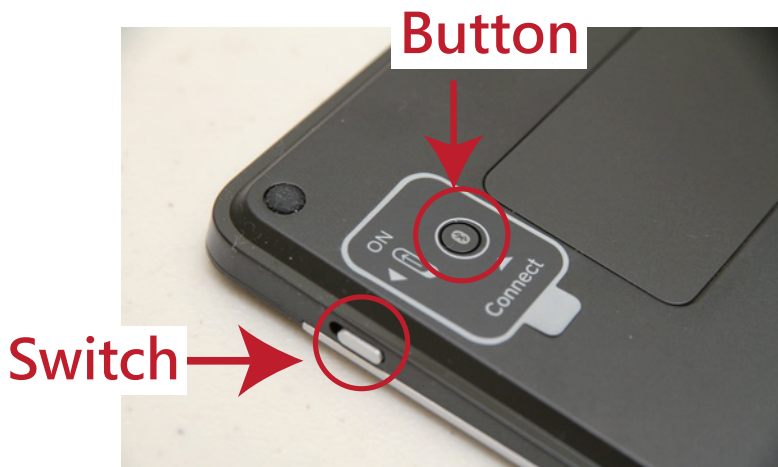


The indicators are flashing and can be detected by wireless.




Notice

- * Different operation with different wireless keyboard. Please refer to wireless keyboard user manual.
- ** There have pin code default value is 9200 of K810 if user change SSP setting from enable to disable the printer will be asked to key in pin code.


Enter Main page

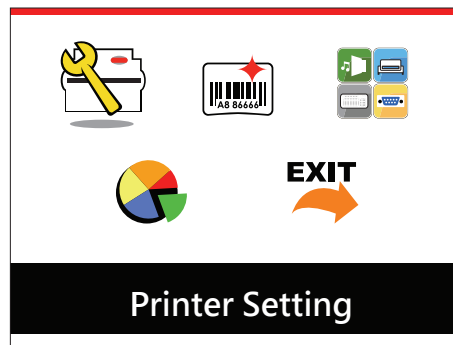


Select "Device"

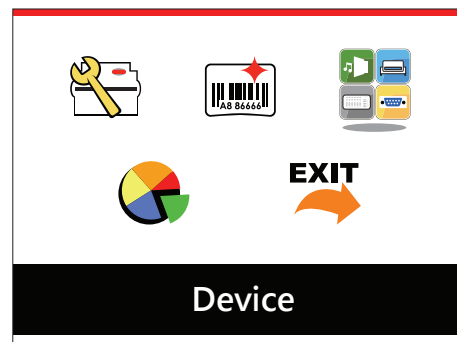


Enter "BT Setting"

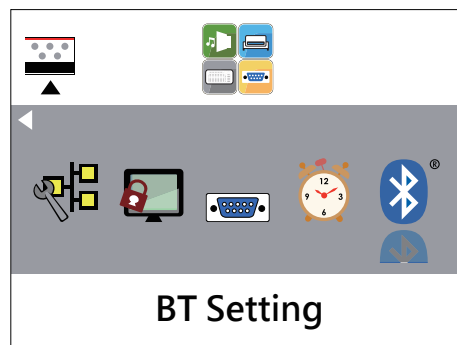


Enter "Search Devices"

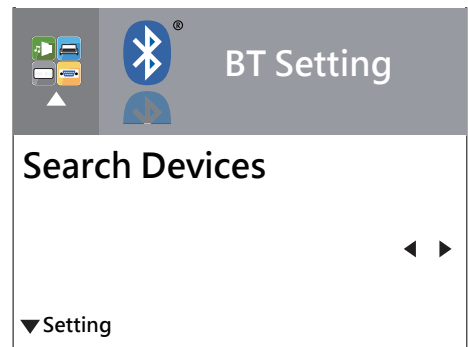


Press "▼" to scan
Bluetooth devices

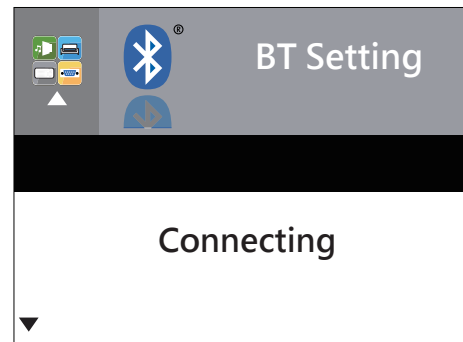

Available devices found

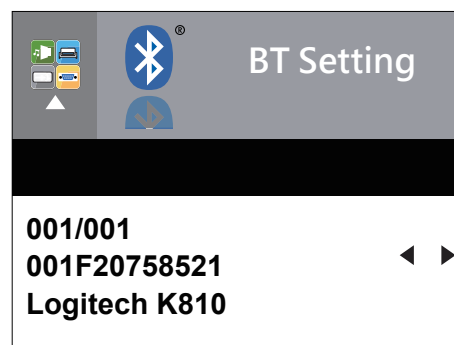

Press FEED to save the devices
and return to previous

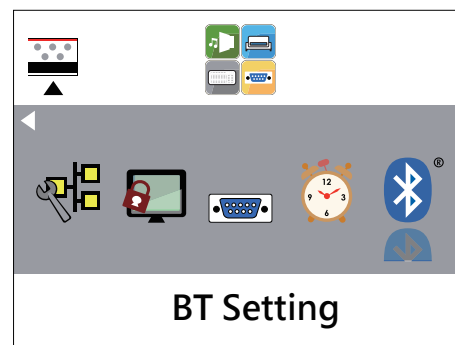



Printer is connecting to K810 keyboard



Wait a second, keyboard shows one of indicator is flashing then it will connect successfully





Press ▲ button back to SETTING PAGES

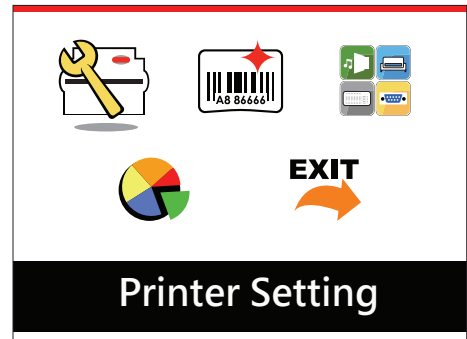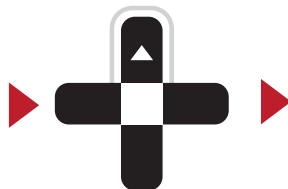

Select



or

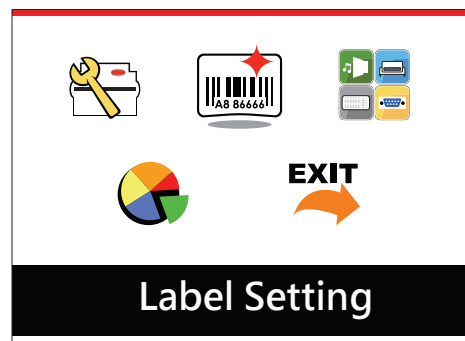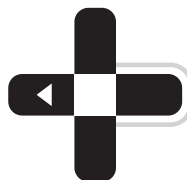


Notice



* The Wireless icon on LCD display will be turning from gray to blue when devices connect successfully.



Enter

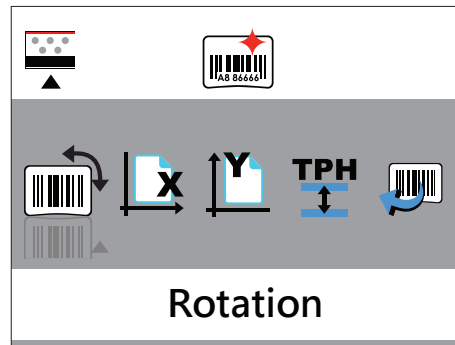


Select

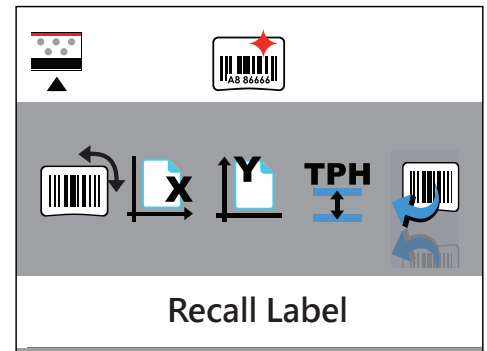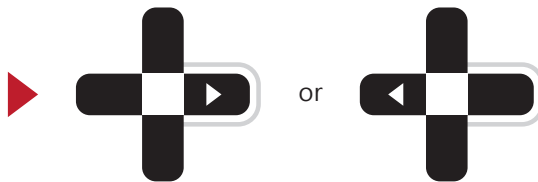

Enter Recall Label can use keyboard for standalone function

Enter

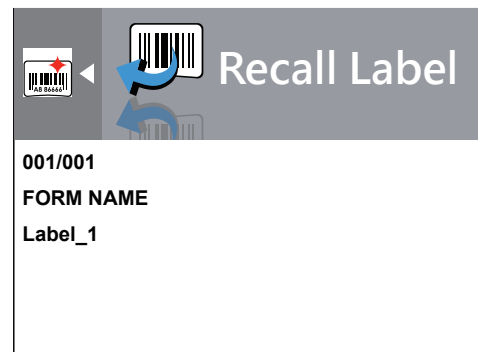


Notice


* Back to MAIN PAGE screen and press FN+F1 also can use standalone function.

Functions

Descriptions

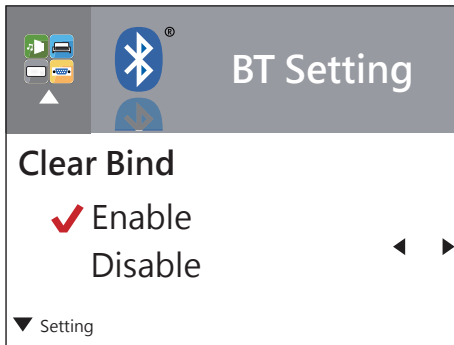

The default of Clear Bind is Disable. When enable this function, it will clear up the saved connection of wireless device then come back to Disable.

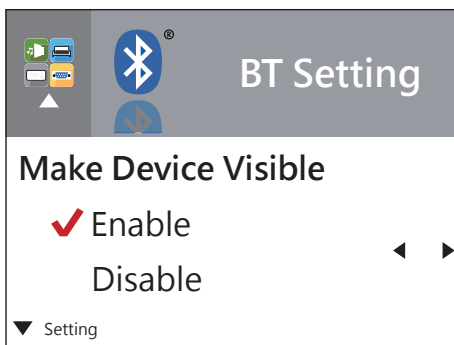


Enable: Printer can be detected by wireless device.

Disable: Printer cannot be detected by wireless device.


* The default of Make Device Visible is Disable.

Printer can be detected during 120 sec.

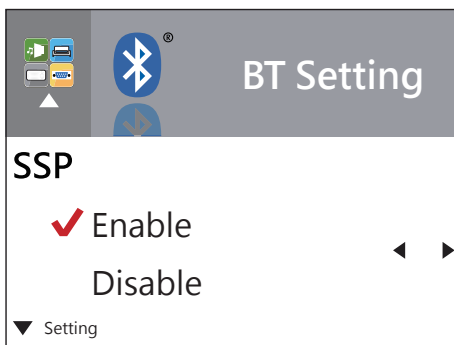

Secure Simple Pairing. The default is Enable.

When connect successful, the setting of Make Device Visible, SSP and PIN Code cannot be changed. They only can be changed after Clear Bind.

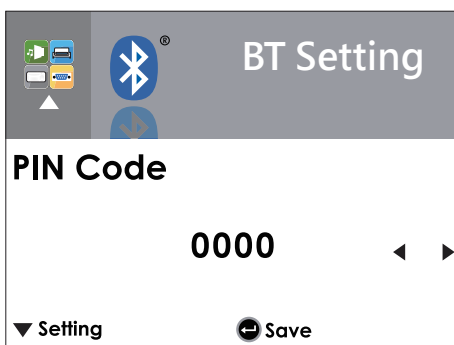

Password for connect printer and wireless device.

When connect successful, the PIN Code only can be changed after Clear Bind.

The default of PIN Code is "0000".



Search Device only available when BT2.4G function was enabled.

Press FEED to search wireless devices.

LCD will display all of available devices.

1. Only supports SPP & HID Profile.

2. Alphanumeric only

3. Maximum 16- device can be displayed

* When connect successful, needs to disconnect before perform this function.