





Quickstartguide for iDTRONIC UHF RFID Readers

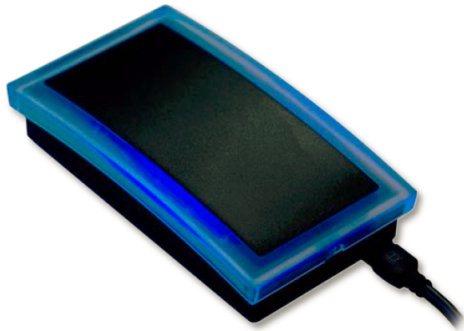


Installation UHF-Version

Please refer to this installation guide to start both software and reader successfully.

1. Download the appropriate software from: <http://idtronic-rfid.com/de/support/sdks/>
2. Unpack the zip folder to a folder of your choice.
3. Open the folder “**Card Reader UHF SDK_NOV14**”, and then open the folder “**General SDK**”, then open the folder “**Demo Software**”.
4. Connect the reader to USB-Port of your computer.
5. Check in the Windows Device Manager if the driver for the USB-Port is installed.
If it is not installed, then click on this driverless port and select update driver-software, please use the driver from the folder “**USB-Drivers**”.

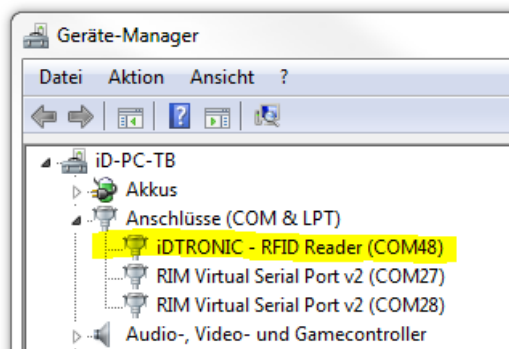

6. Start the file “**iDTRONIC - Reader Demo Tool Setup 1.61.13b.exe**” and follow the installation procedure.
7. After successful installation, start the software at menu item “**iDTRONIC - Reader Demo Tool**” in programs.
8. Open the dropdown menu “**Reader**” and select add, and then select your Reader.

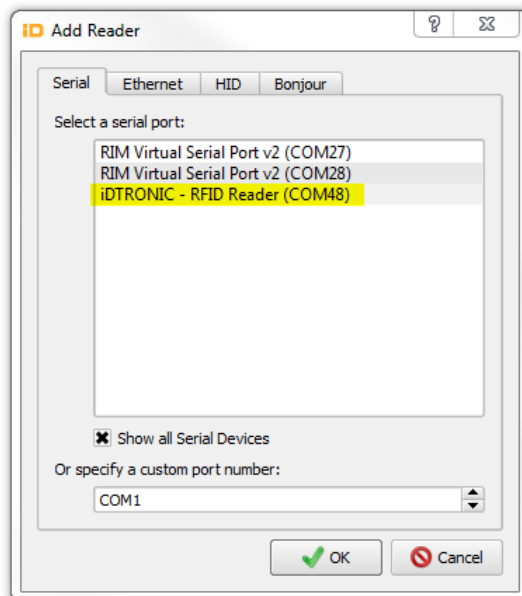

9. Now you can proceed to read and write tags.

If you want to use the KEMU function, then open the folder “**KeyboardEmulation**” and follow the installation structures in the file “**KeyboardEmulation.txt**”, after installation the KEMU function is ready.